



Philips
Clock radio for iPod/
iPhone



AJ3270D

Wake up to your iPod/iPhone music

Take pleasure in starting your day right - with your favourite music from your iPod/iPhone. This compact clock plays and charges the latest iPod/iPhone models, even with protective cases on. If you prefer, wake up to the radio or a buzzer.

Enjoy your music from multiple sources

- Play and charge your iPod/iPhone simultaneously
- FM digital tuning with presets
- 2 W RMS total output power

Easy to use

- Dock any iPod/iPhone, even in its case
- Auto clock synchronisation with iPod/iPhone when docked
- Time and alarm backup to wake up on time even with power cut
- Sleep timer helps you to drop off to your favourite music
- Adjustable display brightness for comfortable viewing

Start the day your way

- Wake up to your iPod/ iPhone music or radio tunes
- Gentle wake for a pleasant waking experience
- Dual alarm to wake you and your partner at different times

PHILIPS
sense and simplicity

Highlights

FM digital tuning with presets




Digital FM radio offers you additional music options to your music collection on your Philips audio system. Simply tune into the station that you want to preset, press and hold the preset button to memorise the frequency. With preset radio stations that can be stored, you can quickly access your favourite radio station without having to manually tune the frequencies each time.

Dock iPod/iPhone in its case



Smartly designed spring-loaded docking port effortlessly accommodates any iPod or iPhone, without special adapters. What's more, it works even when most protective cases are on – just dock your iPod or iPhone as it is. Now you can truly have fuss-free enjoyment of your music.

Play and charge your iPod/iPhone

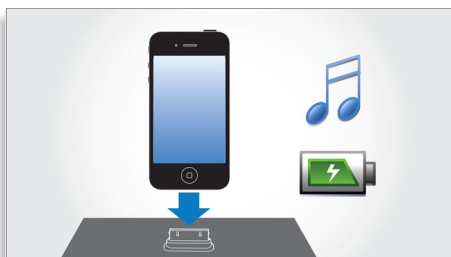

Enjoy your favourite MP3 music while charging your iPod/iPhone! The dock lets you connect

your portable device directly to the Docking entertainment system so you can listen to your favourite music in superb sound. It also charges your iPod/iPhone while it plays so you can enjoy your music and not have to worry about your portable player battery running out. The Docking entertainment system automatically charges your portable device while it is docked.

Sleep Timer



Sleep timer lets you decide how long you want to listen to music, or a radio station of your choice, before falling asleep. Simply set a time limit (up to 1 hour) and choose a CD or radio station to listen to while you drift off to sleep. The set will continue to play for the selected duration and then automatically switch to a power-efficient and silent stand-by mode. Sleep Timer lets you fall asleep to your favourite CD or radio DJ without counting sheep, or worrying about wasting electricity.


2 W RMS



This system has 2 W RMS total output power. RMS refers to Root Mean Square, which is a typical measurement of audio power, or rather, the electrical power transferred from an audio amplifier to a loudspeaker, which is measured in watts. The amount of electrical power delivered to the loudspeaker and its

sensitivity determines the sound power that is generated. The higher the wattage, the better the sound power emitted by the speaker.

Dual alarm

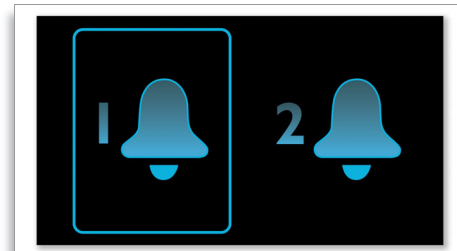

The Philips audio system comes with two alarm times. Set one alarm time to wake you up and the other time to wake up your partner.

Auto clock synchronisation



When connected and docked, this docking system will automatically synchronise the clock with your iPod/iPhone within a few seconds. With this convenient feature, you do not need to set the time manually.



Specifications

iPod compatibility

- Compatible with: iPod mini, iPod with colour display, iPod 5th Generation, iPod classic, iPod nano 1st Generation, iPod nano 2nd Generation, iPod nano 3rd Generation, iPod nano 4th Generation, iPod touch, iPod touch 2nd Generation, iPod nano 5th Generation, iPod nano 6th generation, iPod touch 4th generation, iPod nano

iPhone compatibility

- Compatible with: iPhone, iPhone 3G, iPhone 3GS, iPhone 4

Audio Playback

- Cradle playback mode: Charging iPod, Charging iPhone

Tuner/Reception/Transmission

- Tuner Bands: FM
- Auto digital tuning
- Station presets: 20
- Antenna: FM Antenna
- Frequency range: 87.5-108 MHz

Convenience

- Clock/Version: Digital
- Alarms: 24-hour alarm reset, Buzzer Alarm, Radio Alarm, Repeat alarm (snooze), Sleep timer, Dual

- alarm time, iPod Alarm
- Display Enhancements: Brightness Control
- Display Type: 5 digit display

Sound

- Output power (RMS): 2 W
- Volume Control: Volume Control up/down
- Sound System: Mono

Loudspeakers

- Built-in speakers: 1

Dimensions

- Packaging type: D-box
- Product dimensions (W x H x D): 130 x 73 x 146 mm
- Packaging width: 136 mm
- Packaging depth: 209 mm
- Packaging height: 87 mm
- Gross weight: 0.95 kg

Accessories

- Included accessories: AC-DC Adapter, Quick Use Guide, User Manual, World Wide Warranty leaflet

Power

- Mains power: 220-230 V
- Number of batteries: 1
- Backup battery: CR2032 (included)



Issue date 2012-03-26

Version: 5.0.6

12 NC: 8670 000 74083
EAN: 87 12581 59193 9

© 2012 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com