

Philips 1000 series
Electronic deadbolt

Fingerprint unlock

Keyless
One-time PIN code
Easy assembling

DDL210CP5KM0/37



Fingerprint access

Instant and accurate identification

Your fingerprint is your key! This lock can record up to 50 fingerprints and 20 PIN codes. You can also share one-time PIN codes easily with your family members and friends, with no Bluetooth or Wi-Fi required.

Dedicated design for perfection

- Easy installation with just a screwdriver
- Sleek design decorates your front door

User-friendly

- Ultra-long battery life ensures constant door security
- Voice guide assists with setting up your lock
- Provides instant and accurate identification
- Simply share access anytime, anywhere

Safety as standard

- Multiple alert functions guard your home
- Biometric identification makes unlocking fast and accurate

PHILIPS

Electronic deadbolt
Fingerprint unlock Keyless, One-time PIN code, Easy assembling

DDL210CP5KM0/37


Highlights

Easy installation



The door lock installs in minutes with just a screwdriver and is suitable for most standard door preps.

Multiple alert functions

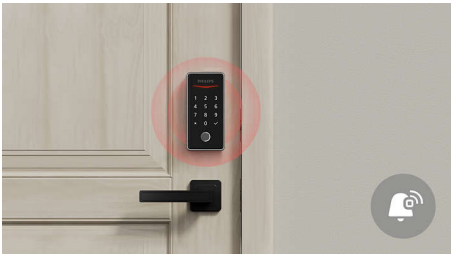

This electronic door lock is equipped with a lockout alarm, a low battery alert, away mode for vacations, privacy mode and other security features to ensure the safety of your home at all times. Safer and more secure, Philips electronic deadbolt brings a new smart experience.

Biometric identification



When you come home, you no longer need to look for the key on the door, just a gentle touch of your fingerprint is enough to unlock the door. Biometric fingerprint identification technology improves the accuracy of fingerprint recognition. Counterfeit

fingerprints are rejected, which enhances security.

Sleek design




Modern design fits your door. High quality touchscreen keypad, available in multiple finishes. This digital door lock improves doors of any style.

Ultra-long battery life



This electronic door lock consumes little power and lasts up to 1 year* with 4 AA alkaline batteries. When the batteries run low, a low battery alert will remind you to change your batteries, preventing a lockout.


Voice guide

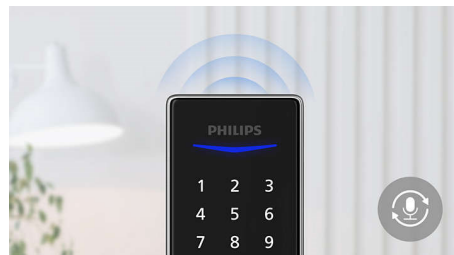

Voice guidance guides you through the configuration of the lock without the need for


an instruction manual. English, French, and Spanish voice guides are available.

Fingerprint access

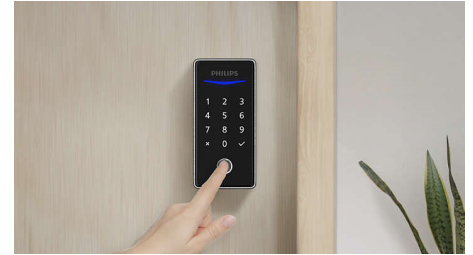

Your fingerprint is your key! This lock stores up to 20 PIN codes and 50 fingerprints. Unlocking your door with a PIN code or fingerprint is much easier and faster than using a key.

Simple sharing

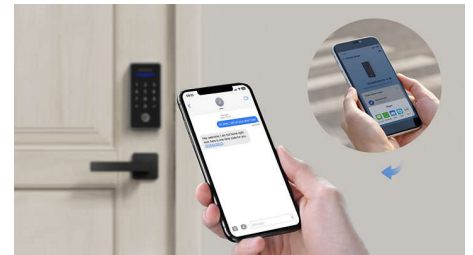

Works with the Philips Home Access app to generate a one-time PIN remotely without a Wi-Fi bridge or Bluetooth connection. You can easily share unlimited one-time PIN codes for your home with friends, family members, or anyone you want.

Specifications

Design & Appearance

- Color: Matte Black
- Material: Aluminum alloy
- Bolt type: Dead bolt
- Keyway: SC1
- Connectivity: N/A

Access Solution

- Fingerprint
- Password/PIN Code
- One-time PIN code
- Thumb turn

Lock Capacity

- Fingerprint: Up to 50
- User PIN Code: Up to 20
- One-time PIN Code: Unlimited
- Master PIN code: 1

Power Specification

- Power Supply: 4 AA batteries
- Battery Type: Alkaline Batteries
- Time of Use: 12 months*
- Charging interface: Micro USB
- Emergency Power Supply: Type-C interface

Easy Operation

- Voice Guide: Human voice guide
- Language: English, Spanish, French

Installation

- Door Thickness: 1-3/8 to 2 inch (35-50mm)
- Door Opening Direction: Left inward opening, Left outward opening, Right inward opening, Right outward opening
- Door Type: Antitheft door, Copper door, Wooden door
- Cross bore hole: 1-1/2 inch (38 mm), 2-1/8 inch (54 mm)
- Backset: 2-3/4 inch (70mm), 2-3/8 inch (60mm)

Operating Environment

- Temperature: From -35° to 66°
- Humidity: 0-95%

Key Features

- Safety: AES128, ANSI/BHMA Grade 2, Local storage
- Alarm: Jam alarm, Low battery alarm, Wrong entry limit alarm
- Remote control: Generate one-time PIN codes
- Modes: Auto mode, Away mode, Manual mode, Privacy mode



Issue date 2023-12-19

Version: 2.2.2

UPC: 8 50048 30626 4

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* *1 year: This refers to the average time determined by an internal test lab. It is based on the use of PIN code unlocking 8 times, 8 times auto locking, 4 times manual unlocking, 4 times manual locking per day. Actual time may vary due to different usage frequency.