



Philips 9000 series
Full auto smart door lock

System wake on touch

Push-pull intuitive use
Auto locking function
Indoor infrared sensor unlock

DDL192NLAGBB

Only one step to lock or unlock

Full auto, full smart life

Enjoy the decent unlocking with the newly upgraded built-in infrared sensor on the rear panel. One-touch to unlock, auto-lock upon door closed, plus APP unlocking via Bluetooth connection, making better life at your fingertips.

Upgraded smart chip enhances home security

- Verification portfolio provides double security
- Care more about safety of child and pet

Easy life doesn't stop there

- Door's open when the hand is detected
- Unlock and open the door at one go

Smart life "locked" with excellence

- Say goodbye to the key-only era
- Unlock swiftly at one go

PHILIPS

Full auto smart door lock

System wake on touch Push-pull intuitive use, Auto locking function, Indoor infrared sensor unlock

DDL192NLAGBB/97

Highlights

Multiple unlock methods



Unlocking methods like fingerprints, PIN codes, key tags, Bluetooth, mechanical keys, etc. are supported, which meet the need of different users, and applicable for the whole family.

Intuitive fingerprinting




The fingerprint sensor is integrated into the push-pull handle so that when you hold the handle, your finger will naturally fall on the sensor. After a successful fingerprint verification, you can directly push the handle to unlock the door in one step, which gives you a convenient door opening experience.

Indoor infrared sensor unlock



With a touch sensor and an infrared sensor on the indoor handle, once the hand touches the touch sensor and the infrared sensor detects the obstruction, the door can be easily unlocked.

Full auto mortise

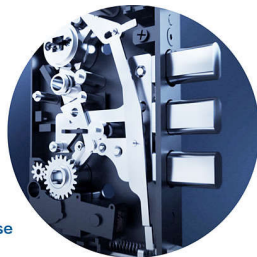

Fully automatic mortise employed by Philips 9200 series smart door lock allows you to push to unlock the door without extra action. And the bolts will spontaneously retract after the successful verification. In case the door is not locked properly, the system will give an alert to remind you of the door lock status.

Dual verification



In the dual verification mode, you could open the door with any two verification methods (fingerprint, PIN code, and key tag), which provides double protection for home security.

Functional buttons



[Open]: Double click the button within one second could unlock the door, and prevents accidentally unlocking by children and pets effectively. [Close]: Click once on the button could lock the door. Long press the button could enable inside deadlock. You could use the master PIN code or mechanical key to disable the inside deadlock mode. Simultaneously press the [Open] and [Close] buttons could enable or disable the inductive unlocking function.

Specifications

Design & Appearance

- Color: Obsidian black
- Handle: Push-pull handle

Lock Capacity

- Card/Key Tag: Up to 100
- Master PIN Code: 1
- User PIN Code: Up to 20
- One-time PIN Code: 1

Power Specification

- Power Supply: 4 AA batteries
- Battery Type: Alkaline Batteries
- Time of Use: 8 months*
- Maximum Batteries Capacity: 8 batteries

Easy Operation

- Voice Guide: Human voice guide

Installation

- Door Thickness: 38-60 mm, 60-90 mm, 90-120 mm, Other range*
- Door Opening Direction: Left inward opening, Left outward opening, Right inward opening, Right outward opening
- Door Type: Antitheft door, Copper door, Wooden door



Issue date 2024-08-19

Version: 4.4.1

EAN: 69 71318 50243 9

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* 8 months: The battery life may be less than 8 months, which is subject to the user's actual unlocking frequency.

* Other door thickness range: If the thickness of the door is out of the mentioned range, please contact our local dealers or consumer care center.