



Philips 9000 series  
Full auto smart door lock

#### System wake on touch

Push-pull intuitive use  
Auto locking function  
Indoor infrared sensor unlock

**DDL192NLAGCB**

# Only one step to lock or unlock

Full auto, full smart life

Enjoy the decent unlocking with the newly upgraded built-in infrared sensor on the rear panel. One-touch to unlock, auto-lock upon door closed, plus APP unlocking via Bluetooth connection, making better life at your fingertips.

#### Upgraded smart chip enhances home security

- Verification portfolio provides double security
- Technical lock-picking for more than 270 mins
- Care more about safety of child and pet

#### Easy life doesn't stop there

- Door's open when the hand is detected
- Unlock and open the door at one go

#### Smart life "locked" with excellence

- Say goodbye to the key-only era
- Unlock swiftly at one go

# PHILIPS

## Full auto smart door lock

System wake on touch Push-pull intuitive use, Auto locking function, Indoor infrared sensor unlock

# Highlights

### Multiple unlock methods



Multiple unlock methods



Unlocking methods like fingerprints, PIN codes, key tags, Bluetooth, mechanical keys, etc. are supported, which meet the need of different users, and applicable for the whole family.

### Intuitive fingerprinting



Intuitive fingerprinting



The fingerprint sensor is integrated into the push-pull handle so that when you hold the handle, your finger will naturally fall on the sensor. After a successful fingerprint verification, you can directly push the handle to unlock the door in one step, which gives you a convenient door opening experience.

### Indoor infrared sensor unlock



Indoor infrared sensor unlock




With a touch sensor and an infrared sensor on the indoor handle, once the hand touches the

touch sensor and the infrared sensor detects the obstruction, the door can be easily unlocked.

### Full auto mortise



Full auto mortise

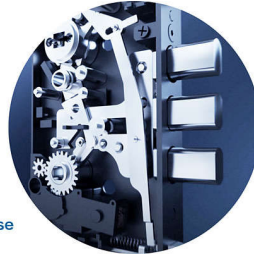


Fully automatic mortise employed by Philips 9200 series smart door lock allows you to push to unlock the door without extra action. And the bolts will spontaneously retract after the successful verification. In case the door is not locked properly, the system will give an alert to remind you of the door lock status.

### Dual verification



Dual verification

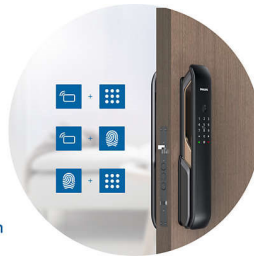

In the dual verification mode, you could open the door with any two verification methods (fingerprint, PIN code, and key tag), which provides double protection for home security.

### C-grade lock cylinder



C-grade lock cylinder



The lock cylinder is the key component that controls the opening of the lock. The C-grade lock cylinder employs multiple anti-theft technologies with a unique design of pin tumbler and vane structure. As the time for technical lock-picking resistance is more than 270 mins, enhanced security is assured.

### Functional buttons



Functional buttons



[Open]: Double click the button within one second could unlock the door, and prevents accidentally unlocking by children and pets effectively. [Close]: Click once on the button could lock the door. Long press the button could enable inside deadlock. You could use the master PIN code or mechanical key to disable the inside deadlock mode. Simultaneously press the [Open] and [Close] buttons could enable or disable the inductive unlocking function.

Full auto smart door lock  
System wake on touch Push-pull intuitive use, Auto locking function, Indoor infrared sensor unlock

DDL192NLAGCB/97

# Specifications

## Design & Appearance

- Color: Red copper
- Handle: Push-pull handle

## Lock Capacity

- Card/Key Tag: Up to 100
- Master PIN Code: 1
- User PIN Code: Up to 20
- One-time PIN Code: 1

## Power Specification

- Power Supply: 4 AA batteries
- Battery Type: Alkaline Batteries

- Time of Use: 8 months\*
- Maximum Batteries Capacity: 8 batteries

## Easy Operation

- Voice Guide: Human voice guide

## Installation

- Door Thickness: 38-60 mm, 60-90 mm, 90-120 mm, Other range\*
- Door Opening Direction: Left inward opening, Left outward opening, Right inward opening, Right outward opening
- Door Type: Antitheft door, Copper door, Wooden door



Issue date 2023-12-12

Version: 2.0.1

EAN: 69 71318 50244 6

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* 8 months: The battery life may be less than 8 months, which is subject to the user's actual unlocking frequency.

\* Other door thickness range: If the thickness of the door is out of the mentioned range, please contact our local dealers or consumer care center.