

# PHILIPS



Wet & Dry Electric  
shaver with SkinIQ

Shaver S9000  
Prestige

Skin-level closeness

NanoTech Dual Precision blades

Hydro SkinGlide coating

Ultraflex Suspension system



SP9885/35

## Skin-level close shave, yet incredibly gentle

Our closest shave, even on a 7-day beard

Experience ultimate closeness and comfort with Philips Shaver Series 9000 Prestige. Cuts up to 0.00 mm close to the skin with Lift & Cut shaving system, while SkinIQ Technology adapts to every contour of your face, even on a 7-day beard.

### SkinIQ technology

- 50% smoother\*\*\* gliding with Hydro SkinGlide Coating
- Ultimate speed and efficiency with the Top-Spin Digital Motor

### Premium experience

- Convenient charging with the Wireless Qi Pad
- Built to last: up to 5 years' warranty\*\*\*\*\*
- Customise your shave with Personal Comfort Settings
- Choose a convenient dry or refreshing wet shave
- Deep cleaning in just 1 minute with the Quick Cleaning Pod
- Click-on beard styler with 5 length settings
- Digital display with intuitive icons for convenience & ease
- Made with care for you and the planet
- Click-on nose trimmer for nose and ear hair
- 60 minutes of cordless shaving once fully charged

### Our closest electric shave

# Shaver S9000 Prestige

Wet & Dry Electric shaver with SkinIQ

SP9885/35


## Highlights

### Lift & Cut System



Our patented, unique Lift & Cut rotary shaving system lifts the hair gently out of its root before cutting it precisely and closely at skin level (up to 0.00 mm to the skin), without the blades even touching your skin. Precision at its best, for a clean shave until evening\*.

### NanoTech Dual Precision blades

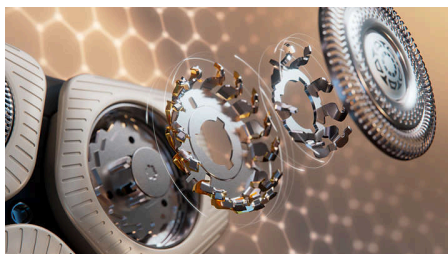

Philips rotary shavers are specifically designed to match your natural hair growth, capturing all of the hairs growing in any direction, thanks to 360 degree rotating blades that cut in all directions. With up to 165,000 cutting actions per minute, the NanoTech Dual Precision blades cut up to 25% more hair per stroke\*\*.

### Ultraflex Suspension system



The Ultraflex Suspension System with fully flexible heads completely adapt to every contour of your face, catching even difficult hairs in the neck. The result is an exceptionally smooth and comfortable shave.

### Hydro SkinGlide coating



Our best protective coating lies between the shaver heads and your skin. Made of up to 500,000 microtech beads with hydrophilic properties per square centimetre, which create 50%\*\*\* smoother gliding on skin for maximum skin comfort.

### Up to 5 years' warranty\*\*\*\*



Our shavers are engineered for excellence and come with a 5 year warranty so you can enjoy ultimate reliability and performance, shave after shave.

### Power Adapt sensor



The electric shaver has an intelligent facial-hair sensing technology that reads hair density 500 times per second. The Power Adapt Sensor auto-adapts the cutting power for an effortless and gentle shave.

### Top-spin digital motor



Maximum high-speed rotations for maximum efficiency. Our most advanced Top Spin Digital Motor ensures a precise shave for any facial contour or hair density.

### Personal Comfort settings



Adjust the speed of your shaver to low, medium or high speed with the Personal Comfort Settings. Personalise your shaving routine to your own skin and preferences.

### Cable-free Quick Clean Pod



Powerful cleaning pod thoroughly cleans and lubricates your shaver in just 1 minute, keeping it performing at its best for longer. The pod is 10 x more effective than cleaning with water\*\*\*\*. It is the world's smallest cleaning pod, so you can store it easily and use it anywhere.

# Shaver S9000 Prestige

Wet & Dry Electric shaver with SkinIQ

SP9885/35

## Highlights

### Wireless Qi charging pad



Plugging in cables in wet areas is a thing of the past. Simply lay your cordless electric shaver on the Qi charging pad for a wireless charge in 3 hours.

### Wet & Dry



Adapt your shaving routine to your needs. With Wet and Dry, you can go for a comfortable dry shave or a refreshing wet shave. You can shave with gel or foam, even under the shower.

### Beard styler attachment




Change your look with the click-on beard styler. Choose from 5 length settings to create anything from a perfect stubble to a neatly trimmed short beard. The beard stylers' rounded tips and combs are designed to prevent skin irritation.

### Sustainability



At Philips, we drive sustainability in all aspects of product creation. All our 9000 Prestige shavers are made with high-quality, long-lasting components and recyclable packaging, while our blades are made from 80% recycled steel and produced in a factory that uses 100% renewable energy.

### Nose trimmer attachment

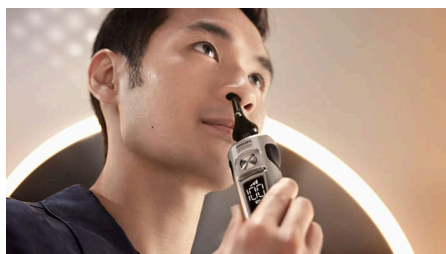

Removes nose and ear hair. Both the ProtecTrim technology and the specially designed angle of the trimmer ensure an easy and comfortable trim.

### Digital display



The intuitive display shows relevant information, enabling you to get the best performance out of your shaver: - 3 digit (%) battery indicator -

Cleaning Indicator - Battery Low Indicator - Replacement Head Indicator - Travel Lock Indicator

### 60 minutes of cordless shaving



This advanced charging system gives you two convenient options: 60 minutes of running time after a full charge, or a quick charge for one shave.

### Premium travel case



The S9000 Prestige Shaver comes neatly packed in a premium travel case to store all of your click-on accessories. Ideal for travel or keeping it safe when it's not in use.



# Shaver S9000 Prestige

Wet & Dry Electric shaver with SkinIQ

SP9885/35

## Specifications

### Accessories

**Pouch:** Premium pouch

**SmartClick:** Beard styler, Nose trimmer

**Quick Clean Pod:** Yes, 1 cartridge included

### Power

**Run time:** 60 minutes

**Battery type:** Li-Ion

**Charging:** Qi-charging pad, 3 hours full charge,  
18 min quick charge

**Low energy mode:** < 0.3 W

**Off mode (no attachments):** < 0.1 W

### Design

**Handle:** Ergonomic grip and handling

**Finishing:** Timeless elegance

**Colour:** Bright Chrome

### Service

**Replacement head:** Replace every 2 yrs with  
SH91

**2 + 3 years' warranty\*\*\*\*\***

### Shaving Performance

**Contour following:** Ultraflex Suspension system

**Shaving system:** NanoTech Dual Precision blades,  
Hydro SkinGlide Coating

**SkinIQ technology:** Top-spin digital motor, Power  
Adapt sensor, Personal Comfort settings

### Ease of use

**Display:** % Battery Level Indicator

**Wet & Dry:** Wet and dry use

**Cleaning:** Cable-free Quick Clean Pod, One-touch  
open, Fully washable

