



Philips 7000 series
Lever lock

Handle lever usage

Touch-sensor waking system
Auto locking function

DDL173LCFCB

Stable performance

With quick unlock by fingerprint

With the fingerprint sensor integrated into the handle, unlocking is conveniently in one grip. Its dual verification and hidden PIN code functions enhance home entry security. 4 smart unlocking methods and auto-locking makes life easier.

Extraordinary design brings outstanding experience

- With a single grip

Life is more than convenient

- Eliminating the hassle of repetitive locking
- Enjoy the reassurance whenever door is closed

Multiple protection in one for overall home safety

- Protect home security at all time
- Security is assured
- Effectively reminds security risks
- Protects your PIN code security in real-time
- Higher lock reliability and better home security
- Eliminates tempering risk while away

PHILIPS

Lever lock
Handle lever usage Touch-sensor waking system, Auto locking function

DDL173LCFCB/97

Highlights

Enjoy easy unlock



The fingerprint sensor is integrated in the handle lever so that when you hold the handle, your fingertip will naturally fall on the sensor. Upon successful authentication, you can press down the handle and unlock the door swiftly.

Multiple alerting function



Philips 7300 has been featured with an all-round alert function. It improves the anti-theft level of your home, safeguards your family in real-time, and reminds you of the door lock status.

Dual verification mode




With any two combinations of fingerprint, PIN code, and key tag verification under dual verification mode, you can unlock the door, which provides double protection for home security.

Outside forced locking



Before leaving home, you can touch the outside forced lock button to enable the function. In this mode, opening the door from inside will trigger an alert. This feature can effectively remind you of security risks and upgrade the level of home security.

Hidden PIN code

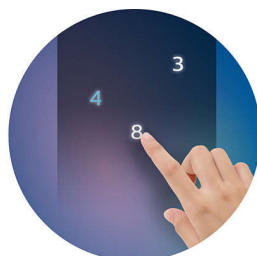

Feature with hidden PIN code technology, Philips smart lock allows you to enter any random number combinations to successfully get identified as long as there is a consecutive input of the real password. This feature can effectively prevent peeping and safeguard your real password.

C-grade lock cylinder



The lock cylinder is the key component that controls the opening of the lock. The C-grade lock cylinder employs multiple anti-theft technologies with a unique design of pin tumbler and vane structure, it can provide high deterrence against technical lock-picking.

Safe handle function



You can enable the safe handle function before leaving home. After the door is locked, the indoor handle will be locked up to ensure that nobody could open the door by pushing the indoor handle. This feature can effectively prevent unlocking from inside through the door viewer, thus eliminating security risks and improves anti-theft performance.

Auto mortise



Feature with automatic locking function, the Philips 7300 lever lock reduces the security risks associated with forgetting to close the door.

Auto locking



Philips 7300 utilizes automatic mortise. Without the need for any additional action, the deadbolt will spontaneously pop up after you close the door. If the door is not locked properly, the lock will sound an alert to remind you of the door lock status.

Specifications

Design & Appearance

- Color: Red copper
- Handle: Lever handle
- Surface Processing: Electroplating
- Fingerprint Sensor: Semiconductor

Access Solution

- Fingerprint
- Password/PIN Code
- Card/Key Tag
- Mechanical Key

Lock Capacity

- Fingerprint: Up to 100
- Card/Key Tag: Up to 100
- Master PIN Code: 1
- User PIN Code: Up to 10
- One-time PIN Code: 1

Power Specification

- Power Supply: 4 AA batteries
- Battery Type: Alkaline Batteries
- Time of Use: 10 months*
- Maximum Batteries Capacity: 8 batteries
- Emergency Power Supply: 5V power bank
- Working Voltage: 4.5-6V

Easy Operation

- Indicator: Door locks status prompt, Low battery prompt, Mute status prompt, Outside forced lock prompt, System locking prompt
- Voice Guide: Human voice guide

Smart Lock Functions

- Mortise: C grade lock cylinder
- Locking Function: Indoor deadlock, System locking
- Safety Function: Dual verification, Hidden PIN code, Outside forced lock function, Safe handle function
- Alarm Function: Anti-prying alarm, Outside forced lock alarm

Mode

- Operating Mode: Auto mode, Manual mode
- System Setup Mode: Dual verification mode, Normal mode

Installation

- Door Thickness: 38-60 mm, 60-90 mm, 90-120 mm, Other range*
- Door Opening Direction: Left inward opening, Left outward opening, Right inward opening, Right outward opening

Accessory Parts

- Accessorial Battery: 4 AA alkaline batteries
- Mechanical Key: 2
- Smart Key Tag: 2
- Installation Accessories
- Mortise
- Mounting Plate
- Drilling Template
- Certificate
- Cleaning Pad
- User Manual
- Warranty Card



Issue date 2024-10-28

Version: 4.4.1

EAN: 69 71318 50236 1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* 10 months: this is internal test data; actual duration may vary with usage frequency.

* Other range: The included installation kit is suitable for doors with the mentioned thickness. For doors outside this range, please contact authorized Philips smart lock consumer care centers or designated offline dealers.

* The digital keypad shown in the product photos may differ from the actual display. Please refer to the digital keypad's appearance during actual use.