

Philips  
Soundbar Home theater

DVD playback

Integrated subwoofer

HSB2351



## Bring your movie to life

with integrated subwoofer

Bring your movies to life with great surround sound. With 100w of sound power, a built-in DVD player, HDMI 1080p upscaling and integrated subwoofer, you can now enjoy your movies in high quality sound and picture, without the clutter!

### Connect and enjoy all your entertainment

- HDMI 1080p upscales to high definition for sharper pictures
- EasyLink to control all HDMI CEC devices via a single remote

### Great listening experience

- Dolby Virtual Speaker for realistic surround sound

### Connect and enjoy multiple sources

- Hi-Speed USB 2.0 Link plays video/music from USB flash drive
- Built-in FM tuner


### Designed to enhance your living space

- SoundBar design best fitting a 81 cm (32") flat TV or larger
- Integrated subwoofer for powerful bass
- Flexible placement on the wall or tabletop

**PHILIPS**  
sense and simplicity

# Highlights

## Dolby Virtual Speaker

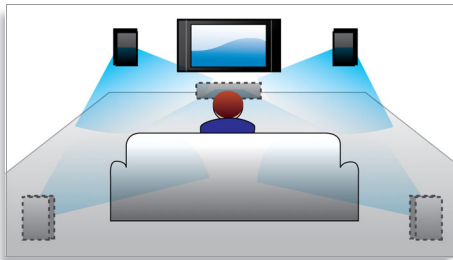

Dolby Virtual Speaker is a sophisticated audio virtualization technology that produces rich and immersive surround sound from a two-speaker system. Highly advanced spatial algorithms faithfully replicate the sonic characteristics that occur in an ideal 5.1-channel environment. DVD playback is enhanced by expanding the 2-channel environment. When combined with Dolby Pro Logic II processing, any high quality stereo source is transformed into true-to-life, multi-channel surround sound. No need to purchase extra speakers, wires or speaker stands to appreciate room-filling sound.

## EasyLink




EasyLink lets you control multiple devices like DVD players, Blu-ray players, TV's etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

## HDMI 1080p



HDMI 1080p upscaling delivers images that are crystal clear. Movies in standard definition can now be enjoyed in true high definition resolution - ensuring more details and more true-to-life pictures. Progressive Scan (represented by "p" in "1080p") eliminates the line structure prevalent on TV screens, again ensuring relentlessly sharp images. To top it off, HDMI makes a direct digital connection that can carry uncompressed digital HD video as well as digital multichannel audio, without conversions to analog - delivering perfect picture and sound quality, completely free from noise.

## Hi-Speed USB 2.0 Link

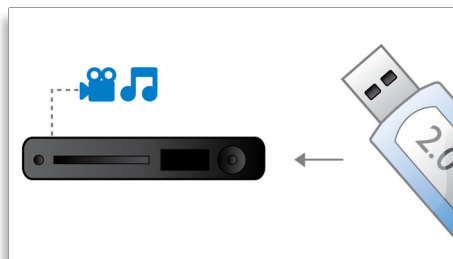

The Universal Serial Bus or USB is a protocol standard that is conveniently used to link PCs, peripherals and consumer electronic equipment. Hi-Speed USB devices have a data transfer rate of up to 480 Mbps - up from the 12 Mbps in original USB ones. With Hi-Speed USB 2.0 Link, all you have to do is plug in your USB device, select the movie, music or photo and play away.

# Specifications

## Picture/Display

- Picture enhancement: High Def (720p, 1080i, 1080p)

## Sound

- Output power (RMS): 100
- Sound System: Dolby Digital, Dolby Prologic II, DTS, Stereo
- Equalizer settings: Action, Classic, Concert, Drama, Gaming, Jazz, News, Party, Rock, Sports

## Video Playback

- Compression formats: DivX 3.11, DivX 4.x, DivX 5.x, DivX 6.0, DivX Ultra, MPEG1, MPEG2
- Playback Media: CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DVD-Video, Video CD/SVCD
- Video disc playback system: NTSC, PAL

## Audio Playback

- Compression format: MP3, WMA
- MP3 bit rates: 32-256 kbps and VBR
- Playback Media: CD-R/RW, USB flash drive, Audio CD

## Still Picture Playback

- Picture Compression Format: JPEG
- Picture Enhancement: Rotate, Slideshow with music playback, Zoom
- Playback Media: CD-R/RW, DVD+R/+RW, USB flash drive

## Tuner/Reception/Transmission

- Tuner Bands: FM

## Connectivity

- Front / Side connections: MP3 Line-in, USB
- Rear Connections: Component Video output, Easy-Fit Speaker Connectors, HDMI output, TV in (audio, cinch)

## Power

- Power supply: 100-240VAC, 50/60Hz

## Loudspeakers

- Speaker impedance: 6 ohm

## Accessories

- Included accessories: Batteries for remote control, FM antenna, Power cord, Quick start guide, Remote Control, User Manual, World Wide Warranty leaflet

## Dimensions

- Set dimensions (W x H x D): 800 x 140 x 97 mm

## Packaging dimensions

- Packaging type: Carton
- Number of products included: 1
- Packaging dimensions (W x H x D): 56.5 x 39.5 x 14.5 cm
- Gross weight: 5.5 kg
- Nett weight: 3.8 kg
- Tare weight: 1.7 kg
- EAN: 87 12581 45802 7

## Outer Carton

- Number of consumer packagings: 1
- Outer carton (L x W x H): 56.5 x 39.5 x 14.5 cm
- Gross weight: 5.5 kg
- Nett weight: 3.8 kg
- Tare weight: 1.7 kg
- EAN: 87 12581 45802 7

**DIVX**  
ULTRA

easy  
LINK  
HDMI



Issue date 2012-09-18

Version: 2.0.3

12 NC: 8670 000 48556  
EAN: 87 12581 45802 7

© 2012 Koninklijke Philips Electronics N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

[www.philips.com](http://www.philips.com)