



Philips Fidelio
SoundAvia wireless
speaker

with AirPlay



AD7050W

Experience the richness of natural sound

with this wireless speaker

The Philips Fidelio AD7050W/10 wireless speaker gives you the freedom to play songs from your iPod Touch, iPhone and iPad, and from your computer's iTunes - wirelessly via AirPlay. Stylish and powerful, it fills your home with great music.

Crystal clear sound

- SoundAvia for impressive room-filling sound
- FullSound enhances sound detail for rich and powerful sound
- 40 W RMS total output power

Elegant and contemporary

- Contemporary design for any space, any lifestyle
- Finished with high-quality Aluminium

Advanced versatility

- Stream music with AirPlay wireless technology
- One-step AirPlay setup
- Play and charge your iPod/iPhone/iPad via USB port
- AUX-in for easy connection to almost any electronic device

Intuitive control

- SoundStudio app for complete control of audio settings

PHILIPS
Fidelio

SoundAvia wireless speaker
with AirPlay


Highlights

SoundAvia



Designed to satisfy the most demanding music aficionados, SoundAvia will fill your room with impressive audio quality from a compact device. Full range front-firing speaker drivers and back-firing bass pipes optimise the sound balance, while the slightly curved baffle design elegantly broadens the optimal listening area.

FullSound™

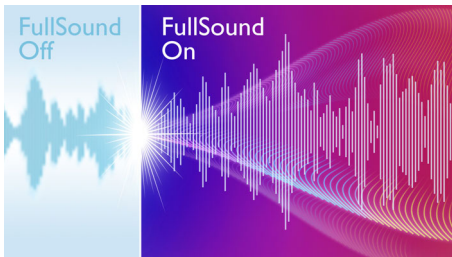

Philips' proprietary FullSound technology uses latest-generation Digital Signal Processing to faithfully enhance music rendering. Music content is dynamically analysed and optimised to let you experience music with great detail and warmth.


AirPlay wireless technology



AirPlay lets you stream your entire iTunes music collection to your Philips Fidelio docking

stations. It plays wirelessly from the iTunes program on your computer, iPhone, iPad or iPod Touch to any AirPlay-enabled speaker in your home. All you have to do is ensure your speakers are connected to your Wi-Fi network. AirPlay also lets you play simultaneously on every speaker in every room. Make your favourite tunes follow you into whichever room you go.

One-step AirPlay setup

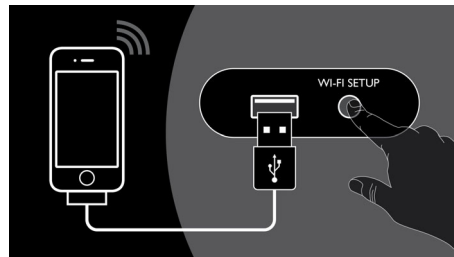

With the incredibly simple one-step AirPlay setup, your wireless speaker will be connected easily with your home network. Simply connect the speaker with your iPod touch, iPhone, iPad with 30-pin cable or docking connector, press the Wi-Fi setup button, and with just one click to allow Wi-Fi setup sharing on your Apple device, you're ready to rock!

SoundStudio App




Have music the way you like it now. SoundStudio truly puts the power over your music into the palm of your hands. It lets you change every aspect of sound, using only your iPhone, with controls that are intuitive and simple. Now you can tweak, tailor and create your desired sound experience and have your

AD7050W/10

favourite songs come to new life. SoundStudio also lets you listen to thousands of Internet radio stations worldwide, broadening your music experience even further.

Play and charge iPod/iPhone/iPad

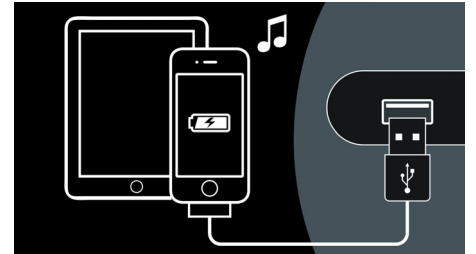

This speaker comes with a USB port, allowing you to conveniently charge your iPod, iPhone, iPad. Simply connect your Apple device with its USB cable to the back of the speaker. You can play any music from your Apple device whilst it is charging.

AUX-in connection



The AUX-in connection allows direct playback of MP3 content from portable media players. Besides the benefit of enjoying your favourite music in the superior sound quality delivered by the speaker, AUX-in connection is also extremely convenient as all you have to do is plug your portable MP3 player into the speaker.



Made for
iPod iPhone iPad



Specifications

Compatibility

- Compatible with: all iPod, iPhone and iPad

iPod/iPhone/iPad App

- App name: SoundStudio, Free download from App store
- Compatibility: iPod touch, iPhone, iPad iOS 4.3 or later

Loudspeakers

- Speaker drivers: 2 x 3" / 8 cm full-range driver
- Output power (RMS): 40 W

Accessories

- Included accessories: AC-DC Adapter, 3.5 mm stereo line-in cable, Warranty certificate, World Wide Warranty leaflet, Quick start guide
- User Manual: in CD

Connectivity

- AirPlay
- Aux in
- USB: for playing and charging iPod/iPhone/iPad

Dimensions

- Product dimensions (WxDxH): 358 x 137 x 202 mm
- Packaging dimensions (WxDxH): 466 x 175 x 250 mm
- Product weight: 2.4 kg
- Weight incl. Packaging: 3.06 kg

Power

- Power supply: 100-240 VAC, 50/60 Hz



Issue date 2014-03-18

Version: 5.0.4

12 NC: 8670 000 87098
EAN: 08 71258 16348 34

© 2014 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com