



Philips
CD Soundmachine

DAB
CD
cassette

AZB600

Enjoy music wherever you go

Bring new life to your cassette tapes with this simple and portable sound system. DAB radio support and multi-type CD playback let you get the most out of new music and your old favourites

Easy to use

- 20-track CD programmable
- CD Shuffle/Repeat for personalised music enjoyment
- Audio-in for easy portable music playback

Rich and clear sound

- Dynamic Bass Boost for deep and dramatic sound

The ultimate listening experience

- Autostop cassette deck
- Play CD, CD-R and CD-RW discs
- DAB+, DAB and FM for full radio experience


PHILIPS

Highlights

DAB+, DAB and FM

DAB+/DAB (Digital Audio Broadcasting) digital radio is, on top of FM analogue transmission, a new way of broadcasting radio via a network of terrestrial transmitters. It provides listeners with more choices and information delivered in clear and crackle-free sound quality. The technology allows the receiver to lock on to the strongest signal it can find. With DAB+ or DAB digital stations there are no frequencies to remember, and sets are tuned by station name, so there is no retuning on the move.

Autostop cassette deck

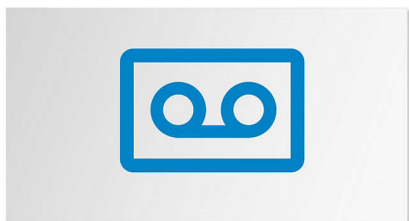


Autostop cassette deck

Dynamic Bass Boost



Dynamic Bass Boost maximises your music enjoyment by emphasising the bass content of the music throughout the range of volume settings - from low to high – at the touch of a button! Bottom-end bass frequencies usually get lost when the volume is set at a low level. To counteract this, Dynamic Bass Boost can be switched on to boost bass levels, so you can enjoy consistent sound even when you turn down the volume.

CD Shuffle/Repeat

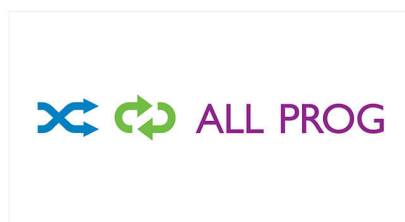

The "Shuffle/Repeat" function helps you to get rid of the boredom of hearing your music

played in the same order all the time. After loading your favourite songs to the player, all you have to do is to select one of the modes - "Shuffle" or "Repeat" for your tunes to be played in different modes order. Enjoy the different and unique music experience every time you hook up to your player.

AUDIO-IN (3.5 mm)



Make one easy connection and enjoy all your music from portable devices and computers. Simply plug your device into the AUDIO-IN (3.5 mm) port on your Philips set. With computers, the connection is typically made from the headset output. Once linked, you can enjoy your entire music collection directly, on a set of superior speakers. Philips simply delivers better sound.



Specifications

Sound

- Output power (RMS): 2 X 1W
- Sound Enhancement: Dynamic Bass Boost
- Sound System: Stereo
- Speaker diameter: 3"
- Volume Control: rotary

Loudspeakers

- Built-in speakers: 2

Connectivity

- 3.5 mm stereo line in: (AUDIO IN)

Tuner/Reception/Transmission

- Antenna: FM Antenna
- Tuner Bands: FM Stereo
- RDS: Programme Type, Radio Text, Station Name
- DAB/DAB+: Info display, Menu, Smart scan

Convenience

- Display Type: LCD

Power

- Battery type: LR14
- Battery voltage: 1.5 V

- Mains power: 220 V - 240 V
- Number of batteries: 6

Accessories

- User Manual
- Power cord
- Warranty: Warranty leaflet

Dimensions

- Packaging Depth: 158 mm
- Product depth: 133 mm
- Weight incl. Packaging: 2.4 kg
- Packaging Height: 275 mm
- Packaging Width: 326 mm
- Weight: 2 kg
- Product width: 300 mm
- Product height: 240 mm

Audio Playback

- Cassette Deck Technology: Mechanical
- Disc Playback Modes: Fast Forward/Reverse, Next/Previous Track Search, Repeat Play, Shuffle Play
- Playback Media: CD, CD-R, CD-RW
- Number of decks: 1
- Loader Type: Top
- Programmable Tracks: 20



Issue date 2024-10-14

Version: 3.0.4

EAN: 48 95185 60353 7

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com