



Philips  
Wireless home speaker

Wi-Fi. Multi-room audio  
DTS Play-Fi compatible  
Connects with voice assistants  
Built-in LED



TAW6505

## Bigger sound. Any room.

This powerful wireless speaker gives you 80 W of rich sound--on its own or as part of a multi-room setup. You get stereo sound packed with detail, perfect synchronization, and easy control whether connecting to your TV or other speakers.

### Multi-room audio and Ambilight

- DTS Play-Fi. High-quality multi-room audio
- Rich sound in any room. Perfect synching between rooms
- Built-in LED light. Works with Philips Ambilight TV
- 2x 3.5" woofers, 2x 1" tweeters, 80 W output power
- Two passive radiators for powerful bass

### Unpack. Connect. Enjoy

- Connects to all your devices
- Wi-Fi. Bluetooth. Apple AirPlay 2. Google Chromecast
- Spotify Connect. Tidal. Deezer. It's all here
- AC-powered. Dimensions: 350x132x151 mm


### At home in your home

- Multi-room setup via Philips Sound or Play-Fi app
- Boost the sound of your smart assistant speakers
- Connects to your favorite voice assistant-enabled devices

# PHILIPS

# Highlights

## Play-Fi. Multi-room and more

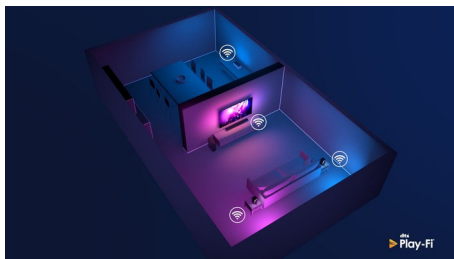

This wireless speaker is DTS Play-Fi compatible, so you can easily sync with other Play-Fi-compatible speakers for multi-room audio. If your soundbar supports Play-Fi Surround, you can even make this speaker part of a true surround-sound setup on movie night.

## Rich sound in any room

Two woofers, two passive radiators, and two tweeters combine to give you room-filling sound with powerful bass and sparkling treble. Wi-Fi streaming gives you the highest-quality signal, and ensures the audio syncs perfectly between speakers, or rooms.

## Bigger sound for smart speaker

Ask Alexa-enabled devices, or any device that has the Google Assistant, to play music through the speaker. Turn the volume up for a party. Turn it down late at night. Get the news and more. All completely hands-free.

## All your streaming services

Whether you're streaming direct from Spotify, or accessing hi-res albums on Tidal via the Play-Fi app, this speaker streams it all. From party

playlists in the lounge to podcasts in the office, everything you love will sound richer, deeper, and clearer.

## Connects to all your devices

With Wi-Fi, Bluetooth, Google Chromecast, and Apple AirPlay 2 compatibility you can stream your favorite music and podcasts however you want. If you use iOS devices you can use Siri to control the speaker with your voice.

## Works with Ambilight

This wireless speaker doesn't just do music. It does Ambilight too. Simply press the Ambilight link button on the speaker to connect to your TV. Enjoy a deeper Ambilight effect while you're watching movies or gaming, or while listening to music.

# Specifications

## Sound

- Output power (MAX): 160W
- Output power (RMS): 80W
- Total harmonic distortion: 10%
- Frequency response: 20 - 20k Hz
- Volume control: up/down

## Loudspeakers

- Driver configuration: 2-way
- Number of sound channels: 2.0
- Number of tweeters: 2
- Tweeter diameter: 1"
- Number of woofers: 2
- Woofer diameter: 3.5"
- Passive radiators: 2

## Connectivity

- Multiple speaker connection
- Multiple speaker scenario: Grouping, Stereo, Surround
- Multiple speaker technology: DTS Play-Fi Multi-room
- Smart Home: Spotify Connect, Built-in Chromecast, Works with OK Google, Works with Alexa, Works with Apple AirPlay 2
- Audio in: Yes, 1x 3.5mm
- Bluetooth
- Bluetooth version: 4.2
- Bluetooth profiles: A2DP, AVRCP, Streaming Format: SBC
- Bluetooth range: Line of sight, 20m or 66ft
- WiFi: 2.4GHz/5GHz, IEEE 802.11 a/b/g/n/ac
- Network setup: Play-Fi APP
- Wi-Fi antenna: Built-in
- DLNA Standard: No

## Compatibility

- Smartphone/tablet APP control

## Convenience

- User Interface: Built-in LED: multi-color
- Light Effect
- Built-in microphone: 0
- Handsfree calling: No

## Power

- Power supply: 100 - 240V AC, 50/60Hz
- Standby mode
- Power consumption: 60 W
- Semi standby power consumption: 6 W
- Power bank: No

## Accessories

- Included accessories: AC Power Cord, World Wide Warranty leaflet, Quick start guide

## Product dimensions

- Product dimensions (W x H x D): 35 x 13.2 x 15.1 cm
- Weight: 3.51 kg

## Packaging dimensions

- Packaging dimensions (W x H x D): 38.8 x 21.1 x 20.5 cm
- Gross weight: 4.415 kg
- Nett weight: 3.51 kg
- Tare weight: 0.905 kg
- Number of products included: 1
- Packaging type: Carton
- EAN: 48 95229 10986 5

