

PHILIPS



Wet and Dry electric
shaver

Shaver series 7000

Nano SkinGlide Coating

SteelPrecision blades

Motion Control sensor

360 D Flexing heads



S7887/78

Close shave, advanced skin protection with SkinIQ Technology

The Philips Series 7000 glides smoothly over your skin, while cutting each hair close - even on 3 day beards. Equipped with advanced SkinIQ technology, the shaver senses, adapts and guides on the correct motion, for better skin protection.

A close shave

- Powerful performance in every pass
- Engineered for precision and cutting efficiency
- Adjusts to your facial contours for optimal skin contact
- Unique OneBlade technology

SkinIQ technology

- Enhanced shaving experience with app
- Reduces friction on skin to minimise irritation
- Adjusts to your beard for effortless shaving
- Guides you to an improved technique with fewer passes

For a convenient shave

- Powerful cleaning pod for maintenance and hygiene
- Up to 60 minutes of cordless shaving when fully charged
- 1 hour charging time and 5 min quick charge

Sustainability

Shaver series 7000

Wet and Dry electric shaver

S7887/78

Highlights

Nano SkinGlide coating



A protective coating lies between the shaver heads and your skin. Made of up to 250.000 micro-tech beads per square centimetre, improves gliding on skin by up to 30%***, to minimise irritation.

SteelPrecision blades



With up to 90,000 cutting actions per minute, the SteelPrecision blades shave close, cutting more hair per stroke*. The 45 high-performance blades are self-sharpening and made in Europe.

Motion Control sensor



Motion-sensing technology tracks how you shave and guides you to a more efficient technique. After just three shaves, the majority of men achieved a better shaving technique for fewer passes***.

Personalisation via app

Perfect your shave by pairing your shaver with the Philips Shaving app. Shave by shave, track the progress of your skin, personalise your shave and master your technique for a shave that's as close as it is kind to skin.

Power Adapt sensor




The intelligent facial-hair sensor reads hair density 250 times per second. The technology dynamically auto-adapts the cutting power for an effortless and gentle shave.

360 D Flexing heads



Fully flexible heads turn 360° to follow your facial contours. Experience optimal skin contact for a thorough and comfortable shave.

Unique OneBlade technology

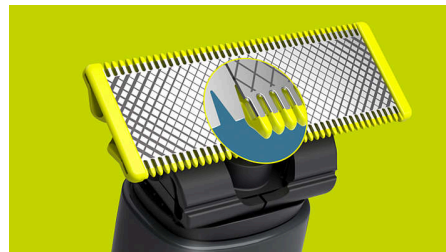


Designed for facial styling and body grooming, the Philips OneBlade trims, edges and shaves any length of hair. It delivers an easy and comfortable shave thanks to a glide coating and rounded tips. And with a cutter that moves at 200 x per second, it's efficient even on longer hairs.

Cable-free Quick Clean Pod



10 x more effective than cleaning with water****, the powerful cleaning pod thoroughly cleans and lubricates your shaver in just 1 minute. Using it helps maintain shaver performance and increase hygiene.

Hair-Guide Precision heads

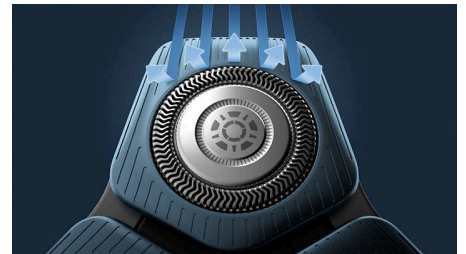

The new shape of the shaving heads is engineered for precision. The surface is enhanced with hair guiding channels, designed to move hair into an effective cutting position.

Wet & Dry

Adapt your shaving routine to your needs. With Wet and Dry, you can go for a comfortable dry shave or a refreshing wet shave. You can shave with gel or foam, even under the shower.

Pop-up trimmer



Complete your look using the shaver's pop-up precision trimmer. Integrated into the shaver's body, it's the perfect way to maintain a moustache and trim sideburns.

Shaver series 7000

Wet and Dry electric shaver

S7887/78

Highlights

USB-A charging

At Philips, we drive sustainability in all aspects of product creation. Our ambition is to reduce waste and minimise the number of USB adapters we put in the market. Should you need an adapter, a suitable supply unit is available via: www.philips.com/support

1 hour charging time

Charge your shaver fully in just 1 hour with the powerful and energy efficient lithium-ion battery. In a hurry? Plug in your shaver for 5 minutes and get enough power for 1 full shave.

60 minutes of cordless shaving

Shave cordlessly for up to 60 minutes after one full battery charge.

Shaver series 7000

Wet and Dry electric shaver

S7887/78

Specifications

Trimming and shaving performance

Shaving system: Contour-following technology, Dual protection system

Trimming system: Contour-following technology

Accessories

Comb: Click-on skin guard, Click-on body comb

Maintenance: Cleaning brush (S7000), Storage cap (OneBlade)

Charging stand

Extra replaceable blade

Quick Clean Pod: 1 cartridge included, Yes

Integrated pop-up trimmer

Travel and storage: Travel case

Software

Software update: Philips offers relevant software updates for a period of 2 years after the date of purchase

App: Connects via Bluetooth®, Philips Shaving App

Smartphone compatibility: iPhone and Android™ devices

Power

Run time: 60 minutes

Battery type: Li-ion (S7000), Lithium-ion (OneBlade)

Automatic voltage: 100-240 V

Charging: 1 hour full charge (S7000), 5 min quick charge (S7000), 4 hours full charge (OneBlade)

Maximum Power Consumption: 2 (OneBlade), 9 (S7000) W

Design

Handle: Rubber grip (S7000), Ribbed rubber grip (OneBlade)

Colour: Dark Chrome (S7000), Lime green (OneBlade), Charcoal grey (OneBlade)

Shaving heads: Angular

Service

2 year warranty: Yes (S7000), On the handle (OneBlade)

Replacement head (S7000): Replace every 2 yrs

with SH71

Replacement head (OneBlade): QP210, QP220, QP610, QP620, Replace every 4 months*

Shaving Performance

Contour following: 360 D Flexing heads

Shaving system: SteelPrecision blades

SkinIQ technology: Power Adapt sensor, Protective SkinGlide coating, Motion Control sensor

Ease of use

Display: Motion control indicator, LED display, Battery level indicator, Travel lock, Charging indicator on adapter

Wet & Dry: Wet and dry use

Charging: USB-A Charging (5 V⁻ / ≥1 A)

Cleaning: One-touch open, Fully washable

Charging: Rechargeable

