




Philips
On tap water purifier

Micro X-Pure

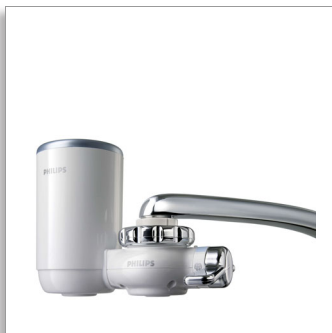

WP3812

Pure water made easy

with Micro X-Pure filter

Compact and easy to install water purifier that not only gives you safe and pure water by removing bacteria, soluble lead, harmful organic compounds and chlorine, but also keeps all good minerals in your water with a Micro X-Pure filter.

Pure water

- Removes bacteria, soluble lead & harmful organic compounds

Made easy

- Hi-flow with maximum rate of 2 liters per minute
- Pure Protect alert shows you when to replace the filter

Simplicity

- Quick Fit tap adapters for easy installation on your tap
- Advanced Quick Twist mechanism for easy filter replacement

Sustainability

- Maximum performance without the need of electricity

PHILIPS

Specifications

Purification system

- Turbidity removal: 3000 liters or approx. 1 year
- Bacteria removal: 99.99 %
- VOC Removal
- Chlorine removal: >75 %
- Pesticides removal
- Hormones removal

Design specifications

- Materials: plastic
- Color(s): white
- Product weight: 340 g
- Product dimensions (L x W x H): 61 x 138 x 105 mm

Filter specifications

- Filter lifetime: 1500 L or approx. 3 months
- Major filter components: hollow-fiber membrane, granular activated carbon GAC, ion exchange resin, pre-filter of sediments

Input water conditions

- Min. input water pressure: 0.7 bar
- Max. input water temperature: 50 °C
- Max. input water pressure: 3.5 bar

General specifications

- Accessories: 8 QuickFit tap-mounting adapters, color coded PureProtect Alert
- Replacement filter cartridge: WP3922
- Water selection: filtered spray, unfiltered spray, unfiltered stream
- Water flow rate: 1.6 l/min
- Water flow rate: 5 °C

Sustainability

- User manual: 100% recycled paper
- Packaging: > 90% recycled materials

Country of origin

- Water purifier: Japan
- Replacement filter: Japan

Highlights

Micro X-Clean filter

The Micro X-Clean is multi-filtration system. It consists of a hi-tech hollow-fibre membrane, which contains more than 300 billion micro-pores for the efficient removal of 99.99% of all bacteria, an ion exchanger to remove harmful soluble lead, a fine granular activated carbon to remove the harmful chlorination by-products, harmful industrial pollutants such as volatile organic chemicals, and agricultural pollutants such as the pesticide CAT. It also removes unpleasant chlorine, bad taste and odors. The filter preserves the good minerals in drinking water that are vital for human health.

Pure Protect alert

The advanced and simple color-coded Pure Protect alert guides users to change the filter on time with maximum simplicity: when the membrane turns dark grey or rusty brown, it is time to replace the filter.

Hi-flow

This compact water purifier has a maximum flow rate of 2 liters per minute, which makes little change to the normal flow rate of unfiltered water. By simply rotating the water selection lever, you also have a choice of either a stream or a spray of unfiltered water or spray of filtered water.

Quick Fit tap adapters

This advanced water purifier comes with a number of tailor-made Quick Fit tap adapters, to help you having an easy and simple installation of your purifier in your tap. Real sense and simplicity.

Quick Twist filter change

The advanced Quick Twist filter change mechanism makes changing the filter quick, easy and secure, bringing sense and simplicity to your water purifier.

No energy consumption

Designed to operate without electricity while offering maximum performance. Supports sustainability.

