



Philips
Xenium

X600

CTX600GRY

Long-lasting appeal

Life gets hectic sometimes and you need a phone with the power and resilience to keep up with you. Meet the Philips Xenium X600 with ultra long battery life and multimedia applications to help you meet life's daily challenges head on.

Always on, always connected

- Up to 1 month of standby time
- Up to 8.5 hours of talk time

Maximize your Multimedia Experience

- Video capture and playback in MPEG4 and H263 format
- MicroSD memory card slot for extra memory/ data storage
- Enjoy Bluetooth stereo music
- Capture your memories with 2 megapixel camera

Stay connected

- Enhanced Data rates for GSM Evolution

PHILIPS


Highlights

Up to 1 month standby time



The phone can be on and in standby mode continuously for up to 1 month on a single charge.

Up to 8.5 hours talk time

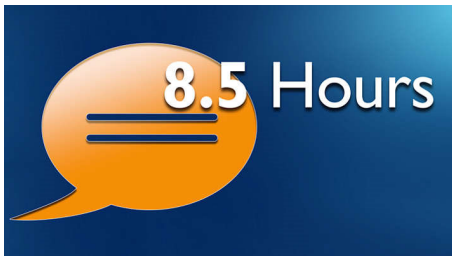

The phone can support up to 8.5 hours talk time on a single charge.

Bluetooth stereo music

Your Philips mobile phone supports A2DP Bluetooth Profile. It lets you enjoy your favorite tunes wirelessly and in high quality stereo music from your Bluetooth headphones.

Video capture and playback

The video capture function lets you record precious moments in MPEG4 or H263 format. Play it back on your phone or PC.

MicroSD memory card slot

You can now enjoy extra capacity and storage of multimedia files by inserting a MicroSD memory card into the built-in memory card slot of your phone.

EDGE

EDGE provides up to three times the data capacity of GPRS, allows you to enjoy higher speed access to Internet and WAP, content download, email as well as fast sending/reception of MMS messages. Subscribe the GPRS service with your network operator and

set up the GPRS profile in your EDGE enabled phone.

2 Megapixel camera



Capture and enjoy precious memories in clear and sharp picture quality with 2 megapixel resolution. Vibrant, colorful pictures are just a click away.



Specifications

Picture/Display

- Main Display Resolution: 176x220 pixels
- Main Display Technology: TFT
- Main Display Colors: 262K
- Lines of text: 6
- Sub Display Colors: B/W
- Sub Display Resolution: 64x64 pixels
- Sub Display Technology: OLED
- Diagonal screen size: 2.2 inch

Still Picture Capturing

- Camera: Integrated
- Picture resolution: VGA (640x480), 176x220, 768x1024, SXGA (1280x1024), 2M (1600x1200)
- Picture file format: JPEG
- Picture Mode: Self-timer mode, Continuous, Multi-shot, Night mode
- Picture quality: Normal, Fine, Superfine
- Special effects preview mode: Sepia, Blue effect, B&W
- Sensitivity: min 1 lux
- Preview frame rate: 25 frames/second
- Image sensor type: CMOS

Still Picture Playback

- Picture Compression Format: BMP, JPEG, WBMP
- Slide show

Storage Media

- Built-in memory (RAM): 256 Mb Flash + 64 Mb RAM
- Memory Card Types: Micro SD
- Maximum memory card capacity: 2 GB
- Memory management: Memory status, Dynamic memory allocation
- User memory: 10 MB

Connectivity

- Bluetooth
- Bluetooth profiles: A2DP, Handsfree, Headset, Object push profile

- Modem Capabilities: CSD (Voice, Data), GPRS, SMS
- Headset: Via mini USB connector
- Synchronisation PC organizer: Lotus Notes, MS Outlook
- Wireless connection: Bluetooth

Network Features

- EDGE
- GPRS (Rx+Tx): Class 10 (4+2), Class B
- Messaging: Concatenated SMS (Long SMS), E-mail, MMS, Multimedia Message Service, SMS CB (Cell Broadcast), SMS (Short Message Service), SMS multi-target, Predefined SMS, WAP OTA provisioning
- Services: OTA provisioning (WAP, MMS), SIM Toolkit / Release 99, WAP 2.0
- Voice Codec: FR/EFR/AMR/HR
- GSM band: 900, 1800, 1900 MHz

Power

- Battery Capacity: 1100 mAh
- Battery Type: Lithium-ion
- Standby time: up to 1 month
- Talk time: up to 8.5 hrs
- Charging time: approximately 2.5 hour(s)
- Battery saving manager: Auto switch on/off

Convenience

- Language available: UI: Chinese Simplified, Chinese Traditional, English, Indonesian, Thai, Vietnamese
- Ease of Use: Hands free mode, Hot Keys, In-flight mode, Softkeys, Vibra Alert
- Call Management: Call Forwarding, Call on Hold, Call Time, Call Waiting*, Caller ID*, Conference Call, Emergency Call, Microphone mute, Missed Calls, Multi-party call, Received Calls, Firewall
- Buttons and controls: 4-way navigation key and enter, Soft keys
- Volume control
- Clock/Version: Digital, International clock

- Speech Recognition: Conversation Recording, Long voice memo, Voice Memo
- Stop watch
- Vibrator
- Embedded Games: 3
- Games and applications: Alarm Clock, Calculator, Calendar, Euro Converter, Java MIDP 2.0, Lunar Calendar, Stopwatch, Countdown timer, Chinese festival reminder, International converter, Female calendar, Price comparison table, My Card, Discount manager, MSN, Sudoku game
- Ease of Navigation: Active Flip
- Language available: T9 input: Chinese Simplified, Chinese Traditional, English, French, Russian, Turkish, T9 arabic
- Personal Info Management: Daylight saving, Time Zone, Smart Phonebook, Vcard Exchange, International clock
- Personalisation/Customization: Downloadable Picture, Downloadable Ringtones, Fotocall, Wallpaper, Ringtones, Downloadable Animated GIF, Downloadable Java Applications

Sound

- Ringers: MP3 ringer, Polyphonic (64 tones), Voice memo ringer

Audio Capturing

- Voice recording: Yes, AMR

Audio Playback

- Audio supported formats: AMR, Midi, MP3, AAC, WAV, AAC+, WMA

Audio Recording

- Record your own voice

Video Capturing

- Video format: H.263, MPEG4
- Video resolution: QCIF
- Frame rate: 15 fps

Specifications

- Image sensor resolution: 2M pixels
- Image sensor type: CMOS

Video Playback

- Resolution (pxl): 176x144
- Compression formats: MPEG4, H.263

Video Recording

- Compression formats: H.263, MPEG4

Dimensions

- Form Factor: Clam shell
- Antenna: Integrated

- Handset color: Anodized coco grey
- Handset dimensions: 96.8 x 52 x 16.5mm
- Handset weight: 110g

Green Specifications

- Lead-free soldered product

Accessories

- Standard Package Includes: Battery, CD ROM (Mobile Phone Tools), Charger, Handset, International Guarantee, Stereo Headset, User Manual, USB data cable



Issue date 2024-01-04

Version: 2.0.2

EAN: 87 12581 45273 5

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com