



Philips Series 3200
Fully automatic
espresso machines

- 4 Beverages
- Classic Milk Frother
- Glossy Black
- Touch display

EP3221

4 delicious coffees from fresh beans, with ease

Thanks to the intuitive touch display

Enjoy the delicious taste and aroma of coffee from fresh beans, at the perfect temperature, thanks to our intelligent brewing system. The classic milk frother allows you to create a silky-smooth cappuccino or latte macchiato with ease.

A variety of coffees customised to your taste

- Delicious milk froth thanks to the classic milk frother
- Enjoy 4 coffees at your fingertips
- Easily adjust to your taste with 12-step grinder levels
- Adjust aroma strength and quantity via My Coffee Choice
- Easy selection of your coffee with intuitive touch display

High-quality coffee from fresh beans

- Keep your beans fresh for longer thanks to the aroma seal
- 20,000 cups of finest coffee with durable ceramic grinders
- The perfect temperature, aroma and crema cup after cup**

Effortless use and cleaning for everyday enjoyment

- Easy cleaning thanks to the fully removable brew group
- Up to 5000 cups* without descaling thanks to AquaClean
- Dishwasher safe parts for your convenience

PHILIPS

Fully automatic espresso machines
4 Beverages Classic Milk Frother, Glossy Black, Touch display

EP3221/40


Highlights

AquaClean filter



By changing the filter after being prompted by the machine, you will not need to descale your machine for up to 5000 cups*, while enjoying clear and purified water.

4 aromatic coffees

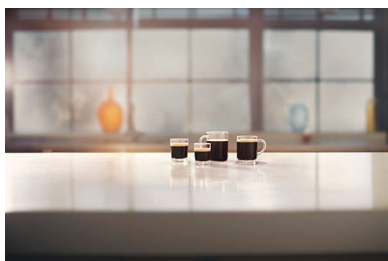

Enjoy your favourite coffees for your special moments. Whether you're craving an espresso, a coffee or a milk-based recipe, your fully automatic machine delivers a perfect in-cup result with no hassle and in no time!

Classic milk frother



The Classic Milk Frother dispenses steam, allowing you to easily prepare silky smooth milk froth for your cappuccino. What's more? With only two parts, the Classic Milk Frother is also easy to clean.

Intuitive touch display



The irresistible taste and aroma of coffee from fresh beans is just one touch away. Our intuitive touch display allows you to easily select your favourite coffee.

My Coffee Choice



Adjust the strength and quantity of your beverage with the My Coffee Choice menu. Easily choose from three different settings to suit your preferences.

12-step grinder adjustment



Our durable ceramic grinders can be adjusted in 12 steps, so you can turn your beans into anything from ultra-fine powder to coarse grindings.

Perfect temperature and aroma



The Aroma Extract system intelligently strikes the optimum balance between brewing temperature and aroma extraction by keeping the water temperature between 90 and 98°C, while regulating the water flow rate, so you can enjoy delicious coffees.

100% ceramic grinders



Bring out the full flavour of your coffee with our hard-wearing ceramic grinder. Our sharp-edged grinders extract the best aroma and flavour from your beans. Made from 100% ceramic material which ensures that they last for at least 20.000 cups.

Preserve beans' aroma



The new Aroma seal protects your favourite coffee beans and makes sure they preserve their original aroma over time, while reducing the grinder noise.

Specifications

Country of origin

- Designed in: Italy
- Made in: Romania

Customisation

- Aroma Strength Settings: 3
- Grinder Settings: 12
- Pre-Brew Aroma control
- Temperature settings: 3

Variety

- Beverages: Espresso, Hot water, Coffee, Americano, Espresso Lungo
- Coffee Powder Option
- Double Cup
- Milk Double Cup: No

Other features

- Removable brew group
- Aroma Seal
- Guided descaling
- AquaClean

Accessories

- Included: Grease tube, Measuring scoop, Water hardness test strip, AquaClean filter

Technical specifications

- Cord length: 100 cm
- Voltage: 230 V
- Frequency: 50 Hz
- Capacity water tank: 1.8 L
- Capacity waste container: 12 servings
- Coffee bean capacity: 275 g
- Weight of product: 7.5 kg
- Waste container: Frontal access
- Water tank: Frontal access
- Filter compatibility: AquaClean
- Pump pressure: 15 Bar

- Colour & Finish: Black, Glossy black
- Product dimensions: 246x371x433 mm

Consumer Trade Item

- Height: 48
- Width: 29
- Length: 49
- Net Weight: 7.833
- Gross Weight: 9.715
- GTIN: 8720389007415
- Country of origin: RO
- Harmonized system code: 85167100

Outer Carton

- Height: 48
- Width: 29
- Length: 49
- Net Weight: 7.833
- Gross Weight: 9.715
- GTIN: 18720389007412

General specifications

- Adjustable spout height: 85-145 mm
- Milk Solution: Classic Milk Frother
- Ease of cleaning and maintenance: AquaClean filter compatible
- Dishwasher-safe parts: Classic milk frother, Drip tray
- User Interface: Touch screen display

Service

- 2 year guarantee

Sustainability

- ECO setting
- Energy label: A-class
- Power consumption brewing: 1500 W
- Recyclable packaging material: >95 %



Issue date 2024-01-06

Version: 3.3.1

EAN: 87 20389 00741 5

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Based on 8 filter replacements as indicated by the machine. Actual number of cups depends on selected coffee varieties, rinsing and cleaning patterns.

**Based on 70-82°C