


# PHILIPS

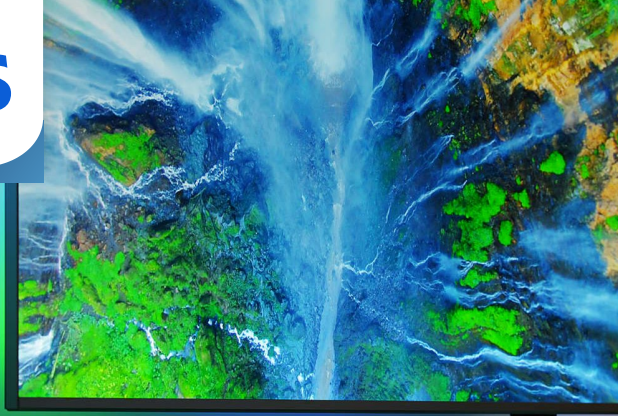

## Soundbar 2.1

2.1 Ch, wireless subwoofer

320 W max. HDMI eARC

DTS Virtual:X

Dolby Atmos®



TAB6309

## Low profile. Room-filling sound.

With its immersive audio technology and ultra-compact wireless subwoofer, this super-slim soundbar will fill your room—without taking over the room. It partners perfectly with Ambilight TVs to dial up the thrills of whatever you're watching.

### Immersive sound for everything you love

- Dolby Atmos. Immersive cinematic sound at home
- DTS Virtual:X for immersive 3D sound in any room
- Four EQ sound modes and dialogue enhancement

### Music and movies

- Bluetooth 5.3 with LE Audio support
- Connect your favourite sources for bigger sound
- HDMI eARC, optical connection, AUX-in, USB
- Philips Home Entertainment app
- Control your soundbar and TV with a single remote

### Philips 2.1 soundbar. Ambilight TV Surround.

- 2.1 channels. Wireless subwoofer for deeper bass
- Room-filling sound. 320 W max
- Ultra-slim design, perfect for low-slung Ambilight TVs

# Highlights

## 2.1 channels with subwoofer



2.1 channels and immersive audio technology bring new levels of sound, while the ultra-compact wireless subwoofer adds impressive weight to effects and music. Four EQ modes let you pick a sound style to suit what you're watching—and voices get clearer in any mode if you activate Dialogue Enhancement.

## Ultra-slim design



This soundbar has a profile of just 37 mm: it will even fit under Ambilight TVs with lower stands, and the detachable wall brackets (included) give you multiple options. The ultra-compact, powerful subwoofer is easy to conceal and you can position it vertically or horizontally.

## DTS Virtual:X



Compatibility with DTS Virtual:X transforms your TV sound, bringing you a virtual 3D sound experience no matter what's on screen! You don't need extra speakers, and it works in any room: turn it on via the soundbar's remote control or the Philips Home Entertainment app.

## Dolby Atmos<sup>®</sup>



Dolby Atmos places sound effects in the space around and above you, creating three-dimensional spatial sound that pulls you in deeper. Activate it via the surround-sound button on the soundbar's remote or through the Philips Home Entertainment app. You'll feel like you're right in the middle of the action.

## HDMI eARC. Philips EasyLINK



You can adjust the volume on your soundbar using your TV remote. If you have a Philips Ambilight TV, the EasyLINK function lets you use the remote to switch between the soundbar's preset EQ modes, adjust bass and treble—and more.

## Easy connections



Compatibility with Bluetooth LE Audio gives you a steadier connection, better sound and less lag if you're streaming playlists from a smart device that is also compatible with Bluetooth LE Audio. You can also connect audio sources to the soundbar via audio-in, USB or optical input.

## Philips Home Entertainment app

Download the app and you can use your smart device to switch between the EQ sound modes, select source, activate virtual surround sound and more.

# Specifications

## Sound

**Sound Enhancement:** AI, Audio sync, Standard, Treble and Bass Control, Upmix  
**Equalizer settings:** Movie, Music, Stadium, Voice  
**Total harmonic distortion:** <=10%  
**Speaker system output power:** 320 W max/160 W RMS

## Loudspeakers

**Subwoofer freq range:** 35 - 180 Hz  
**Subwoofer type:** Wireless subwoofer, Active  
**Subwoofer impedance:** 3 ohm  
**Number of sound channels:** 2.1  
**Number of woofers:** 2  
**Woofer diameter:** 4.5"  
**Soundbar freq range:** 180 - 20k Hz  
**Soundbar impedance:** 8 ohm  
**Front drivers:** 2 tweeters (L+R), 2 full range (L+R)  
**External subwoofer enclosure:** Bass reflex

## Connectivity

**Bluetooth:** Receiver  
**Bluetooth version:** 5.3  
**Bluetooth profiles:** A2DP, AVRCP  
**EasyLink (HDMI-CEC)**  
**USB playback**  
**Audio in:** 1 x 3.5 mm  
**Optical input x 1**  
**HDMI content protection:** HDCP 1.4  
**HDMI Out (eARC/ARC) x 1**  
**DLNA Standard:** No  
**Multiple speaker connection:** No  
**Smart Home:** None  
**Wireless speaker connection:** Subwoofer

## Supported Audio Formats

**HDMI ARC/eARC:** Dolby Atmos®, Dolby Digital, Dolby Digital plus, DTS Digital Surround, Dolby MAT, Dolby TrueHD, LPCM 2ch, DTS Virtual:X  
**Bluetooth:** SBC  
**USB:** MP3, WAV, FLAC  
**Optical:** Dolby Digital, LPCM 2ch

## Outer Carton

**Length:** 98 cm  
**Number of consumer packages:** 2  
**Width:** 38 cm  
**Gross weight:** 13.8 kg  
**Height:** 21 cm  
**GTIN:** 1 48 95229 13466 6  
**Net weight:** 9.6 kg  
**Tare weight:** 4.2 kg

## Convenience

**EasyLink (HDMI-CEC):** Audio Return Channel, Automatic audio input mapping, One touch standby  
**Remote Control**  
**Night mode**

## Compatibility

Smartphone/tablet APP control

## Power

**Main unit power consumption:** 18 W  
**Main unit power supply:** 100-240 V AC, 50/60 Hz  
**Subwoofer power supply:** 100-240 V AC, 50/60 Hz  
**Subwoofer standby power:** less than 0.5 W  
**Main unit standby power:** less than 0.5 W  
**Auto standby**

## Packaging dimensions

**Height:** 19 cm  
**Packaging type:** Box  
**Type of shelf placement:** Laying  
**Width:** 96 cm  
**Depth:** 26.5 cm  
**Number of products included:** 1  
**EAN:** 48 95229 13466 9  
**Gross weight:** 6.38 kg  
**Net weight:** 4.8 kg  
**Tare weight:** 1.58 kg

## Accessories

**Included accessories:** Remote Control, 2 x AAA Batteries, Power cord, Power adapter, Wall mount bracket, Quick start guide, World Wide Warranty leaflet

## Design

**Colour:** Dark grey  
**Wall mountable**

## Dimensions

**Main Unit (W x H x D):** 811 x 37 x 42 mm  
**Main Unit Weight:** 0.61 kg  
**Subwoofer (W x H x D):** 155 x 391 x 161 mm  
**Subwoofer Weight:** 3.69 kg

## Video

**3D pass-through:** No

