

User manual

Contents

1	Important	1
	Safety	
	Electromagnetic fields (EMF)	
	Recycling	
2	Your Tower Fan	5
_	Product overview	
	Controls overview	
	Remote control overview	
3	Getting started	8
	Installing the fan base	
	Using the remote control for the first time	
	Using the aroma function	
4	Using the Tower Fan	10
-	Turning on and off	
	Normal mode: Changing the fan speed manually	
	Switching the mode	
	Using the timer function	
	Rotation	12
	Setting the child lock	13
	Using the light on/off function	13
5	Cleaning and maintenance	13
6	Storage	
7	Troubleshooting	
-	_	
8	Warranty and support	15

1 Important

Safety

Read this user manual carefully before you use the appliance, and save it for future reference.

Danger

• Do not let any liquid or flammable detergent enter the appliance, to avoid electric shock and/or a fire hazard.

Warning

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safeway and understand the hazards involved.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children shall not play with the appliance.
- Cleaning and maintenance shall not be made by children without supervision.
- Do not block the air inlet and outlet, e.g. by placing items on the air outlet or in front of the air inlet.
- Do not insert fingers, sticks or other objects into the machine, in order to avoid electric shocks, physical injury or fire.
- Do not use the appliance near gas appliances, fireplaces.
- Do not spray any flammable materials such as insecticides or fragrance around the appliance.
- Do not use if there are visible signs of damage to the device, the plug, the power cord.
- Do not use this device if it has been dropped.
- If the power cord is damaged, you must have it replaced by Philips, a service center authorized by Philips, or similarly qualified persons in order to avoid a hazard.
- WARNING: Keep new and used batteries out of the reach of children. Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 h of

ingestion. If you think a battery might have been swallowed or placed inside any part of the body, seek medical attention immediately.

• WARNING: Dispose of used batteries immediately and safely.

Caution

- The device must not be located immediately below a socket outlet.
- Always place and use the appliance on a dry, stable, and horizontal surface.
- Do not use the appliance in surroundings with high humidity such as the bathroom, toilet, kitchen, swimming pool, or any outdoor environment.
- Do not sit or stand on the appliance. Do not knock against appliance. Do not place anything on top of the appliance.
- Always unplug the appliance when you want to move, clean appliance, replace the filter or carry out other maintenance. After assembly, do not remove the guards during use or cleaning.
- The appliance is only intended for household use under normal operating conditions.
- Only operate this remote control with type of disposable battery specified in the user manual.
- Do not recharge non-rechargeable batteries.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, or changes color, stop using the product and contact Philips.
- Do not place remote control and their batteries in microwave ovens or on induction cookers.
- Do not modify, pierce, damage or dismantle the remote control or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eye. If this occurs, immediately rinse well with water and seek medical care.

- When you handle batteries, make sure that your hands, the remote control and the batteries are dry.
- Insert 2 Alkaline, type LR03-AAA-1.5V batteries with the + and - poles pointing in the direction indicated in the battery compartment or holder.
- Do not mix different brands and types of batteries, do not mix new and used batteries and do not use batteries with different date codes.
- Remove batteries from the remote control if you are not going to use it for some time.
- To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminium foil. Tape battery terminals or put batteries in a plastic bag before you discard them.
- Do not leave empty disposable batteries inside the remote control.
- The essential oils are not included with the product. Please purchase and use the essential oils if needed.
- Make sure the product is disconnected with power before dropping essential oils into the aroma box.
- Do not use substances other than essential oils.
- Read and follow the safety and use instruction of the essential oil carefully before using it.
- Check the ingredient information of the essential oil against your known allergies and exclude it from use when necessary.
- Consult and follow your doctor's recommendation before using essential oils for infants, pregnant women, women in the lactation period, or if you have respiratory issues.
- If you feel unwell, experience irritation or discomfort during the use of essential oils, please discontinue use.

Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.


3

Recycling

This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU).



This symbol means that this product contains disposable batteries which shall not be disposed of with normal household waste (2006/66/EC).





Removing disposable batteries

Only the remote control contains disposable battery.

To remove disposable batteries, see the instructions for placing and/or removing batteries in the user manual.


Always remove empty disposable batteries from the product. Take any necessary safety precautions when you dispose of batteries.

2 Your Tower Fan


Congratulations on your purchase, and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Product overview

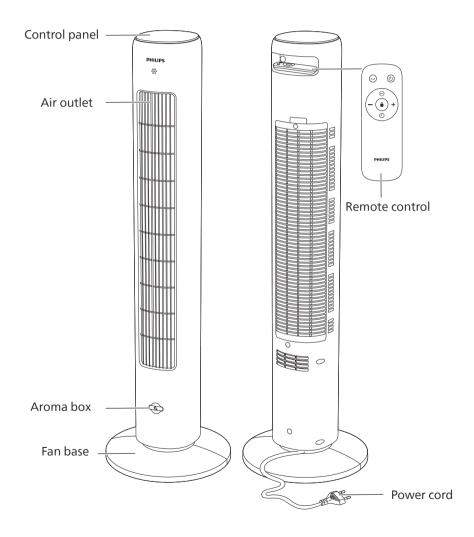

Controls overview

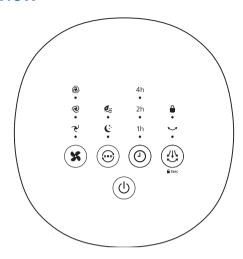

Control buttons

Fan speed button		•	Mode switch button
4	Timer button	₩	Rotation button
ψ	Power on/off button		

Display panel

4	Fan speed 1	@	Fan speed 2
@	Fan speed 3	Č.	Quiet Sleep mode
Ø	Natural Wind mode	1h	Timer of 1 hour
2h	Timer of 2 hours	4h	Timer of 4 hours
V	Rotation indicator	•	Child lock

Remote control overview



V	Rotation button	Ú	Power on/off button
•	Mode switch button	①	Timer button
	Child lock button	+/-	Fan speed selection button

3 Getting started

Installing the fan base

Remove all packaging materials before first use.

Note: Make sure the fan is unplugged from the electrical outlet before installing the base.



- 1 Hold two base halves in a crossed position, and securely interlock the pegs into holes.
- 2 Invert the Tower Fan gently. Remove the plastic nut located at the bottom of the Tower Fan by unscrewing it.
- 3 Fit the base to the Tower Fan. Tightly screw the plastic nut back on.
- 4 Place the Tower fan right side up.

Using the remote control for the first time

Caution:

- Risk of product damage! When the remote control is not used for long periods, remove the battery.
- Battery contains chemical substances, so they should be disposed of properly.



- 1 Open the battery compartment
- 2 Insert 2 Alkaline, type LR03-AAA-1.5V batteries with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

Using the aroma function

Notes:

- The essential oils are not included with the product. Please purchase and use the essential oils if needed.
- Read the user manual of essential oils carefully before using the aroma function.
- Make sure the product is disconnected with power before dropping essential oils into the aroma box.
- Do not use substances other than essential oils.
- Read and follow the safety and use instruction of the essential oil carefully before using it.
- Check the ingredient information of the essential oil against your known allergies and exclude it from use when necessary.
- Consult and follow your doctor's recommendation before using essential oils for infants, pregnant women, women in the lactation period, or if you have respiratory issues.
- If you feel unwell, experience irritation or discomfort during the use of essential oils, please discontinue use.
- Do not use the aroma function of essential oils for infants, pregnant women, or women in the lactation period.



- 1 Pull out the aroma box from the appliance.
- 2 Drop in 2-3 drops of essential oils to the supplied aroma pad.
- **3** Put the aroma box back into the appliance.

4 Using the Tower Fan

Turning on and off

- 1 Put the plug in the power socket.
- 2 Touch the \bigcirc button on the appliance or the remote control to switch on the Tower Fan. The appliance beeps.
- 3 Touch the \bigcirc button again to switch off the Tower Fan.

Caution:

• When the Tower Fan continuously runs for 15 hours, it will be shut down automatically for protection.

Normal mode: Changing the fan speed manually




You can choose the fan speed 1 $^{\circ}$, fan speed 2 $^{\circ}$, or fan speed 3 $^{\circ}$ by touching the $^{\circ}$ button on the appliance or press the $^{\circ}$ -button on the remote control manually.

Switching the mode

• Touch the ⊕ button switch between Natural wind mode (♠), Quiet Sleep mode (♠) and manual fan speed.



Natural Wind mode (♠): Adjusts fan speeds up and down to mimic the natural movement of air and bring the refreshing feeling of an outdoor breeze into the room.

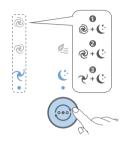

Quiet Sleep((+ →) mode:

Experience a cool and peaceful night's sleep with the Quiet Sleep mode. This mode gradually decreases the fan speed to the lowest setting over 30 minutes, helping you fall asleep naturally while also conserving energy.

Under this mode, you can also select the fan speed 1 ?, fan speed 2 @, or fan speed 3 @ by touching the \$\$ button according to your preference.

Using the timer function


When the Tower Fan is On/Off, touch the ① button repeatedly to set a timer from 1 to 7 hours. When the timer ends, the Tower fan will stop or start operating automatically.

	l ho	ur	2	hou	ırs	3	hou	ırs	4	hou	ırs	5	hou	ırs	6	hou	ırs	7	hοι	ırs
																				4h
•	0	0	0	•	0	•	•	0	0	0			0	•	0	•	•	•	•	•

After the set timer has ended:


When the Tower Fan is off

• The Tower Fan will be turned on automatically.

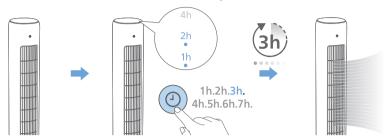

When the Tower Fan is on


• The Tower Fan will be off automatically.

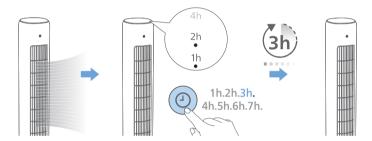

Rotation

Touch the + button on the appliance, or press the \smile button on the remote control to activate the rotation feature in your Tower fan.


→ The **~** indicator lights up.

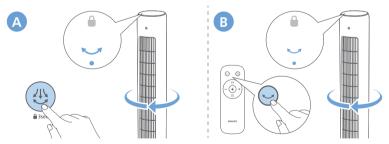


Setting the child lock

Touch and hold the for 3 seconds on the appliance, or press the button on the remote control to activate the child lock.

- → The indicator lights up.
- → All the other buttons are unresponsive except power on/off.

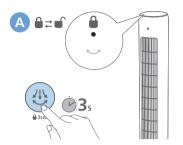

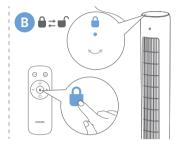

Using the light on/off function

You can touch and hold the **\$** and \odot button for 3 seconds to turn on, or turn off the light of the display panel.



5 Cleaning and maintenance

Note:

- Always unplug the appliance before you clean it.
- Never immerse the appliance in water or any other liquid.
- Never use abrasive, aggressive, or flammable cleaning agents such as bleach or alcohol to clean any part of the appliance.

Regularly clean the outside of the Tower Fan to prevent dust from collecting.

 Use a soft, dry cloth to clean both the exterior of the appliance and the air outlet.

6 Storage

- 1 Turn off the appliance and unplug from the power socket.
- 2 Clean the appliance.
- **3** Store the appliance in a cool, dry location.
- 4 Always thoroughly wash hands after cleaning.

7 Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Center in your country.

Problem	Possible solution
My Tower Fan fails to turn on or off.	 If the appliance can't be turned on, please ensure the power adapter is plugged in properly or try another power socket. If the appliance can't be turned off or change modes, check if the childlock is activated on the appliance. When childlock is activated, the appliance doesn't respond to control panel nor remote control until you deactivate the childlock. You can touch Rotation Button for 3 sec on the control panel or Lock Button on the remote control. If the appliance still doesn't work, contact the Consumer Care Center in your country.
The remote control is not working.	 Check if the childlock is activated on the appliance, the appliance does not respond to remote control when childlock is activated. Check if batteries are properly installed in the remote control or replace with new batteries. Make sure the remote control aims to the signal receiver of the appliance and clear out the objects that may block singals.
My Towe Fan is not producing sufficient amount of air or very weak.	 Ensure the appliance is set to the highest fan speed for maximum air circulation. Allow the appliance to fully circulate the air throughout the room, this may take few minutes. Ensure all the air inlet and outlet grilles are unobstructed.

Problem	Possible solution
The Tower Fan produces a strange/burnt smell.	The first few times you use the appliance, it may produce a plastic smell. This is normal on new appliance. However, if the appliance produces a burnt smell, turn off the appliance and unplug immediately, then contact the Consumer Care Center in your country.
My Tower Fan is too loud.	 The higher the fan speed setting of the appliance, the louder the noise will be. Set to lower fan speed, the noise will be reduced. If there is abnormal sound, contact the Consumer Care Center in your country. If anything drops into air outlet, it may also cause abnormal loud sound.Immediately turn off appliance, and get the foregin objects out of the appliance.
My appliance is loud at Quiet Sleep mode.	To optimize cooling performance in Quiet Sleep mode, your Tower Fan runs at a higher fan speed for the first 30 minutes, gradually decreasing to a lower fan speed. The noise reduces accordingly. You could also choose the lowest fan speed for consistent airflow and lower sound level.
The Tower Fan base is wobbly or vibrating.	 Check if the appliance is placed on the flat floor or surface. Check if any foreign objects beneath the appliance. Check if the base of the appliance is properly assembled, check the chapter "Installing the fan base".

8 Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website **www.philips.com/support**.

Information to identify the CX5535 to which the information relates to								
Description	Symbol	Value	Unit					
Maximum fan flow rate	F	37.3	m³/min					
Fan power output	Р	38.7	W					
Service value	SV	1.0	(m³/min)/W					
Standby power consumption	P _{SB}	0.2	W					
Fan sound power level	Lwa	60	dB(A)					
Maximum air velocity	С	4.1	meters/sec					
Measurement standard for service value	IEC60879:2019							
Contact details for obtaning more information	DAP B.V.							
Tussendiepen 4 a, 9206AD Drachten, The Nether								



PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

2023 © Versuni Holding B.V.

CX5535_00_user manual_v1.0 (28/11/2023)

