

PHILIPS

Match your LED
lights with halogen

Ultinon Classic

Type of lamp: H7, H18

3500 K warm white light

+80% more brightness

Easy-fit LED bulb

11972U2510C2



Colour-match your style

Classic warm white LED bulbs

Switch your vehicle's headlights to Philips Ultinon Classic LEDs and experience the warmth of classic halogen lighting plus the performance of LEDs! These easy-to-install bulbs mean that you can now upgrade to LEDs without the fuss!*

3500 K classic white light

- Enjoy the 3500 K warmth of classic light

Better light performance

- 80% more brightness for high visibility**

Quick, easy installation


- Plug-and-play installation

Reliable Philips quality

- Compliant with automotive standards
- Long-lasting performance

Highlights

3500 K warm white light

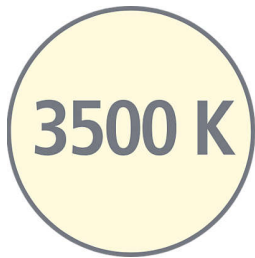

Upgrade your headlights without compromising your look! Philips Ultinon Classic LED bulbs project an elegant, warm white light, comparable to that of halogen headlights, giving your car a timeless appearance. Colour-match them with your other front lights and benefit from the improved brightness of LEDs. Experience the perfect blend of classic style and modern technology.

Beam outperforms halogen



Philips Ultinon Classic LED bulbs are designed to deliver a superior light beam compared to halogen bulbs in a compact, universal format. Leveraging the latest innovations in LED technology, they offer the same luminous flux as standard ECE halogen bulbs while significantly enhancing beam performance with lower energy consumption. With up to 80% extra brightness**, Philips Ultinon Classic LED bulbs

provide drivers with a better view of the road, making it easier to spot obstacles and drive safely.

Plug-and-play installation



With Philips Ultinon Classic LED bulbs, installation is so quick and easy that retrofitting them is child's play! There's no need for compatibility checks or adapter rings: Philips Ultinon Classic LED bulbs come with an ultra-compact body and an integrated IEC 60061-compatible base. Their direct-fit design features the same footprint as halogen bulbs, enabling straightforward installation in tight spaces. They fit easily and ensure broad compatibility with most vehicle models*.

Compliant with automotive standards



Technologically advanced, Philips' automotive lighting products have been renowned in the automotive industry for over 100 years. We are

aware that the performance of our products depends on their compatibility with the demands of today's automotive environment, so we design our products as closely as possible to industry standards. Our Philips Ultinon Classic LED bulbs comply with EMI standards for electromagnetic interference. Precision-engineered to withstand the rigours of modern automotive life, our bulbs won't disrupt the operation of other vehicle components.

Long-lasting performance



Philips Ultinon Classic LED bulbs are rigorously tested and checked to ensure long-term durability and long-lasting performance. Our range offers up to three times the life of a comparable halogen bulb and homogeneous light throughout the bulb's lifespan. The Philips Ultinon Classic range is covered by a Philips two-year warranty***. Enjoy the best of today's technology with Philips Ultinon Classic LED bulbs.

Ultinon Classic

Match your LED lights with halogen

LUM11972U2510C2/10

Specifications

Marketing specifications

Product highlight: Traditional warm white light

Expected benefits: Classic white LED, Colour-match existing bulbs, Easy-fit

Product description

Application: High Beam, Low Beam, Fog

Base: PC26d/PY26d-1

Designation: LED H7/H18 11972 12 V U2510 X2

Designation LED Type: [≈H7], [≈H18]

Operating Temperature: -40°C/+85°C

Range: Ultinon Classic

Technology: LED

Type: H7, H18

ECE R37 certification: No

ECE R10 certification

Polarity free

Lifetime

Life time: 1500 hours

Light characteristics

Colour temperature: 3500 K

Lumens: 1600 lm

Electrical characteristics

Wattage: 16 W

Voltage: 12 V

Ordering information

Order entry: 11972U2510C2

Ordering code: 2719131

Gross weight per piece: 52 g

Packaging Data

Packaging type: C2

EAN1: 8719018027191

EAN3: 8719018027207

Packed product information

Length: 9.15 cm

Width: 4.6 cm

Height: 7.65 cm

Pack Quantity: 2 pcs

MOQ (for professionals): 4 sets/8 pcs

Outer pack information

Length: 20.2 cm

Width: 10.5 cm

Height: 10 cm

