

PHILIPS



Beard trimmer

Beardtrimmer series 3000

0.5mm precision settings

Titanium-coated Blades

90 min cordless use/1h charge

Lift & Trim system



BT3232/15

Fast and precise trim for easy styling

Self-sharpening titanium blades

This trimmer with the innovative Lift & Trim system lifts and captures more lowlying hairs for efficient, even trimming results. This way you will easily achieve the 3-day stubble, short beard or long beard look you want.

Easy to use

- Longer lasting battery
- Simple maintenance
- Easy to grip
- Store and go
- Cordless use for up to 90 mins
- Lights indicate when battery is low, empty, full or charging
- Adjusts to different length settings

Easy even trimming

- Trims evenly and captures low-lying hairs
- Skin-friendly blades for smooth skin
- Extra sharp blades for an extra sharp result

Built to last

- Warranty for purchase protection

Beardtrimmer series 3000

Beard trimmer

BT3232/15

Highlights

Lift & Trim system



Perfect for stubble, the Philips beard trimmer features our new Lift & Trim system: a comb that lifts and guides the hairs to the level of the blades for an even trim.

Titanium blades



Designed to stay as sharp and effective as on day 1, the self-sharpening, titanium-coated steel blades deliver a protective trim, time after time.

DuraPower technology




This beard trimmer uses DuraPower technology to reduce friction on the blades, preserve the motor, and keep your battery going four times longer.

Skin-friendly blades



Designed to prevent scratches and irritation, the blades have rounded tips for smoother skin contact.

Precision Dial - 20 settings

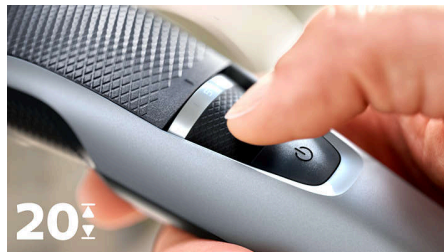

An effective beard trimmer that cuts to the exact length you're after. Just spin the zoom wheel to one of 20 length settings between 0.5 and 10mm in 0.5mm increments.

90 min corded/cordless use



Don't get tangled up in your stubble trimmer – a 1 hour charge provides up to 90 minutes of cordless grooming time. Or keep it plugged in


for uninterrupted trimming. The 5 minute quick charge function gives you enough power for one trim.

Battery indicators



The battery indicators in this trimmer let you know what your battery status is: Low, empty, charging or full. This way, you can charge your trimmer on time and fully, so you won't end up with an empty battery in the middle of your trim.

Easy to clean

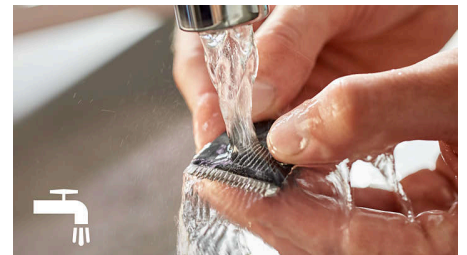

Detach the head of your Philips beard trimmer and rinse it under the tap for easy cleaning. Then dry it before you put it back on the appliance.


Beardtrimmer series 3000

Beard trimmer

BT3232/15

Highlights

Ergonomic design

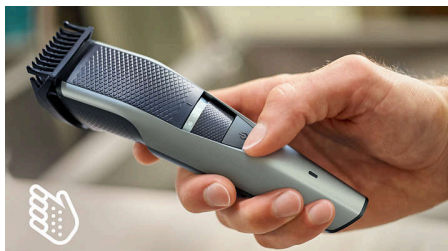

A fast trimmer that's comfortable to hold and use. So you can handle those hard-to-reach areas more easily.

Travel and storage pouch



The included travel pouch keeps everything together when you're at home, at the gym or on-the-go.

Built to last



All of our grooming products are built to last. They come with a 2 year warranty, never need to be oiled and are compatible with any voltage worldwide.

Beardtrimmer series 3000

Beard trimmer

BT3232/15

Specifications

Create the look you want

Number of length settings: 20 integrated length settings

Accessories

Maintenance: Cleaning brush

Pouch: Storage pouch

Comb: Lift & Trim system

Power

Run time: 90 minutes

Charging: 1 hour full charge, 5 min quick charge,

USB-A (no adapter included)

DuraPower technology: 4x longer battery life

Battery type: Li-ion

Maximum power consumption: 5 W

Input voltage: 5 V

Design

Handle: Ergonomic Easy Grip

Service

2-year warranty

No oil needed

Cutting system

Cutter width: 32 mm

Cutting element: Titanium blades

Range of length settings: 0.5 up to 10 mm

Precision (size of steps): By 0.5 mm

Non-scratching teeth: For more comfort

Ease of use

Cleaning: Rinseable attachments

Display: Battery low indicator, Charging indicator, Battery empty indicator, Battery full indicator

Zoom wheel: Easily adjust length settings

Operation: Cordless use

