

Philips NeoPix 110  
Home Projector

65" display in True HD 720p

Wi-Fi screen Mirroring  
Multimedia Player  
Easy Connection

NPX110/INT



## Compact and Wireless

NeoPix 110 offers an enjoyable 720p HD image up to 65". Compact with a large choice of connectors (HDMI, USB), as well as Dual band Wi-Fi screen mirroring. Built-in multimedia player for movies, pictures and integrated speaker.

### Easy Connection

- Smart Wi-Fi screen mirroring
- Built-in media player
- Fully connectable options


### Beautiful display

- Advanced LED Light Source
- NeoPix 110 in True HD 720p
- Personalize your projection

**PHILIPS**

# Highlights

## Advanced LED Light Source

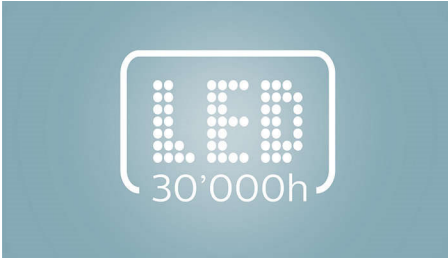


The powerful LED light source displays rich, vivid colors and will last up to 30,000 hours. You won't need to replace it since it lasts 20 years with an average usage of 4 hours per day! Additionally, the power consumption is far lower than a regular lamp based projector, which means you benefit from a bigger screen and fully immersive experience, all through an eco friendly device!

## NeoPix 110 in True HD 720p



The NeoPix 110 offers True 720p HD for watching all your favourite movies and TV shows on a 65" screen. The short throw engine helps to reduce the projection distance to get an even bigger picture when it's only 2 meters away from the wall. The NeoPix 110 is equipped with an integrated stand screw and can be mounted on a tripod.


## Smart Wi-Fi screen mirroring

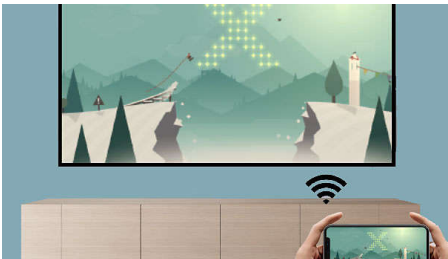

Connect your mobile devices such as a tablets, smartphones or even computers wirelessly to mirror and share your contents. Videos on your phones? No worries, just cast it through Wi-Fi! (IOS, Android, Mac and PC). With the Dual band (2.4 and

5GHz), your connection will get even more stable and faster for smoother playback.

## Personalize your projection

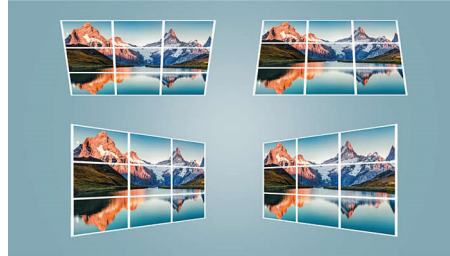

Optimize your placement options with image options! The keystone correction and focus technology enable you to customize images according to your preferences and position your projector at your desired distance.

## Built-in media player



Thanks to the integrated media player, you have everything at your fingertips: browse and watch all your videos, listen to your music or project your latest holiday photos. Just plug your USB Stick or hard drive to enjoy all your local content.

## Fully connectable options



Connect any media device: set-top boxes, computers, game consoles and streaming boxes such as Fire Stick or Apple TV thanks to its built-in USB, HDMI. Enough of wires! Connect your smart dongles (Amazon Fire Sticks, Roku...) to the USB power out (5V1A) and get rid of an external adapter.

# Specifications

## Technology

- Display technology: LCD
- Light source: LED
- Brightness: up to 100 lumens
- Contrast ratio: 3000:1
- Resolution: 1280 x 720 pixel
- Throw ratio: 1,47:1
- Aspect ratio: 16:9
- Focus adjustment: Manual
- Integrated media player
- Keystone correction: Manual
- LED lifetime: Up to 30.000h
- Projection image size: up to 65" (165cm)
- Projection distance: 65" @ 83" distance (212cm)
- Resolution supported: 1920 x 1080 pixel
- Recommended usage: 65" max in dark room

## Connection

- Wi-Fi: Dualband 2.4GHz and 5GHz, Wireless screen mirroring
- WLAN IEEE 802.11 b/g/n
- Bluetooth: No
- HDMI: x1
- USB: x1
- micro-USB: No
- VGA: No
- Micro SD: x1
- SPDIF: No
- Audio out: 3.5 mm jack
- AV in
- DC-IN

## Sound

- Stereo Speaker: No
- Internal speaker: 3W
- Bluetooth speaker connection: No
- 2.1: No
- Surround mode, Equalization: No

## Dimensions

- Weight: 0.5kg
- unpacked (WxDxH): 146x123x62mm

## Power source

- Power consumption: Operation: 42W
- DC-in: 24 V, 1.75A



Issue date 2024-02-10

Version: 2.2.2

EAN: 76 40186 96778 5

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\*\*Color brightness (color light output) and white brightness (white light output) will vary depending on projector settings. Color light output measured in accordance with IDMS 15.4; white light output measured in accordance with ISO 21118.

\* The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.