

Philips Monitor  
LCD monitor

### V Line

27" (68.6 cm)  
1920 x 1080 (Full HD)

271V8LB



## Vivid and crisp imagery that pushes boundaries

This monitor gives an unmatched viewing experience. Not only is it equipped with essential features, but it also has ones that stand out like its 100hz refresh rate, Adaptive Sync, LowBlue Mode, Flicker-Free, and VESA mount, and more.

#### Perfectly designed for your space

- Compact design saves space

#### Easy on the eyes

- EasyRead mode for a paper-like reading experience
- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity

#### Experience true multimedia

- HDMI ensures universal digital connectivity

#### Vivid pictures every time


- SmartContrast for rich black details
- 16:9 Full HD display for crisp detailed images
- SmartImage presets for easy optimized image settings
- VA display delivers awesome images with wide viewing angles
- Effortlessly smooth action with Adaptive-Sync technology
- 100Hz refresh rates for ultra-smooth images

# PHILIPS

LCD monitor  
V Line 27" (68.6 cm), 1920 x 1080 (Full HD)

# Highlights

## VA display

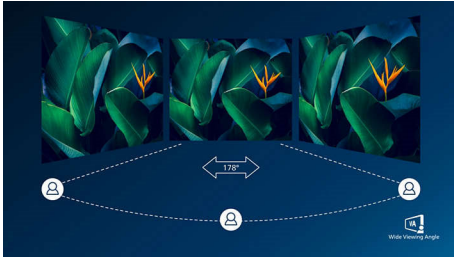

Philips VA LED display uses an advanced multi-domain vertical alignment technology which gives you super-high static contrast ratios for extra vivid and bright images. While standard office applications are handled with ease, it is especially suitable for photos, web-browsing, movies, gaming, and demanding graphical applications. It's optimized pixel management technology gives you 178/178 degree extra wide viewing angle, resulting in crisp images.

## 100Hz Fast refresh



This Philips display refreshes the screen image up to 100 times per second which makes this monitor much faster than a standard display. With a 100Hz frame rate, gamers are able to find those critical images on the screen that show enemy movement in an ultra-smooth motion so that they are easily targetable.

## 16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colors expect a true to life picture.

## SmartImage



SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power

271V8LB/27


savings. All in real time with the press of a single button!

## SmartContrast



SmartContrast is a Philips technology that analyzes the contents you are displaying, automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

## Adaptive-Sync technology

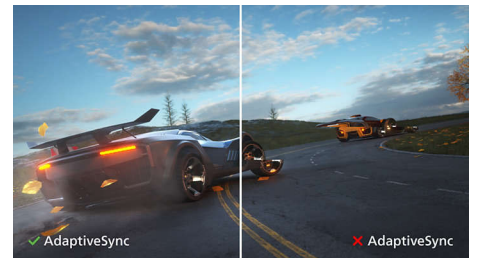

Gaming shouldn't be a choice between choppy gameplay or broken frames. Get fluid, artifact-free performance at virtually any framerate with Adaptive-Sync technology, smooth quick refresh and ultra-fast response time.



Wide Viewing Angle



SmartImage™



Adaptive-Sync



Flicker-free



LowBlue Mode



EasyRead



HIGH DEFINITION MULTIMEDIA INTERFACE



100Hz

# Specifications

## Connectivity

- Signal Input: VGA (Analog), HDMI 1.4
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Audio out
- HDCP: HDCP 1.4 (HDMI)

## Picture/Display

- Panel Size: 27 inch / 68.6 cm
- Aspect ratio: 16:9
- LCD panel type: VA LCD
- Backlight type: W-LED system
- Pixel pitch: 0.3114 x 0.3114 mm
- Brightness: 250 cd/m<sup>2</sup>
- Display colors: 16.7 M (8 bit)
- Contrast ratio (typical): 4000:1
- SmartContrast: Mega Infinity DCR
- Response time (typical): 4 ms (GtG)\*
- Viewing angle: 178° (H) / 178° (V), @ C/R &gt; 10
- Maximum resolution: 1920 x 1080 @ 100 Hz\*
- Effective viewing area: 597.9 (H) x 336.3 (V)
- Scanning Frequency: 30 - 115 kHz (H) / 48 - 100 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 81.59 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- EasyRead
- Adaptive sync

## Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 11 / 10 / 8.1 / 8
- User convenience: Power On/Off, Menu/OK, Brightness/UP, Input/Down, SmartImage/Back
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)

## Stand

- Tilt: -5/20 degree

## Power

- Power supply: Built-in, 100-240VAC, 50-60Hz
- Off mode: 0.3 W (typ.)
- On mode: 23.9 W (typ.)
- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

## Dimensions

- Packaging in mm (WxHxD): 730 x 446 x 123 mm
- Product without stand (mm): 614 x 367 x 53 mm
- Product with stand(max height): 614 x 457 x 231 mm

## Weight

- Product with packaging (kg): 5.35 kg
- Product with stand (kg): 3.74 kg
- Product without stand (kg): 3.28 kg

## Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0°C to 40 °C
- MTBF: 30,000 (Excluded backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60 °C

## Sustainability

- Environmental and energy: RoHS
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC / BFR free housing

## Compliance and standards

- Regulatory Approvals: CB, CE Mark, CCC, CECP, CEL, FCC Class B, ICES-003

## Cabinet

- Color: Black
- Finish: Textured



Issue date 2024-03-25

Version: 1.1.2

UPC: 6 09585 25677 4

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* The maximum resolution works for HDMI input only.  
\* Response time value equal to SmartResponse  
\* The monitor may look different from feature images.