

Philips  
LCD monitor

### V Line

27" (68.6 cm)  
1920 x 1080 (Full HD)

271V8AW



## Vivid, crisp images beyond boundaries

Philips V line wide-view monitor gives viewing beyond boundaries, great value with essential features. Adaptive-Sync delivers smooth video display. Features like anti-glare, LowBlue mode and flicker-free for easy-on-the-eyes.

#### Perfectly designed for your space

- Compact design saves space
- VESA mount allows for flexibility

#### Easy on the eyes

- EasyRead mode for a paper-like reading experience
- Less eye fatigue with Flicker-Free technology
- LowBlue Mode for easy-on-the-eyes productivity

#### Experience true multimedia

- Built in stereo audio for multimedia experience
- HDMI ensures universal digital connectivity

#### Vivid pictures every time

- SmartContrast for rich black details
- IPS LED wide view technology for image and colour accuracy
- SmartImage pre-sets for easy optimised image settings
- Effortlessly smooth action with Adaptive-Sync technology

# PHILIPS

LCD monitor  
V Line 27" (68.6 cm), 1920 x 1080 (Full HD)

271V8AW/01

# Highlights

## IPS technology



IPS displays use an advanced technology that gives you extra-wide viewing angles of 178/178 degrees, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays give you remarkably crisp images with vivid colours, making them ideal not only for Photos, movies and web browsing, but also for professional applications that demand colour accuracy and consistent brightness at all times.

## SmartContrast




SmartContrast is a Philips technology that analyses the contents you are displaying, automatically adjusting colours and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

## SmartImage



SmartImage is an exclusive leading edge Philips technology that analyses the content displayed on your screen and optimises your display performance. This user-friendly interface allows you to select various modes, like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimises the contrast, colour saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time at the touch of a single button!

## Adaptive-Sync technology

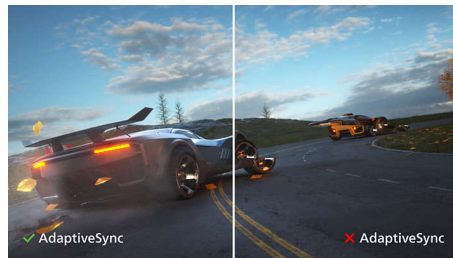

Gaming shouldn't be a choice between choppy gameplay or broken frames. Get fluid, artefact-free performance at virtually any frame rate with Adaptive-Sync technology, smooth quick refresh and ultra-fast response time.

## Flicker-Free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience

flicker on their screen which causes eye fatigue. Philips Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

## LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave-length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, the Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

## EasyRead mode



EasyRead mode for a paper-like reading experience

## HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. An HDMI cable enables high-quality digital video and audio to be transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).



# Specifications

## Connectivity

- Signal Input: VGA (Analogue), HDMI (digital, HDCP)
- Signal Input: VGA (Analogue), HDMI 1.4
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Audio out, PC audio-in
- HDCP: HDCP 1.4 (HDMI)

## Picture/Display

- Panel Size: 27 inch/68.6 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.311 x 0.311 mm
- Brightness: 250 cd/m<sup>2</sup>
- Display colours: 16.7 M
- Contrast ratio (typical): 1000:1
- SmartContrast: Mega Infinity DCR
- Response time (typical): 4 ms (GtG)\*
- Viewing angle: 178° (H)/178° (V), @ C/R > 10
- Maximum resolution: 1920 x 1080 @ 75 Hz\*
- Effective viewing area: 597.9 (H) x 336.3 (V) mm
- Scanning Frequency: 30–83 kHz (H)/56–76 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 82 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- EasyRead
- Adaptive sync

## Convenience

- Built-in Speakers: 2W x 2
- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 11/10/8.1/8
- User convenience: Power On/Off, Menu/OK, Input/Down, SmartImage/Back, Volume
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)

## Stand

- Tilt: -5/20 degree

## Power

- Power supply: Built-in, 100–240 VAC, 50–60 Hz
- Off mode: 0.3 W (typ.)
- On mode: 35.39 W (typ.)
- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)

## Dimensions

- Product with stand (mm): 613 x 456 x 231 mm
- Packaging in mm (W x H x D): 695 x 480 x 126 mm
- Product without stand (mm): 613 x 363 x 50 mm

## Weight

- Product with packaging (kg): 6.15 kg
- Product with stand (kg): 3.74 kg
- Product without stand (kg): 3.28 kg

## Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 (Excluded backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

## Sustainability

- Environmental and energy: RoHS, Mercury Free
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: CB, CE Mark, EAC, FCC, ICES-003, TUV Ergo, TUV/GS

## Cabinet

- Colour: White
- Finish: Textured

## What's in the box?

- Cables: HDMI cable, Power cable
- Monitor with stand
- User Documentation



Issue date 2024-04-24

Version: 2.2.1

EAN: 87 12581 80440 4

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.

\* The maximum resolution works for HDMI input only.

\* Response time value equal to SmartResponse

\* The monitor may look different from feature images.