

Philips Curved Business  
Monitor  
32:9 SuperWide curved  
monitor with USB-C

**5000 series**

49 (48.8"/124 cm diag.)  
5120 x 1440 (Dual QHD)

**49B2U5900CH**



## Redefining workflow productivity

Welcome to a more efficient workspace. To facilitate everyday workflow, this monitor's large 32:9 SuperWide screen is equipped with a new busy light and tilting webcam feature that helps you flow between tasks with ease.

### Superb Picture Quality

- VA display delivers awesome images with wide viewing angles
- DisplayHDR 400 for more lifelike and outstanding visuals

### Single cable USB-C connection

- RJ-45 to USB-C gives easy network connection with security
- USB 3.2 high-speed data transfer

### Designed for the way you work

- Tilt, swivel and height-adjust for an ideal viewing position
- Securely sign in with pop-up webcam with Windows Hello™
- Eyesafe-certified blue light protection and colour accuracy
- 32:9 SuperWide screen designed to replace multiscreen setups
- Curved display design for a more immersive experience
- Adjustable webcam: for comfortable video conferencing.
- Busylight: for setting your work status
- Earphone hook: for customisable storage

**PHILIPS**

32:9 SuperWide curved monitor with USB-C  
5000 series 49 (48.8"/124 cm diag.), 5120 x 1440 (Dual QHD)

49B2U5900CH/00


# Highlights

## Curved display design




Desktop monitors offer a personal user experience, which suits a curved design very well. The curved screen provides a pleasant yet subtle immersion effect, which focuses on you at the centre of your desk.

## 32:9 SuperWide

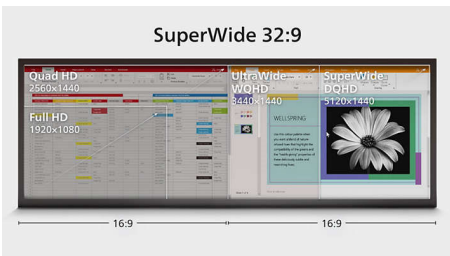

32:9 SuperWide 49" screen with 5120 x 1440 resolution is designed to replace multiscreen setups for a massive wide view. It's like having two 27" 16:9 Quad HD displays side by side. SuperWide monitors offer the screen area of dual monitors without the complicated setup.

## DisplayHDR 400

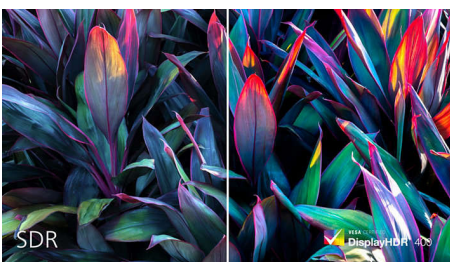

VESA-certified DisplayHDR 400 delivers a significant step up from normal SDR displays. Unlike, other "HDR-compatible" screens, true DisplayHDR 400 produces astonishing brightness, contrast and colours. With global

dimming and peak brightness up to 400 nits, images come to life with notable highlights while featuring deeper, more nuanced blacks. It renders a fuller palette of rich new colours, delivering a visual experience that engages your senses.

## USB-C Docking with RJ45



Simplify all peripherals from monitor to PC using one-cable docking USB Type-C connector, including networking, high-resolution video output from PC to monitor, and surfing on the Internet without an additional network cable, even without a LAN port on your notebook. RJ45 connection through USB-C offers a fast and secure connection when needed. Getting the fastest data speeds allows you to transfer data from a HDD to your PC faster than ever. Additionally, USB-C with power delivery can even enable you to power and charge your notebook from the monitor, eliminating the need for extra power cables.

## High-speed data transfer

USB 3.2 high-speed data transfer

## SmartKVM



Unlike traditional built-in KVM monitor buttons, the smart KVM allows for switching


between sources with the click of a button on your keyboard. When all devices are properly connected, users can easily switch between sources by clicking the "Ctrl" key three times.

## TUV Rheinland Eyesafe



Philips display meets the TUV Rheinland Eyesafe® standard to truly protect you from long exposure to blue light. The always-on blue light filter not only helps reduce digital eye strain, but also guarantees colour integrity.

## VA display

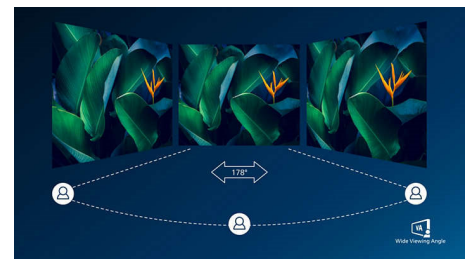

The Philips VA LED display uses an advanced multi-domain vertical alignment technology that gives you super-high static contrast ratios for extra-vivid and bright images. While standard office applications are handled with ease, it is especially suitable for photos, web browsing, films, gaming and demanding graphical applications. Its optimised pixel management technology gives you a 178/178 degree extra-wide viewing angle, resulting in crisp images.



# Specifications

## Connectivity

- Signal Input: HDMI 2.0 x 2, DisplayPort 1.4 x 1, USB-C x 1 (upstream, DP Alt mode, Data, PD up to 100 W)
- Sync Input: Separate Sync
- Audio (In/Out): Audio out/Microphone in combo jack
- RJ45: Ethernet LAN up to 1 G\*, Wake on LAN
- HDCP: HDCP 1.4 (HDMI/DisplayPort/USB-C), HDCP 2.2 (HDMI/DisplayPort/USB-C)
- HBR3: HBR3 (USB-C/DisplayPort)
- USB Hub: USB 3.2 Gen 1/5 Gbps, USB-B upstream x 1, USB-A downstream x 2 (with 1 for fast-charge B.C 1.2), USB-C downstream x 1 (Data, PD 15 W)

## Picture/Display

- Panel Size: 48.8"/124 cm
- Aspect ratio: 32:9
- LCD panel type: VA LCD
- Backlight type: W-LED system
- Pixel pitch: 0.2328 x 0.2328 mm
- Brightness: 450 cd/m<sup>2</sup>
- Display colours: 1.07 B (8-bit + FRC)
- Colour gamut (typical): NTSC 97%\*, sRGB 119%\*
- Contrast ratio (typical): 3000:1
- SmartContrast: 80,000,000:1
- Response time (typical): 4 ms (Grey to Grey)\*
- Viewing angle: 178° (H)/178° (V), @ C/R > 10
- Picture enhancement: SmartImage
- Maximum resolution: 5120 x 1440 @ 75 Hz
- Effective viewing area: 1191.936 (H) x 335.232 (V) - at a 1800R curvature\*
- Scanning Frequency: HDMI: 30 - 140 kHz (H)/48-75 Hz (V); DP: 30 - 114 kHz (H)/48-75 Hz (V); USB-C: 30 - 114 kHz (H)/30 - 75 Hz (V)
- sRGB
- Delta E: < 2
- Flicker-free
- Pixel Density: 109 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%

- SmartUniformity: 93 ~ 105%
- EasyRead
- Adaptive sync
- HDR: DisplayHDR 400 certified

## Power Delivery

- Max power delivery: Up to 100 W\* (5 V/3 A, 7 V/3 A, 9 V/3 A, 10 V/3 A, 12 V/3 A, 15 V/3 A, 20 V/4.8 A)
- Version: USB PD version 3.0

## Convenience

- Built-in Speakers: 3 W x 2
- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 11/10/8.1/8
- User convenience: Mic, SmartImage, Input, User, Menu, Power On/Off
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, French, Finnish, German, Greek, Hungarian, Italian, Japanese, Korean, Portuguese, Polish, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, Earphone hook, VESA mount (100 x 100 mm)
- Control software: SmartControl
- MultiView: PIP/PBP mode, 2 x devices
- Built-in webcam: Pop-up 5.0 megapixel camera with a microphone and LED indicator (for Windows Hello)
- Busylight
- KVM: Yes (USB-C/USB-B)

## Stand

- Height adjustment: 150 mm
- Swivel: +/-30 degree
- Tilt: -5/15 degree

## Power

- ECO mode: 39 W (typ.)
- Power supply: Built-in, 100-240 VAC, 50-60 Hz
- Off mode: Zero watts with AC switch

- On mode: 46.1 W (typ.) (Energy Star test method)
- Standby mode: 0.8 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)
- Energy Label Class: F

## Dimensions

- Packaging in mm (W x H x D): 1290 x 300 x 475 mm
- Product without stand (mm): 1193 x 373 x 164 mm
- Product with stand (max height): 1193 x 583 x 268 mm

## Weight

- Product with packaging (kg): 19.38 kg kg
- Product with stand (kg): 15.21 kg kg
- Product without stand (kg): 11.58 kg kg

## Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0°C to 40 °C
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60 °C
- MTBF (demonstrated): 70,000 hrs (excluded backlight)

## Sustainability

- Environmental and energy: PowerSensor, LightSensor, EnergyStar 8.0, EPEAT\*, RoHS, TCO Certified Edge
- Post-consumer recycled plastic: 85%
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC/BFR free housing

## Compliance and standards

- Regulatory Approvals: CB, CE Mark, FCC Class B, ICES-003, CU-EAC, EAEU RoHS, TUV Ergo, TUV/GS, TUV Eyesafe certified, cETLus

# Specifications

## Cabinet

- Finish: Texture
- Foot: Black
- Front bezel: Black
- Rear cover: Black

## What's in the box?

- Cables: HDMI cable, DisplayPort cable, USB-C to C/A Y cable, Power cable
- Monitor with stand
- User Documentation



Issue date 2024-04-24

Version: 5.5.1

EAN: 87 12581 80257 8

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Radius of the arc of the display curvature in mm

\* Response time value equal to SmartResponse

\* NTSC Area based on CIE 1976

\* sRGB Area based on CIE1931

\* Activities such as screen sharing and online streaming over the Internet can impact your network performance. Your hardware and network bandwidth will determine the overall audio and video quality.

\* For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.

\* If your Ethernet connection seems slow, please enter the OSD menu and select USB 3.0 or a higher version that can support the LAN speed up to 1G.

\* For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode

\* The USB-C power delivery of this display is up to 100 W (96 W in typical). The maximum power delivery will depend on your device.

\* EPEAT rating is valid only where Philips registers the product. Please visit <https://www.epeat.net/> for registration status in your country.

\* When calculating energy costs saving from PowerSensor, both USB and Power delivery are excluded.

\* The monitor may look different from feature images.