

Philips Monitor  
Full HD LCD monitor

### 3000 series

32 (31.5" / 80 cm diag.)  
1920 x 1080 (Full HD)

32E1N3100LA



## Collaboration, Simplified.

The cable management setup of this monitor facilitates a neat working environment through a singular HDMI Cable. Through this cable, high-quality digital media can be transmitted and heard through its top-notch, built-in speaker system.

### Features designed for you

- EasySelect menu toggle key for quick on-screen menu access
- Built-in stereo speakers for multimedia
- EasyRead mode for a paper-like reading experience
- Cable management reduces cable clutter for neat workspace
- LowBlue mode and Flicker-free easy-on-the eyes viewing

### Superb Picture Quality


- SmartContrast for rich black details
- 16:9 Full HD display for crisp detailed images
- VA display delivers awesome images with wide viewing angles
- SmartImage game mode optimized for gamers
- 1ms (MPRT) fast response for crisp image and smooth gameplay

# PHILIPS

Full HD LCD monitor  
3000 series 32 (31.5" / 80 cm diag.), 1920 x 1080 (Full HD)

# Highlights

## VA display

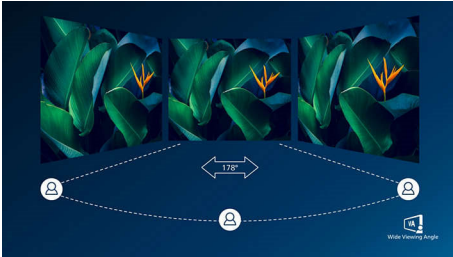

Philips VA LED display uses an advanced multi-domain vertical alignment technology which gives you super-high static contrast ratios for extra vivid and bright images. While standard office applications are handled with ease, it is especially suitable for photos, web-browsing, movies, gaming, and demanding graphical applications. It's optimized pixel management technology gives you 178/178 degree extra wide viewing angle, resulting in crisp images.

## 16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colors expect a true to life picture.

## 1ms MPRT fast response



MPRT (motion picture response time) is more intuitive way to describe the response time, which directly refers the duration from seeing blurry noise to clean and crisp images. Philips gaming monitor with 1 ms MPRT effectively eliminates smearing and motion blur, delivers sharper and precise visuals to enhance gaming experience. Best choice for playing thrilling and twitch-sensitive games.

## SmartImage Game mode



The new Philips gaming display has quick access OSD fine tuned for gamers, offering you multiple options. "FPS" mode (First person shooting) improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode adapts display with fastest response time, high color, along with image adjustments. "RTS" mode (Real time strategy) has a special SmartFrame mode which enables highlighting of specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customized settings based on different games, ensuring best performance.

32E1N3100LA/27

## LowBlue Mode & Flicker-free




Our LowBlue Mode and Flicker-free technology have been developed to reduce eye strain and fatigue often caused by long hours in front of a monitor.

## Built-in stereo speakers



A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

## Cable management

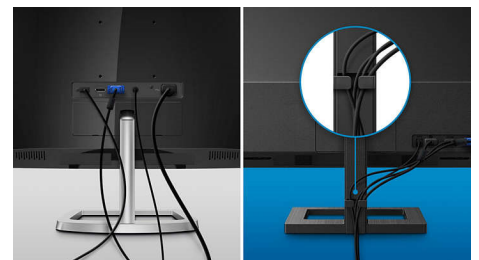

Cable management is an intimate design that maintains tidy workspace by organizing cables and wires required for the operation of a display device.



# Specifications

## Connectivity

- Signal Input: VGA x 1, HDMI 1.4 x 2
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Audio-in, Audio out
- HDCP: HDCP 1.4 (HDMI)

## Picture/Display

- Panel Size: 31.5 inch / 80 cm
- Aspect ratio: 16:9
- LCD panel type: VA LCD
- Backlight type: W-LED system
- Pixel pitch: 0.36375 x 0.36375 mm
- Brightness: 300 cd/m<sup>2</sup>
- Display colors: 16.7 M
- Color gamut (typical): NTSC 103.65%\*, sRGB 121.33%\*
- Contrast ratio (typical): 3000:1
- SmartContrast: Mega Infinity DCR
- Response time (typical): 4 ms (Gray to Gray)\*
- Viewing angle: 178° (H) / 178° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage game
- Maximum resolution: 1920 x 1080 @ 75 Hz\*
- Effective viewing area: 698.4 (H) x 392.85 (V)
- Scanning Frequency: 30 - 85 kHz (H) / 48 - 75 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 69.93 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 40%
- MPRT: 1 ms
- EasyRead
- Adaptive sync

## Convenience

- Built-in Speakers: 5 W x 2
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 11 / 10 / 8.1 / 8
- User convenience: Power On/Off, Menu, Volume, Input, SmartImage Game
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)

## Stand

- Tilt: -5/20 degree

## Power

- Power supply: Internal, 100-240VAC, 50-60Hz

- Off mode: 0.3 W (typ.)
- On mode: 30.5 W (typ.)
- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

## Dimensions

- Packaging in mm (WxHxD): 930 x 517 x 162 mm
- Product without stand (mm): 715 x 420 x 62 mm
- Packaging in inch (WxHxD): 36.6 x 14.4 x 6.4 inch
- Product without stand in inch: 28.1 x 16.5 x 2.4 inch
- Product with stand(max height): 715 x 514 x 248 mm
- Product with stand(max height): 28.1 x 20.2 x 9.8 inch

## Weight

- Product with packaging (kg): 9.71 kg
- Product with stand (kg): 7.50 kg
- Product with packaging (lb): 21.36 lb
- Product with stand (lb): 16.50 lb
- Product without stand (kg): 5.78 kg
- Product without stand (lb): 12.72 lb

## Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0 to 40 °C
- MTBF: 50,000 hrs (excluding backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20 to 60 °C

## Sustainability

- Environmental and energy: RoHS
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC / BFR free housing

## Compliance and standards

- Regulatory Approvals: CB, CE Mark, FCC Class B, ICES-003

## Cabinet

- Color: Black
- Finish: Textured

## What's in the box?

- Cables: HDMI cable, Power cable
- Monitor with stand
- User Documentation



Issue date 2024-03-25

Version: 1.0.1

UPC: 6 09585 25646 0

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* The maximum resolution works for HDMI input only.  
\* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.  
\* Response time value equal to SmartResponse  
\* MPRT is to adjust brightness for blur reduction, so cannot adjust brightness while MPRT is turned on. To reduce motion blur, LED backlight will strobe synchronously with screen refresh, which may cause noticeable brightness change.  
\* MPRT is gaming-optimized mode. Turn on MPRT may cause noticeable screen flickering. It is recommended to turn off when you are not using the gaming function.  
\* NTSC Area based on CIE1976  
\* sRGB Area based on CIE1931  
\* The monitor may look different from feature images.