

Philips Monitor
LCD monitor

V Line

22 (21.5" / 54.6 cm diag.)
1920 x 1080 (Full HD)

221V8LB



Vivid and crisp imagery that pushes boundaries

The Philips V monitor line provides essential features at a great value. With a 100Hz refresh rate and 16:9 Full HD display, this monitor provides a high-definition picture experience with crisp imagery.

Vivid pictures every time

- 100Hz refresh rates for ultra-smooth images
- VA display delivers awesome images with wide viewing angles
- SmartContrast for rich black details
- SmartImage presets for easy optimized image settings
- Effortlessly smooth action with Adaptive-Sync technology

Easy on the eyes

- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity
- EasyRead mode for a paper-like reading experience

Experience true multimedia

- HDMI ensures universal digital connectivity

Perfectly designed for your space

- Compact design saves space
- VESA mount allows for flexibility

PHILIPS

LCD monitor
V Line 22 (21.5" / 54.6 cm diag.), 1920 x 1080 (Full HD)

221V8LB/67


Highlights

100Hz Fast refresh



This Philips display refreshes the screen image up to 100 times per second which makes this monitor much faster than a standard display. With a 100Hz frame rate, gamers are able to find those critical images on the screen that show enemy movement in an ultra-smooth motion so that they are easily targetable.

VA display

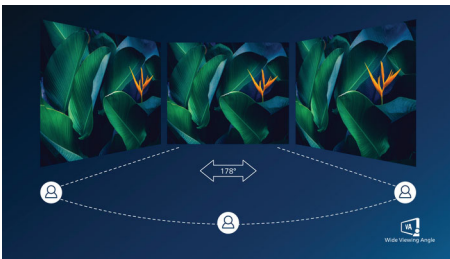

Philips VA LED display uses an advanced multi-domain vertical alignment technology which gives you super-high static contrast ratios for extra vivid and bright images. While standard office applications are handled with ease, it is especially suitable for photos, web-browsing, movies, gaming, and demanding graphical applications. It's optimized pixel management technology gives you 178/178 degree extra wide viewing angle, resulting in crisp images.

SmartImage



SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed

on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

Adaptive-Sync technology



Gaming shouldn't be a choice between choppy gameplay or broken frames. Get fluid, artifact-free performance at virtually any framerate with Adaptive-Sync technology, smooth quick refresh and ultra-fast response time.

Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

EasyRead mode



EasyRead mode for a paper-like reading experience

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).



Specifications

Picture/Display

- LCD panel type: VA LCD
- Backlight type: W-LED system
- Panel Size: 21.5 inch / 54.6 cm
- Display Screen Coating: Anti-glare, 3H, Haze 25%
- Effective viewing area: 478.656 (H) x 260.28 (V)
- Aspect ratio: 16:9
- Maximum resolution: 1920 x 1080 @ 100 Hz*
- Pixel Density: 102.46 PPI
- Response time (typical): 4 ms (GtG)*
- Brightness: 250 cd/m²
- Contrast ratio (typical): 3000:1
- SmartContrast: Mega Infinity DCR
- Pixel pitch: 0.2493 x 0.241 mm
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Display colors: 16.7 M (8 bit)
- Picture enhancement: SmartImage
- Scanning Frequency: 30 - 115 kHz (H) / 48 - 100 Hz (V)
- sRGB
- Flicker-free
- LowBlue Mode
- EasyRead
- Adaptive sync

Connectivity

- Signal Input: VGA (Analog), HDMI 1.4
- HDCP: HDCP 1.4 (HDMI)
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Audio out

Convenience

- User convenience: Power On/Off, Menu/OK, Brightness/UP, Input/Down, SmartImage/Back
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian, Finnish
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 11 / 10 / 8.1 / 8

Stand

- Tilt: -5/20 degree

Power

- On mode: 14.8 W (typ.)
- Standby mode: 0.5 W (typ.)
- Off mode: 0.3 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50-60Hz

Dimensions

- Product with stand (mm): 493 x 369 x 220 mm
- Product without stand (mm): 493 x 286 x 44 mm
- Packaging in mm (WxHxD): 570 x 436 x 109 mm

Weight

- Product with stand (kg): 2.63 kg
- Product without stand (kg): 2.23 kg
- Product with packaging (kg): 4.35 kg

Operating conditions

- Temperature range (operation): 0°C to 40 °C
- Temperature range (storage): -20°C to 60 °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF: 30,000 (Excluded backlight) hour(s)

Sustainability

- Environmental and energy: RoHS
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC / BFR free housing

Compliance and standards

- Regulatory Approvals: CB, CE Mark, cETLus, FCC Class B, ICES-003, BSMI

Cabinet

- Color: Black
- Finish: Textured



Issue date 2023-12-13

Version: 1.0.2

12 NC: 8670 001 92319
EAN: 87 12581 80624 8

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* The maximum resolution works for HDMI input only.
* Response time value equal to SmartResponse
* The products and accessories listed on this leaflet may differ by country and region.
* The monitor may look different from feature images.