

PHILIPS

LCD monitor with
USB-C docking

Business Monitor

5000 series

27" (68.5 cm)

2560 x 1440 (QHD)

27B1U5601H



Daily routine simplified

with pop-up webcam

This USB-C monitor is for video watching, data transfer and power delivery. The integrated 5MP webcam delivers sharp images, and noise cancelling mic let people hear you fine. Windows Hello Webcam for quick access and strong security.

Excellent performance

- IPS technology for full colors and wide viewing angles
- Crystalclear images with Quad HD 2560 x 1440 pixels

Designed for the way you work

- MultiView enables simultaneous dual connection and view
- SmartErgoBase enables people-friendly ergonomic adjustments
- DisplayPort-out for connecting additional displays
- TUV Eye Comfort certified to reduce eye fatigue
- Built-in KVM switch to easily switch between sources
- Collaboration-ready webcam with noise-cancelling mic.

Single cable USB-C connection

- RJ-45 to USB-C gives easy network connection with security
- USB 3.2 high speed data transfer

Designed for sustainability

- PowerSensor saves up to 75% energy costs


Highlights

USB-C Docking with RJ45



Simplify all peripherals from monitor to PC using one-cable-docking USB Type-C connector, includes networking, high resolution video output from PC to monitor, and surfing on Internet without an additional network cable, even without LAN port on your notebook. RJ45 connection through USB-C offers a fast and secure connection when needed. Getting the fastest data speeds allows you to transfer data from a HDD to your PC faster than ever. Additionally, USB-C with power delivery can even enable you to power and charge your notebook from the monitor, eliminating the need for extra power cables.


IPS technology

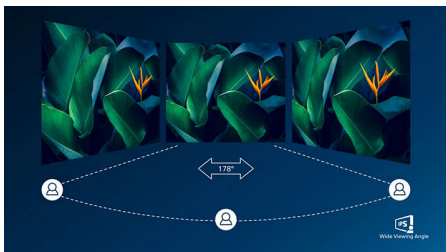

IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle - even in 90 degree Pivot mode! Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos,

movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

Crystalclear images

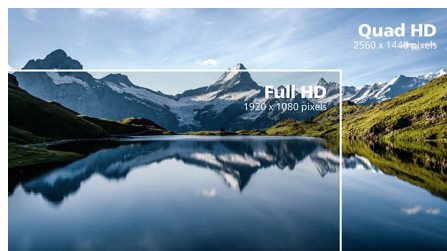

These Philips screens deliver Crystalclear, Quad HD 2560x1440 or 2560x1080 pixel images. Utilizing high performance panels with high density pixel count, enabled by high bandwidth sources like USB-C, Displayport, HDMI, these new displays will make your images and graphics come alive. Whether you are demanding professional requiring extremely detailed information for CAD-CAM solutions, using 3D graphic applications or a financial wizard working on huge spreadsheets, Philips displays will give you Crystalclear images.

DisplayPort-out



With DisplayPort-out you can connect multiple high resolution displays with just one cable from your first display to the PC. The ability to daisy chain multiple displays enables you to create a clean desktop without the hassle of too many wires all over.

MultiClient Integrated KVM



With MultiClient Integrated KVM switch, you can control two separate PCs with one monitor-keyboard-mouse set up. A convenient button allows you to quickly switch between sources. Handy with set-ups that require dual PC computing power or sharing one large monitor to show two different PCs.

Webcam & noise cancelling mic




This Philips monitor comes with a built-in 5MP webcam, noise-cancelling microphone, and speakers, making it perfect for working from home and collaborating remotely. It is equipped with advanced sensors that work seamlessly with Windows Hello facial recognition, allowing you to log into your Windows devices in less than 2 seconds. For added privacy, a physical camera switch lets you disable the webcam when not in use. The noise-cancelling microphone and dual 5-watt integrated speakers ensure clear communication.




Highlights

MultiView technology

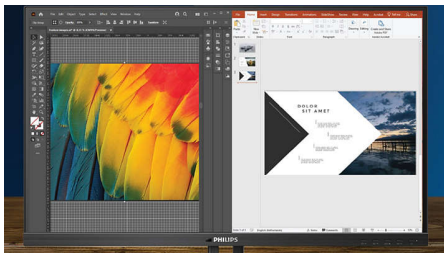

With the ultra-high resolution Philips MultiView display you can now experience a world of connectivity. MultiView enables active dual connect and view so that you can work with multiple devices like a PC and notebook simultaneously, for complex multi-tasking.

SmartErgoBase

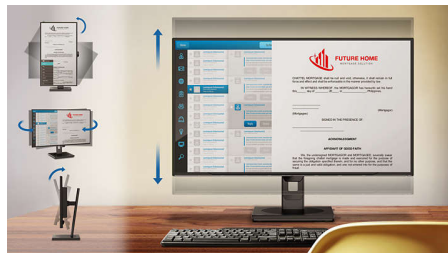

The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base can swivel, tilt and rotate to various angles to ensure maximum comfort. The height adjustable stand guarantees the optimal viewing level, reducing the physical strains of a long workday, while cable management reduces cable clutter and keeps the workspace neat and professional.

TUV Rheinland Eye Comfort



Philips display meet TUV Rheinland Eye Comfort standard to prevent eye strain caused by prolonged computer use. With TUV Eye Comfort certification, Philips displays ensure flicker-free, low blue mode, no disturbing reflections, wide viewing angle and less reduction of image quality from different angles and ergonomic stand designs for ideal viewing experience. Keep your eyes healthy and boost work productivity.

Specifications

Picture/Display

Panel Size: 27 inch / 68.5 cm
 Aspect ratio: 16:9
 LCD panel type: IPS technology
 Backlight type: W-LED system
 Pixel pitch: 0.2331 x 0.2331 mm
 Brightness: 350 cd/m²
 Display colors: 16.7 M (8 bit)
 Color gamut (typical): NTSC 89%*, sRGB 101%*
 Contrast ratio (typical): 1000:1
 SmartContrast: 50,000,000:1
 Response time (typical): 4 ms (Gray to Gray)*
 Viewing angle: 178° (H) / 178° (V), @ C/R > 10
 Picture enhancement: SmartImage
 Maximum resolution: 2560 x 1440 @ 75 Hz*
 Effective viewing area: 596.736 (H) x 335.664 (V)
 Scanning Frequency: 30 - 114 kHz (H) / 48 - 75 Hz (V)
 sRGB
 Flicker-free
 Pixel Density: 109 PPI
 LowBlue Mode
 Display Screen Coating: Anti-Glare, 3H, Haze 25%
 EasyRead

Connectivity

Signal Input: HDMI 1.4 x 1, DisplayPort 1.4 x 1,
 USB-C x 1 (upstream, DP Alt mode, Data, PD up to 100W)
 Sync Input: Separate Sync
 Audio (In/Out): Audio out / Microphone in combo jack
 RJ45: Ethernet LAN up to 1G*, Wake on LAN
 Signal Output: DisplayPort out x 1
 HDCP: HDCP 1.4 (HDMI / DisplayPort / USB-C),
 HDCP 2.2 (HDMI / DisplayPort / USB-C)
 HBR3: HBR 3 (DisplayPort / USB-C)
 USB Hub: USB 3.2, Gen 2 / 10 Gbps, USB-C
 upstream x 1 (Data), USB-A downstream x 4 (with 1 for fast charge B.C 1.2), USB-C downstream x 1 (Data, PD 15W)

Power Delivery

Max power delivery: USB-C up to 100W* (5V/3A, 7V/3A, 9V/3A, 10V/3A, 12V/3A, 15V/3A, 20V/4.8A)
 Version: USB PD version 3.0

Convenience

Built-in Speakers: 5 W x 2
 Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 11 / 10 / 8.1 / 8 / 7
 User convenience: SmartImage, Input, User, Menu, Power On/Off
 OSD Languages: Brazil Portuguese, Czech, Dutch, English, French, Finnish, German, Greek, Hungarian, Italian, Japanese, Korean, Portuguese, Polish, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
 Other convenience: Kensington lock, VESA mount (100x100mm)
 Control software: SmartControl
 MultiView: PIP/PBP mode, 2x devices
 Built-in webcam: Pop-up 5.0 megapixel camera with microphone and LED indicator (for Windows Hello)
 KVM: Yes (USB-C/USB-C)
 Noise cancellation

Stand

Height adjustment: 150 mm
 Pivot: -/+90 degree
 Swivel: -/+180 degree
 Tilt: -5/30 degree

Power

Power supply: Built-in, 100-240VAC, 50-60Hz
 Off mode: Zero watts with AC switch
 On mode: 21.5 W (typ.) (EnergyStar test method)
 Standby mode: 0.4 W (typ.)
 Power LED indicator: Operation - White, Standby mode- White (blinking)

Dimensions

Packaging in mm (WxHxD): 730 x 471 x 193 mm
 Product without stand (mm): 613 x 366 x 55 mm
 Packaging in inch (WxHxD): 28.7 x 18.5 x 7.6 inch
 Product without stand in inch: 24.1 x 14.4 x 2.2 inch
 Product with stand(max height): 613 x 537 x 225 mm
 Product with stand(max height): 24.1 x 21.1 x 8.9 inch

Weight

Product with packaging (kg): 10.88 kg
 Product with stand (kg): 7.30 kg
 Product with packaging (lb): 23.94 lb
 Product with stand (lb): 16.06 lb
 Product without stand (kg): 5.54 kg
 Product without stand (lb): 12.19 lb

Operating conditions

Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
 Temperature range (operation): 0°C to 40 °C
 Relative humidity: 20%-80 %
 Temperature range (storage): -20°C to 60 °C
 MTBF (demonstrated): 70,000 hrs (excluded backlight)

Sustainability

Environmental and energy: PowerSensor, LightSensor, EnergyStar 8.0, EPEAT*, TCO Certified Edge, RoHS
 Post consumer recycled plastic: 85%
 Recyclable packaging material: 100 %
 Specific Substances: Mercury free, PVC / BFR free housing

Compliance and standards

Regulatory Approvals: CB, CE Mark, FCC Class B, ICES-003, CU-EAC, EAEU RoHS, TUV Ergo, TUV/GS, TUV Eye Comfort certified

Cabinet

Finish: Texture
 Foot: Black
 Front bezel: Black
 Rear cover: Black

- * "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
- * Response time value equal to SmartResponse
- * NTSC Area based on CIE1976
- * sRGB Area based on CIE1931
- * For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode
- * Activities such as screen sharing, on-line streaming video and audio over the Internet can impact your network performance. Your hardware, network bandwidth and its performance will determine overall audio and video quality.
- * For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.
- * If your Ethernet connection seems slow, please enter OSD menu and select USB 3.0 or higher version which can support the LAN speed to 1G.
- * The USB-C power delivery of this display is up to 100 W (96 W in typical), the maximum power delivery will depend on your device.
- * When calculating energy costs saving from PowerSensor, both USB and Power delivery are excluded.
- * EPEAT rating is valid only where Philips registers the product. Please visit <https://www.epeat.net/> for registration status in your country.
- * The monitor may look different from feature images.

