

Philips Evnia Curved  
Gaming Monitor  
Quad HD gaming monitor

## Evnia 5000

27" (68.5 cm)  
2560 x 1440 (QHD)

27M1C5500VL



# Feel your game

This Philips gaming monitor delivers crystal-clear visuals and smooth gameplay. Sync technology, 165Hz refresh rate with HDR create a lifelike experience. The slim-frame display with Ultra Wide-Color enhances visual immersion.

### The gaming advantage is yours

- 165Hz refresh rates for ultra-smooth, brilliant images
- 1ms (MPRT) fast response for crisp image and smooth gameplay
- Low input lag reduces time delay between devices to monitor
- SmartImage game mode optimized for gamers

### Immersive visuals

- Curved display design for more immersive experience
- VA display delivers awesome images with wide viewing angles
- Crystalclear images with Quad HD 2560 x 1440 pixels
- SmartImage HDR gives optimal viewing from your HDR content

### Features designed for you

- LowBlue mode and Flicker-free easy-on-the eyes viewing
- EasySelect menu toggle key for quick on-screen menu access

EVNIA

PHILIPS

Quad HD gaming monitor  
Evnia 5000 27" (68.5 cm), 2560 x 1440 (QHD)

27M1C5500VL/89


# Highlights

## Curved display design



Desktop monitors offer a personal user experience, which suits a curve design very well. The curved screen provides a pleasant yet subtle immersion effect, which focuses on you at the center of your desk.

## 165Hz Gaming

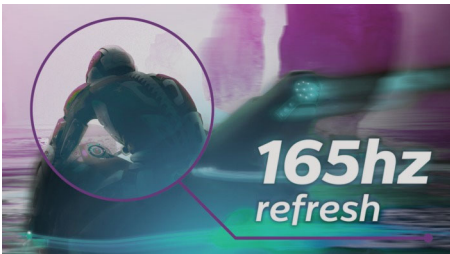


You play intense, competitive gaming. You demand display with lag free, ultra-smooth images. This Philips display redraws the screen image up-to 165 times per second, effectively faster than a standard display. A lower frame rate can make enemies appear to jump from spot to spot on the screen, making them difficult targets to hit. With 165Hz frame rate, you get those critical missing images on the screen which shows enemy movement in ultra-smooth motion so you can easily target them. With ultra-low input lag and no screen tearing, this Philips display is your perfect gaming partner

## 1ms MPRT fast response



MPRT (motion picture response time) is more intuitive way to describe the response time, which directly refers the duration from seeing blurry noise to clean and crisp images. Philips gaming monitor with 1 ms MPRT effectively eliminates smearing and motion blur, delivers sharper and precise visuals to enhance gaming experience. Best choice for playing thrilling and twitch-sensitive games.

## Low Input Lag

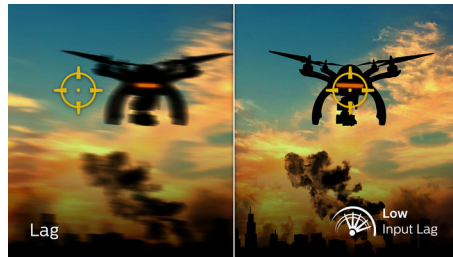


Input lag is the amount of time that elapses between performing an action with connected devices and seeing the result on screen. Low input lag reduces the time delay between entering a command from your devices to monitor, greatly improve on playing twitch-sensitive video games, particularly important to whom plays fast-paced, competitive games.

## VA display



Philips VA LED display uses an advanced multi-domain vertical alignment technology which gives you super-high static contrast ratios for extra vivid and bright images. While standard office applications are handled with ease, it is especially suitable for photos, web-browsing, movies, gaming, and demanding graphical applications. It's optimized pixel management technology gives you 178/178 degree extra wide viewing angle, resulting in crisp images.

## Crystalclear images

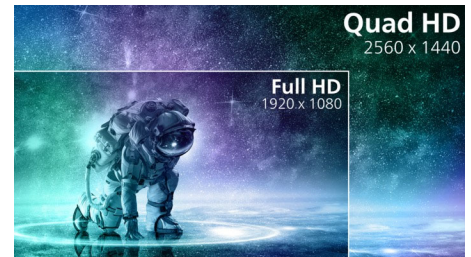

These Philips screens deliver Crystalclear, Quad HD 2560x1440 or 2560x1080 pixel images. Utilizing high performance panels with high density pixel count, enabled by high bandwidth sources like USB-C, Displayport, HDMI, these new displays will make your images and graphics come alive. Whether you are demanding professional requiring extremely detailed information for CAD-CAM solutions, using 3D graphic applications or a financial wizard working on huge spreadsheets, Philips displays will give you Crystalclear images.



# Specifications

## Picture/Display

- LCD panel type: VA LCD
- Backlight type: W-LED system
- Panel Size: 27 inch / 68.5 cm
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- Effective viewing area: 596.736 (H) x 335.664 (V) - at a 1500R curvature\*
- Aspect ratio: 16:9
- Maximum resolution: HDMI: 2560 x 1440 @ 144 Hz, DP: 2560 x 1440 @ 165 Hz\*
- Pixel Density: 108.79 PPI
- Response time (typical): 4 ms (Gray to Gray)\*
- MPRT: 1 ms
- Low Input Lag
- Brightness: 250 cd/m<sup>2</sup>
- SmartContrast: Mega Infinity DCR
- Contrast ratio (typical): 4000:1
- Pixel pitch: 0.2331 x 0.2331 mm
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Flicker-free
- Color gamut (typical): NTSC 95.6%\*, sRGB 126.5%\*
- HDR: HDR 10 supported
- Picture enhancement: SmartImage game
- Display colors: 16.7 M (8 bit)
- Scanning Frequency: HDMI: 30 - 230 kHz (H) / 48 - 144 Hz (V), DP: 30 - 250 kHz (H) / 48 - 165 Hz\* (V)
- LowBlue Mode
- EasyRead
- sRGB
- Adaptive sync

## Connectivity

- Signal Input: HDMI 2.0 x 2, DisplayPort 1.4 x 1
- HDCP: HDCP 1.4 (HDMI / DisplayPort), HDCP 2.2 (HDMI / DisplayPort)
- Audio (In/Out): Audio out
- Sync Input: Separate Sync

## Convenience

- User convenience: Power On/Off, Menu/OK, Input/Up, Game Settings/Down, SmartImage game/Back
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian

- Other convenience: Kensington lock, VESA mount (100x100mm)
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 11 / 10 / 8.1 / 8 / 7

## Stand

- Tilt: -5/20 degree

## Power

- On mode: 38.7 W (typ.)
- Standby mode: 0.5 W (typ.)
- Off mode: 0.3 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Internal, 100-240VAC, 50-60Hz

## Dimensions

- Product with stand(max height): 611 x 447 x 193 mm
- Product without stand (mm): 611 x 366 x 83 mm
- Packaging in mm (WxHxD): 730 x 469 x 226 mm

## Weight

- Product with stand (kg): 5.49 kg
- Product without stand (kg): 4.18 kg
- Product with packaging (kg): 9.20 kg

## Operating conditions

- Temperature range (operation): 0°C to 40 °C
- Temperature range (storage): -20°C to 60 °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF: 50,000 (Excluded backlight) hour(s)

## Sustainability

- Environmental and energy: RoHS
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC / BFR free housing

## Compliance and standards

- Regulatory Approvals: CB, CE Mark, FCC Class B, ICES-003, CU-EAC, EAEU RoHS, TUV/ISO9241-307, TUV-BAUART

## Cabinet

- Color: Black
- Finish: Textured

Issue date 2023-09-13

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Version: 1.0.1

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

12 NC: 8670 001 90403  
EAN: 87 12581 80337 7

[www.philips.com](http://www.philips.com)

\* Radius of the arc of the display curvature in mm

\* The maximum resolution works for DP input only.

\* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.

\* Response time value equal to SmartResponse

\* MPRT is to adjust brightness for blur reduction, so cannot adjust brightness while MPRT is turned on. To reduce motion blur, LED backlight will strobe synchronously with screen refresh, which may cause noticeable brightness change.

\* MPRT is gaming-optimized mode. Turn on MPRT may cause noticeable screen flickering. It is recommended to turn off when you are not using the gaming function.

\* NTSC Area based on CIE1976

\* sRGB Area based on CIE1931

\* The monitor may look different from feature images.