

Philips Monitor  
LCD monitor

### V Line

24 (23.8" / 60.5 cm diag.)  
1920 x 1080 (Full HD)

241V8LAB



## Vivid, crisp images beyond boundaries

Philips V line wide-view monitor gives viewing beyond boundaries. Adaptive-Sync, 1ms MPRT response rate, and 100Hz refresh rate deliver smooth video display. Features like anti-glare, LowBlue mode, and flicker-free for easy-on-the eyes.

#### **Vivid pictures every time**

- 100Hz refresh rates for ultra-smooth images
- VA display delivers awesome images with wide viewing angles
- SmartContrast for rich black details
- SmartImage presets for easy optimized image settings
- Effortlessly smooth action with Adaptive-Sync technology

#### **Easy on the eyes**

- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity
- EasyRead mode for a paper-like reading experience

#### **Experience true multimedia**

- Built-in stereo speakers for multimedia

#### **Perfectly designed for your space**


- Compact design saves space
- VESA mount allows for flexibility

# PHILIPS

LCD monitor  
V Line 24 (23.8" / 60.5 cm diag.), 1920 x 1080 (Full HD)

# Highlights

## VA display

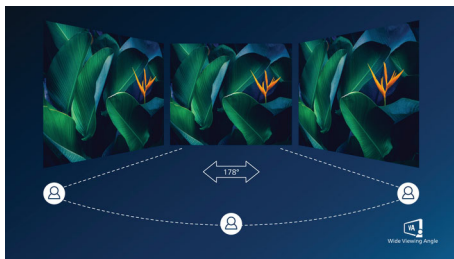

Philips VA LED display uses an advanced multi-domain vertical alignment technology which gives you super-high static contrast ratios for extra vivid and bright images. While standard office applications are handled with ease, it is especially suitable for photos, web-browsing, movies, gaming, and demanding graphical applications. It's optimized pixel management technology gives you 178/178 degree extra wide viewing angle, resulting in crisp images.

## 100Hz Fast refresh



This Philips display refreshes the screen image up to 100 times per second which makes this monitor much faster than a standard display. With a 100Hz frame rate, gamers are able to find those critical images on the screen that show enemy movement in an ultra-smooth motion so that they are easily targetable.

## SmartContrast



SmartContrast is a Philips technology that analyzes the contents you are displaying,


automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

## SmartImage



SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

## Adaptive-Sync technology

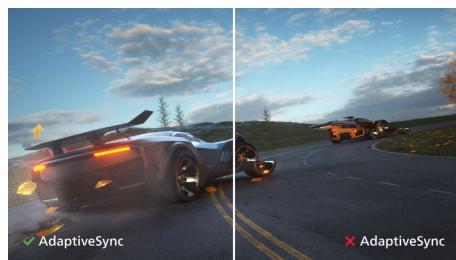

Gaming shouldn't be a choice between choppy gameplay or broken frames. Get fluid, artifact-free performance at virtually any framerate with Adaptive-Sync technology, smooth quick refresh and ultra-fast response time.

241V8LAB/00

## Flicker-free technology




Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

## LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.

## EasyRead mode

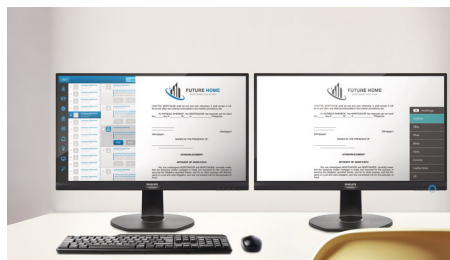

EasyRead mode for a paper-like reading experience



# Specifications

## Picture/Display

- LCD panel type: VA LCD
- Backlight type: W-LED system
- Panel Size: 23.8 inch / 60.5 cm
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- Effective viewing area: 527.04 (H) x 296.46 (V)
- Aspect ratio: 16:9
- Maximum resolution: 1920 x 1080 @ 100 Hz\*
- Pixel Density: 92.56 PPI
- Response time (typical): 4 ms (GtG)\*
- Brightness: 250 cd/m<sup>2</sup>
- Contrast ratio (typical): 4000:1
- SmartContrast: Mega Infinity DCR
- Pixel pitch: 0.2745 x 0.2745 mm
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Flicker-free
- Display colors: 16.7 M (8 bit)
- Scanning Frequency: 30 - 115 kHz (H) / 48 - 100 Hz (V)
- LowBlue Mode
- EasyRead
- sRGB
- Adaptive sync

## Connectivity

- Signal Input: VGA (Analog), HDMI 1.4
- HDCP: HDCP 1.4 (HDMI)
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Audio out, PC audio-in
- Signal Input: HDMI (digital, HDCP), VGA (Analog)

## Convenience

- User convenience: Power On/Off, Menu/OK, Input/Down, SmartImage/Back, Volume
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 11 / 10 / 8.1 / 8
- Built-in Speakers: 2 W x 2

## Stand

- Tilt: -5/20 degree

## Power

- On mode: 26.83 W (typ.)
- Standby mode: 0.5 W (typ.)
- Off mode: 0.3 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50-60Hz

## Dimensions

- Product with stand(max height): 540 x 416 x 220 mm
- Product without stand (mm): 540 x 322 x 51 mm
- Packaging in mm (WxHxD): 607 x 415 x 121 mm

## Weight

- Product with stand (kg): 3.00 kg
- Product without stand (kg): 2.61 kg
- Product with packaging (kg): 4.85 kg

## Operating conditions

- Temperature range (operation): 0°C to 40 °C
- Temperature range (storage): -20°C to 60 °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF: 30,000 (Excluded backlight) hour(s)

## Sustainability

- Environmental and energy: RoHS
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC / BFR free housing

## Compliance and standards

- Regulatory Approvals: CECP, CCC, CEL, CB, CE Mark, EAC, FCC, ICES-003, PSB, TUV Ergo, TUV/ GS

## Cabinet

- Color: Black
- Finish: Textured

## What's in the box?

- Cables: HDMI cable, Power cable
- Monitor with stand
- User Documentation



Issue date 2023-11-20

Version: 3.1.4

12 NC: 8670 001 91129  
EAN: 87 12581 80432 9

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* The maximum resolution works for HDMI input only.

\* Response time value equal to SmartResponse

\* The products and accessories listed on this leaflet may differ by country and region.

\* The monitor may look different from feature images.