



Philips PowerPro Expert
Bagless vacuum cleaner

900 W
PowerCyclone 8



FC9747/09

Highest suction power with PowerCyclone 8*

AllergyLock capturing >99.9%** of fine dust

The Philips Bagless Vacuum 7000 Series features our highest ever suction power. Make supreme cleaning effortlessly simple with PowerCyclone 8 technology and TriActive+ LED nozzle to reveal hidden dust.

Superior performance

- TriActive+ LED nozzle reveals hidden dust for thorough clean
- Allergy Lock traps dust inside for a high level of hygiene
- 900W motor for high suction power
- PowerCyclone 8 enables highest suction power for longer
- Allergy H13 filter system captures >99.9% of fine dust
- Mini Turbo brush for easy (pet) hair and fluff removal

Effortless cleaning

- Soft brush integrated into handle, always ready to use
- Digital power control function to adjust suction power
- Dust container designed for hygienic emptying with one hand
- On board accessories: Conveniently stored, always at hand

Superior performance

- 99.9% dust pick-up** to deliver deep cleaning results

PHILIPS


Highlights

99.9% dust pick-up**



TriActive+ LED and high suction power ensure you can vacuum 99.9% of fine dust**.

High-efficiency 900W motor

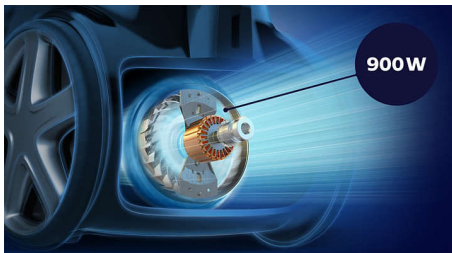

High-efficiency 900W motor with over 50,000 RPM, generates high suction power for a superior clean every time. Register at Philips.com within 3 months of purchase for a 5-year motor warranty.

PowerCyclone 8 technology



PowerCyclone 8 technology features a powerful, swirling action to maximize air flow and enable highest suction power. Super accelerated air flow in the cylindrical chamber efficiently separates dust from the air at >185km/h, ensuring stronger suction power for longer, for immaculate cleaning results.

Allergy lock



Allergy Lock system uses a sensor to ensure dust container is fully sealed before operating, trapping dust and allergens inside for a clean and ultra hygienic environment.

TriActive+ LED nozzle



TriActive+ LED lights make invisible dust visible on hard floors so you never miss a spot and can ensure the most thorough cleaning on all types of hard floors. A sensor automatically turns the LED lights on when the nozzle is in use and off when it is not. 3x AA batteries included.

On board accessories



Onboard accessories are stored conveniently inside the back compartment so they're always easy to access when you need them.

Digital power control




Digital power control function easily adjusts suction power for different cleaning tasks, from hard floors to soft furnishings, with the touch of a button.

Hygienic dust disposal



Easy-to-empty dust container is designed for hygienic disposal with one hand to help minimize dust cloud.

Integrated brush

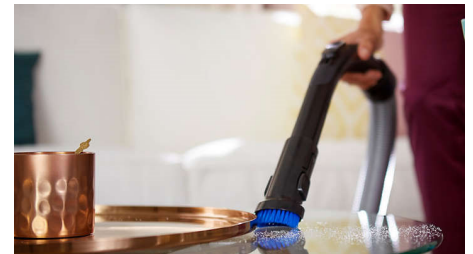

Dusting brush tool is built into the handle so it's always ready to use on furniture, flat surfaces and upholstery.

Specifications

Nozzles and accessories

- Standard nozzle: TriActive+ LED nozzle
- Accessories included: Crevice tool, Small nozzle, Integrated brush
- Accessory storage: On board
- Additional nozzle: Mini turbo brush
- Extra accessories: 3x AA Batteries

Design

- Color: Ink Black

Weight and dimensions

- Dimensions of product (LxWxH): 505x292x292 mm
- Weight of product: 5.5 kg

Sustainability

- Packaging: >90% recycled materials
- Stand-by power consumption: < 0,5 W
- User manual: 100% recycled paper

Performance

- Airflow (max): 32.5 l/s

- Sound power level: 67 – 75 dB
- Input power (max): 900 W

Filtration

- Dust capacity: 2 L
- Exhaust filter: Allergy H13 filter
- Motor filter: Lifetime washable filter
- Filtration level: HEPA13 level****

Usability

- Action radius: 10 m
- Tube coupling: ActiveLock
- Carrying handle: Top and front
- Power control: Electronic on appliance
- Cord length: 7 m
- Tube type: Metal 2-piece telescopic tube
- Wheel type: Rubber

Accessories

- Filter replacement kit: CP0617 Inlet filter, CP0618 Exhaust filter



Issue date 2024-02-09

Version: 11.11.1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* suction power compared to 10 most selling high end bagless vacuum cleaners (> 150€) in Germany H1'2019

* *Filtration performance is tested to DIN EN 60312/11/2008.

* ***Filtration levels are tested according EN60312-1-2017 and are equivalent to HEPA 13.

* ***99.9% dust pick-up on hard floors with crevices (IEC62885-2).