

PHILIPS

IPL Hair removal device with SenseIQ

Lumea IPL 8000 Series

SmartSkin sensor

1 intelligent attachment: body

Lumea IPL App

Corded use



BRI940/00



Tailored to you with SenseIQ

Enjoy 12 months of silky smooth skin*

Enjoy a quick and personalised treatment with our Lumea IPL 8000 Series. SenseIQ technology with smart attachments and Lumea IPL app for long-lasting smooth skin.

Gentle and effective for long-lasting smooth skin

- Treat only 2 x a month for fast results
- Developed with dermatologists to be easy and effective
- Extra-long cable for added flexibility while treating

Full solution for face and body

- Solution for body with 1 smart attachment
- Suitable for most skin tones and hair colours

Personalised IPL hair removal treatment

- Optimise your routine with the Philips Lumea IPL app
- Gentle and comfortable with SenseIQ


Highlights

1 smart attachment




The specially designed attachment is curved inwards for optimal skin contact when treating large areas like legs. A tailored programme is triggered when it is connected.

Philips Lumea IPL app

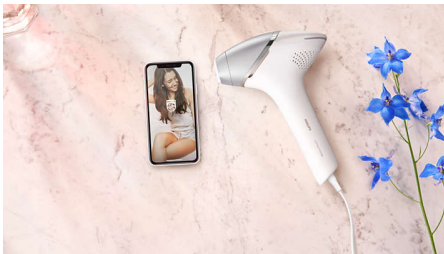

Our free coaching app helps you plan and stick to your treatment schedule, then takes you through each session step by step. Downloaded by more than 2.1 million users.

Developed with dermatologists

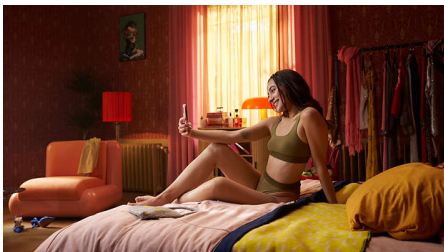

As a leader in health technology, Philips developed Lumea IPL in consultation with dermatologists, for easy and effective use in

the safety of your home. Derived from technology used in professional salons, Lumea IPL offers gentle treatment, even on sensitive areas.

2 x a month for fast results



Every 2 weeks to start with — that's half as many treatments as other brands. Followed by touch-ups just once a month. That's it. Covering both lower legs takes 8.5 minutes.

SenseIQ technology



Lumea 8000 Series has five easily adjustable light settings. Our SmartSkin sensor reads your skin tone and helps you find the most comfortable setting. Intelligent attachments adapt treatment for each body area.

Extra-long cable



Convenient to use thanks to an extra long cable for easy access and enhanced maneuverability.

For most skin and hair types



IPL needs contrast between the pigment in the hair colour and the pigment in the skin tone, it therefore works on naturally dark blonde, brown and black hair and on skin tones from fair to dark brown (I-V).

Specifications

Technical specs. attachments

Body treatment attachment: Shape: Convex curved, Window size: 4.1 cm², Tailored treatment for body: legs, arms and stomach

Safety and adjustable settings

Integrated UV filter: Protects skin from UV light

5 light energy settings: Adjustable to your skin type

Integrated safety system: Prevent unintentional flashing

Skin Tone sensor: Detects your skin tone

SmartSkin sensor: The right setting on demand

Application mode

Slide and Flash: For quick application

Corded/cordless use: Corded use

Stamp and Flash: For treatment on small areas

Technical specifications

Voltage: 100–240 V

High performance lamp: Built to last, 450,000 flashes, equivalent to 39 years of lamp lifetime**

Service

Warranty: 2-year global warranty + 1 extra year of warranty upon product registration within 90 days

Items included

Instructions for use: User manual

Storage: Beauty pouch

Adapter: 19.5 V / 4000 mA

Application time

Underarms: 2.5 min

Bikini line: 2 min

Lower legs: 8.5 min

