




Philips
Soundbar 2.1 with wireless
subwoofer

2.1 Ch, wireless subwoofer
240 W max. HDMI ARC
DTS Virtual:X
Dolby Digital Plus

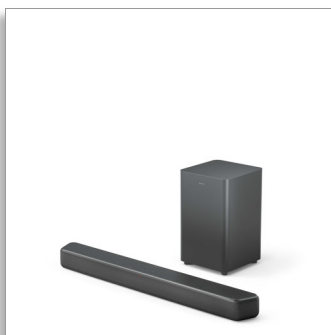

TAB5309

Better, deeper sound for all your entertainment

Bring movies and more to life with this powerful soundbar and wireless subwoofer. Explosions will rumble. Music will sing. Games get more epic. Sophisticated audio technology creates an immersive sound experience no matter what you watch.

Easy control, all the connections

- Connect your favorite sources for bigger sound
- Control your soundbar and TV with a single remote
- HDMI ARC, optical connection, AUX-in, USB
- Roku TV Ready™. Simple setup. One remote. Quick settings.
- Bluetooth 5.4 with LE Audio support
- Philips Home Entertainment app

Immersive sound for everything you love

- Dolby Digital Plus. Cinematic sound at home
- DTS Virtual:X for immersive 3D sound in any room
- Four EQ sound modes and dialogue enhancement

Philips essential 2.1 soundbar

- 2.1 channels. Wireless subwoofer for deeper bass
- Deeper TV sound. 240 W max
- Looks great, and it's easy to place

PHILIPS

Soundbar 2.1 with wireless subwoofer
2.1 Ch, wireless subwoofer 240 W max. HDMI ARC, DTS Virtual:X, Dolby Digital Plus

TAB5309/37

Highlights

2.1 channels with subwoofer




2.1 channels and immersive audio technology bring you new levels of sound, while the compact wireless subwoofer adds satisfying weight to effects and music. Four EQ modes let you pick a sound style to suit what you're watching—and voices get clearer in any mode if you activate Dialogue Enhancement.

DTS Virtual:X



Compatibility with DTS Virtual:X transforms your TV sound, bringing you a virtual 3D sound experience no matter what's on screen! You don't need extra speakers, and it works in any room: turn it on via the soundbar's remote control, or the Philips Home Entertainment app.

Dolby Digital Plus

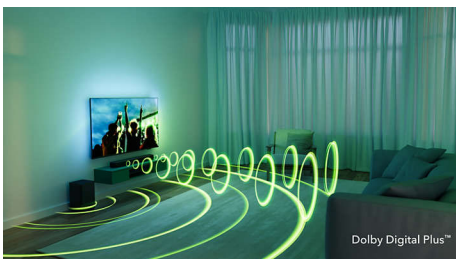

Enjoy a front-row seat to all the dramas you watch and play. This Dolby Digital Plus-

compatible soundbar gives you a surround-sound experience without the need for extra speakers. You'll hear, and feel, the difference.

Easy placement



This sleek soundbar looks great in any room and its compact subwoofer is easy to conceal. Got your TV on the wall? You can use the detachable brackets (included) to wall-mount this soundbar too.

HDMI ARC and Philips EasyLINK



You can adjust the volume on your soundbar using your TV remote. If you have a Philips Ambilight TV, the EasyLINK function lets you use the remote to switch between the soundbar's preset EQ modes, adjust bass and treble—and more.

Easy connections



Compatibility with Bluetooth LE Audio gives you a steadier connection, better sound, and less lag if you're streaming playlists from a smart device that is also compatible with Bluetooth LE Audio. You can also connect audio sources to the soundbar via audio-in, USB, or optical input.

Philips Home Entertainment app

Download the app and you can use your smart device to switch between the EQ sound modes, select source, activate virtual surround sound, and more.

Roku TV Ready™



This Philips Soundbar is Roku TV Ready certified. That means you'll enjoy a simple setup, one remote, and quick settings when you pair it with a Roku TV. Roku, the Roku logo, Roku TV, Roku TV Ready, and the Roku TV Ready logo are trademarks and/or registered trademarks of Roku, Inc. This product is Roku TV Ready-supported in the United States, Canada, Mexico, the United Kingdom, and Brazil. Countries are subject to change. For the most current list of countries in which this product is Roku TV Ready-supported, please email roktvready@roku.com.

Specifications

Sound

- Sound Enhancement: Audio sync, Auto Volume Leveler, Treble and Bass Control
- Equalizer settings: Movie, Music, Voice, Stadium
- Total harmonic distortion: <=10%
- Speaker system output power: 240W max / 120W RMS

Loudspeakers

- Subwoofer freq range: 40 - 150 Hz
- Subwoofer type: Active, Wireless subwoofer
- Subwoofer impedance: 4 ohm
- Number of sound channels: 2.1
- Number of woofers: 1
- Woofer diameter: 5.25"
- Soundbar freq range: 150 - 20K Hz
- Soundbar impedance: 8 ohm
- Front drivers: 2 full range (L+R)
- External subwoofer enclosure: Bass reflex

Connectivity

- Bluetooth: Receiver
- Bluetooth version: 5.4
- Bluetooth profiles: A2DP, AVRCP
- EasyLink (HDMI-CEC)
- USB playback
- Audio in: 1x 3.5mm
- Optical input x 1
- HDMI content protection: HDCP 1.4
- HDMI Out (ARC) x 1
- DLNA Standard: No
- Multiple speaker connection: No
- Smart Home: None
- Wireless speaker connection: Subwoofer

Supported Audio Formats

- Bluetooth: SBC
- HDMI ARC: Dolby Digital, Dolby Digital plus, LPCM 2ch, DTS Digital Surround (DTS 5.1), DTS Virtual:X
- USB: MP3, WAV, FLAC
- Optical: Dolby Digital, LPCM 2ch

Outer Carton

- Length: 92 cm
- Number of consumer packagings: 2
- Width: 48.5 cm
- Gross weight: 15.5 kg
- Height: 24.5 cm

- Nett weight: 10.10 kg
- Tare weight: 5.40 kg

Convenience

- EasyLink (HDMI-CEC): Audio Return Channel, Automatic audio input mapping, One touch play, System standby
- Remote Control
- Night mode

Compatibility

- Smartphone/tablet APP control

Power

- Power LED indicator
- Main unit power supply: 100-240V AC, 50/60 Hz
- Subwoofer power supply: 100-240V AC, 50/60 Hz
- Subwoofer standby power: < 0.5 W
- Main unit standby power: < 0.5 W
- Auto standby

Packaging dimensions

- Height: 22.5 cm
- Packaging type: Box
- Type of shelf placement: Laying
- Width: 90 cm
- Depth: 33.5 cm
- Number of products included: 1
- Gross weight: 7.09 kg
- Nett weight: 5.05 kg
- Tare weight: 2.04 kg

Accessories

- Included accessories: Remote Control, 2 x AAA Batteries, Power cord, Wall mount bracket, Quick start guide, Warranty Card

Design


- Color: Dark grey
- Wall mountable

Dimensions

- Main Unit (W x H x D): 766 x 67.3 x 91 mm
- Main Unit Weight: 1.6 kg
- Subwoofer (W x H x D): 195 x 315.5 x 195 mm
- Subwoofer Weight: 3.03 kg

Video

- 3D pass-through: No

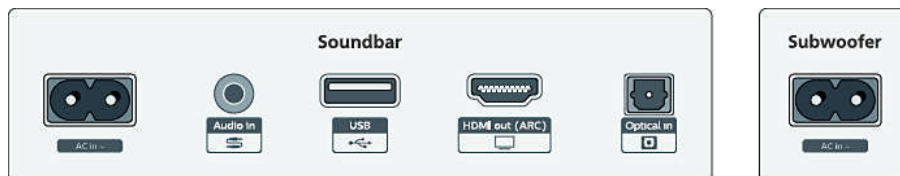

Issue date 2024-10-03

Version: 5.5.1

UPC: 8 40063 20357 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com



* Roku TV Ready and the Roku TV Ready logo are trademarks of Roku, Inc.