


Philips OLED
4K Ambilight TV

139 cm (55") Ambilight TV

P5 AI perfect picture engine
TITAN OS smart platform
Dolby Vision and Dolby Atmos

55OLED759

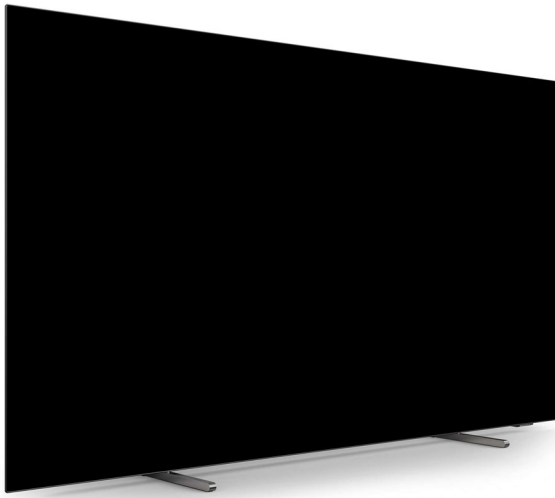

Every show. Every film. Every game.

4K Ambilight TV

The thrill is real with our most affordable OLED Ambilight TV. Whatever you watch or play, the lifelike picture and smooth motion dial up the excitement. Ambilight makes every jaw-dropping, spine-tingling moment feel bigger.

4K OLED Ambilight TV. Where TV comes alive.

- Immerse yourself in what you love. Ambilight TV.
- Whatever you watch, a picture so real. P5 engine with AI.
- Find it easily. TITAN OS.
- Detail and depth. Lifelike OLED picture.

Lifelike depth and detail. Smooth motion.

- Epic gaming. 120 Hz, ultra-low lag, G-sync, VRR, FreeSync.
- Cinematic vision and sound. Dolby Vision and Dolby Atmos
- Supports all major HDR formats.

Sustainable materials. Easy control.

- Thoughtful design. Responsible packaging.
- Easy control
- Philips Wireless Home System powered by DTS Play-Fi.

PHILIPS

4K Ambilight TV

139 cm (55") Ambilight TV P5 AI perfect picture engine, TITAN OS smart platform, Dolby Vision and Dolby Atmos

Specifications

Ambilight

- Ambilight Features: Wall colour adaptive, Lounge light mode, Ambilight Music, AmbiSleep, Sunrise Alarm, Works with Philips Wireless Home Speakers, Ambilight FTI Animation
- Ambilight Version: 3 sided

Picture/Display

- Diagonal screen size (metric): 139 cm
- Display: 4K Ultra HD OLED
- Panel resolution: 3840 x 2160
- Picture engine: P5 AI Perfect Picture Engine
- Diagonal screen size (inches): 55

Display input resolution

- Resolution-Refresh rate: 576 p - 50 Hz, 640 x 480 - 60 Hz, 1920 x 1080p - 24/25/30/50/ 60/100/120Hz, 2560 x 1440 - 60/120Hz, 3840x2160p - 24/25/30/50/60/100/120Hz

Tuner/Reception/Transmission

- Digital TV: DVB-T/T2/T2-HD/C/S/S2
- TV Programme guide*: 8-day Electronic Programme Guide
- Teletext: 1000 page Hypertext

Smart TV Features

- User Interaction: Screen mirroring
- Interactive TV: HbbTV
- Voice assistant*: Amazon Alexa built-in
- Smart Home experience: Works with Amazon Alexa, Works with Google Home

Multimedia Applications

- Video Playback Formats: AVI, MKV, HEVC, H.264/ MPEG-4 AVC, MPEG1, MPEG2, MPEG4, VP9, HEVC (H.265), AV1
- Music Playback Formats: MP3, WAV, AAC, FLAC
- Subtitles Formats Support: SRT, SMI, SSA, SUB, ASS, TXT
- Picture Playback Formats: JPEG, GIF, PNG, BMP, HEIF

Sound

- Audio: 2.0 Channel
- Output power (RMS): 2 x 10 W full-range speakers
- Codec: Dolby Digital MS12 V2.6.2, Dolby Atmos®, DTS:X
- Sound Enhancement: Dolby Bass Enhancement, Clear Dialogue, A.I. Sound, A.I. EQ, Dolby Volume Leveller, Night mode, Sound Personalisation

Connectivity

- Number of HDMI connections: 4
- HDMI features: 4K, Audio Return Channel

- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby, One touch play
- Number of USBs: 2
- Wireless connection: Wi-Fi 802.11ac, 2 x 2, Dual band, Bluetooth 5.2
- HDCP 2.3: Yes on all HDMI
- HDMI ARC: Yes on HDMI2
- HDMI 2.1 features: eARC on HDMI 2, eARC/VRR/ ALLM supported
- EasyLink 2.0: External setting via TV UI, HDMI-CEC for Philips TV/SB

Supported HDMI video features

- HDMI 1/2: HDMI 2.1 full bandwidth 48 Gbps, up to 4K 120 Hz
- Gaming: ALLM, HDMI VRR, AMD FreeSync Premium, Nvidia G-Sync compatible
- HDMI 3/4: HDMI 2.0
- HDR: Dolby Vision, HDR10, HDR10+, HDR10+ Adaptive, HLG

EU Energy card

- Off mode power consumption: n.a
- Networked standby mode: 2.0 W
- Panel technology used: OLED

Power

- Mains power: AC 220 - 240 V 50/60 Hz
- Standby power consumption: less than 0.5 W
- Power Saving Features: Auto switch-off timer, Picture mute (for radio), Eco mode, Light sensor

Accessories

- Included accessories: Remote Control, 2 x AAA Batteries, Tabletop stand, Power cord, Quick start guide, Legal and safety brochure

Design

- Colours of TV: Metal bezel frame
- Stand design: Satin chrome stands

Dimensions

- Weight incl. Packaging: 22.3 kg
- Distance between 2 stands: 783 mm
- Stand height to TV bottom edge: 22 mm
- Wall-mount compatible: 300 x 300 mm
- TV without stand (W x H x D): 1228 x 708 x 58 mm
- TV with stand (W x H x D): 1228 x 724 x 240 mm
- Package carton (W x H x D): 1400 x 860 x 160 mm
- Weight of TV without stand: 17.1 kg
- Weight of TV with stand: 17.5 kg

55OLED759/12

Highlights

Ambilight TV

Ambilight TVs are the only TVs with integrated LED lights on the back that react to what you watch, immersing you in a halo of colourful light. It changes everything: your TV seems bigger, and you'll be drawn deeper into your favourite sports, films, music and games.

P5 AI perfect picture engine

Philips P5 processor with AI delivers a picture so real it feels like you could step right into it. A deep-learning AI algorithm processes images in a manner similar to the human brain. No matter what you're watching, you get lifelike detail and contrast, rich colour and smooth motion.

TITAN OS smart platform

It's quick and easy to find what you love with our TITAN OS smart TV platform. Enjoying a series? You can continue watching straight from the home screen. If you're looking for something new, you can browse categories like action or drama and see suggestions from the top streaming services, all in one place.

OLED Ambilight TV

The lifelike picture of your 4K (UHD) OLED Ambilight TV always looks incredible, even if viewed at an angle. Blacks are always black, not grey, and you'll see every detail in shadows or bright areas. All major HDR formats are supported — you'll feel the full power of every scene.

Epic gaming

Play without limits and immerse yourself in OLED's incredible realism! HDMI 2.1, a blazing-fast 120 Hz native refresh rate and ultra-low input lag bring fluid, responsive gameplay, super-smooth natural motion and great-looking graphics. Ambilight's gaming mode brings even bigger thrills and, if you're gaming on a PC, you can enjoy 144 Hz VRR via HDMI.

Dolby Vision and Dolby Atmos

With Dolby Vision and Dolby Atmos on board, your films, shows and games look and sound incredible. See the picture the director wanted you to see. No more disappointing scenes that are too dark to make out! Hear every word clearly. Experience sound effects like they're really happening around you.

Supports all major HDR formats

Supports all major HDR formats.

* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.

* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up-to-date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.

* Smart TV app availability varies by TV model and country. For more details, please visit: www.philips.com/smarttv.

* Philips TV Remote app and related functionalities vary by TV model, operator and country, as well as smart device model and OS. For more details, please visit: www.philips.com/TVRemoteapp.

* EPG and actual visibility (up to 8 days) is country- and operator-dependent.

* Netflix subscription required. Subject to terms on <https://www.netflix.com>

* Amazon Prime is available in selected languages and countries.

* Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates. Amazon Alexa is available in selected languages and countries.

* Over-the-top media services button on the remote control will be different in each country. Please refer to the actual product in the box.

* Google Assistant is available in different languages and countries specific to product types.

* Availability and functionality of voice control services varies according to country and language.



Issue date 2024-02-16

Version: 2.2.1

EAN: 87 18863 04196 3

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com