

Philips  
Cordless phone

1.6" display/ blue backlight  
Handset speakerphone

D1611B



## Keep it simple

The Philips D161 Cordless Phone packs essential functions in a fresh and engaging design. With its handsfree feature, excellent sound reproduction and plug & play, you will enjoy every conversation with great clarity and comfort.

### Eco-conscious product

- Low radiation and power consumption

### Nice and simple

- Ultimate convenience through easy setup
- Freestanding handset with a speaker for easy handsfree calls
- Menu in multiple local languages
- Textured back cover for non-slip grip
- Caller ID – so you always know who is calling\*
- Easy to read 4.1 cm (1.6") display with backlight
- Up to 10 hours talk time on a single charge

### Crystal clear sound

- Parametric Equalizer delivers pure and clear sound
- Automatic Volume Control offsets unwanted volume variation
- Optimized antenna layout for great reception in any room
- Advanced sound testing & tuning for superb voice quality


# PHILIPS

Cordless phone  
1.6" display/ blue backlight Handset speakerphone

D1611B/63

# Highlights

## Automatic Volume Control

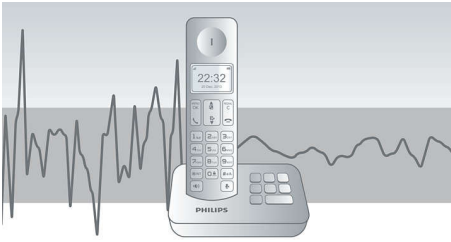


Automatic Volume Control offsets variations in sound signal, which can be caused by distance, signal strength or the caller's phone - so what you hear always remains consistent. Reducing the audio amplification for strong signals, and increasing it for weak ones, it means you can enjoy a smooth conversation without unwanted sound volume variation.

## Caller ID\*



Sometimes it is good to know who is calling before you answer. And our Caller ID lets you keep track of who is on the other end of the line.

## Easy setup

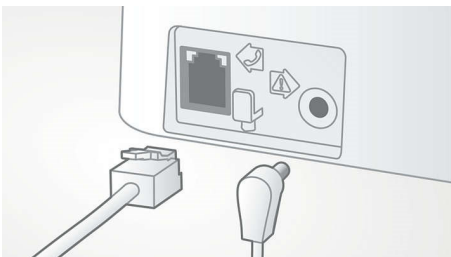

Ultimate convenience through easy set up.  
Simplified installation - Plug & Play product

## Eco-conscious product



Philips phones are energy efficient and designed to be respectful to the environment.

## Handset speakerphone




Handsfree mode uses a built-in loud speaker to amplify the voice of the caller, allowing you to speak and listen during a call without holding the phone to your ear. This is especially useful if you want to share the call with others or simply multitask.

## Menu in local languages




Enjoy easy set-up, navigation and control with intuitive menu available in local languages.

## Non-slip grip

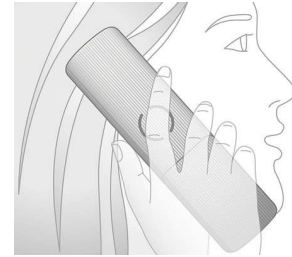

The rear of the handset is treated with a special texture for added comfort and better grip.

## Optimized antenna layout

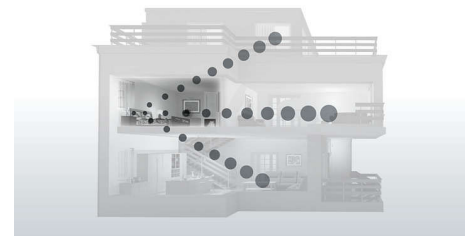

Our optimized antenna layout ensures strong and stable reception – even in areas of the house where cordless transmission is difficult. Now you can take a call wherever you are in the house, and enjoy a long, uninterrupted conversation even as you walk around.

## Parametric Equalizer



Our telephones use parametric equalization in the digital sound processing to fine-tune the sound response back to the intended linear frequency response curve, delivering sound that is pure and clear, for each conversation.

## Up to 10 hours talk time

Up to 10 hours talk time on a single charge

# Specifications

## Sound

- Volume control on handset
- Ringtones on handset: 10 standard
- HQ-Sound

## Convenience

- Menu structure in the handset: List Menu
- Base Station keys: Paging key
- Number of keys: 20
- Speakerphone - talk handsfree
- Call Management: Call Waiting\*, Caller ID\*, Microphone mute, Missed Calls, Received Calls, Dialed calls
- Signal strength indicator: 3-bar indicator
- Battery level indicator: 3-bar battery icon
- Intercom - multiple handsets
- Date / Time display
- Programmable hot keys: Key 1 and 2
- Keypad lock
- Key tone on/off
- Auto hang up
- Up to 10 hrs talk time
- Charge time: 8 hours
- Line cord length: 1.5m
- Power cord length: 1.5m
- Range: Open field <300m; indoor <50m
- Non-slip grip: Triangular pattern
- Up to 200 hrs standby time

## Power

- Battery Capacity: 300 mAh
- Mains power: AC 100-240V ~50/60Hz
- Battery type: AAA NiMH Rechargeable
- Power Consumption: <0.7 W

## Packaging dimensions

- Height: 13.5 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 18.4 cm
- Depth: 5.9 cm
- Number of products included: 1
- EAN: 48 95229 14019 6
- Gross weight: 0.351 kg
- Nett weight: 0.268 kg
- Tare weight: 0.083 kg

## Picture/Display

- Display size: 4.1 cm / 1.6"
- Backlight color: Blue
- Display type: 12 digits (Alphanumeric) +hard icons
- Backlight: Yes

## Memory Capacity

- Call log entries: 20 entries
- Phonebook: 50 names and numbers
- Redial List Capacity: 10 last numbers
- Phonebook store in the base

## Security

- Transmission encryption : Yes

## SAR Value

- Philips handsets: <0.1 W/kg

## Network Features

- Compatible: GAP



Issue date 2024-02-21

Version: 1.0.1

EAN: 48 95229 14019 6

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\*\*This feature requires additional subscription of Caller ID service.  
Please check with your local network operator for details.