




Philips PerfectCare 8000 Series
Steam generator

Speed mode

Intelligent automatic steam
Guaranteed no burns*
Ultra-light iron

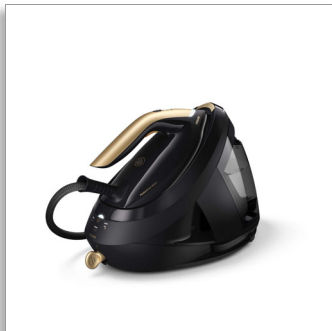

PSG8130/80

The iron that adapts steam to your ironing speed

Effortless ironing. Fast results.

PerfectCare 8000 Series offers effortless ironing with our new sensor technology. It allows vertical and horizontal ironing with automatic steam. Speed mode adapts the steam amount based on your ironing speed for even faster results.

Effortless ironing with fast results

- Adapts steam to your ironing speed
- Iron effortlessly with automatic steam

Ultimate performance

- Updated motion sensor for easy vertical use
- Ultra-powerful steam for crease removal

Extra convenient to use

- Easy De-Calc Plus to extend the lifetime of your iron

Ultimate performance

- OptimalTEMP technology, guaranteed no burns

Ultimate performance

- Ultra-light iron for easy vertical steaming

PHILIPS

Steam generator
Speed mode Intelligent automatic steam, Guaranteed no burns*, Ultra-light iron

PSG8130/80

Highlights

Speed mode




Iron faster with speed mode. Your iron automatically adapts the ideal steam amount to your ironing speed.

Intelligent automatic steam



Ensure your ironing is completed fast and with minimal effort, with the new motion sensor technology that recognizes when you move the iron to release steam automatically

Automatic vertical steam

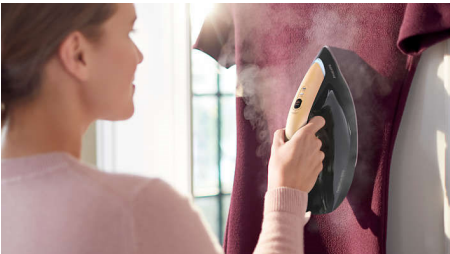


Thanks to the new motion sensor technology that recognizes your movements in any direction, we can offer an effortless experience to automatically steam hanging clothes, curtains and bedlinen.

Ultra-powerful steam



Strong, continuous steam for effective crease removal of even the most stubborn creases on the thickest fabrics.

Ultra-light iron

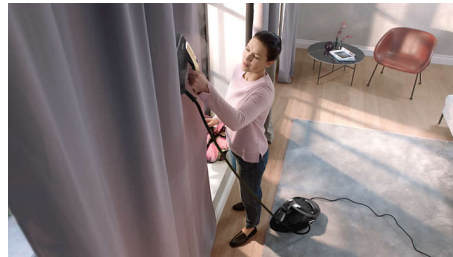

The iron is amazingly light and comfortable to handle, gliding easily and reducing wrist strain. Its minimal weight of only 800g also makes it easy for vertical steaming of curtains and hanging clothes.

Guaranteed no burns



With OptimalTEMP technology, we guarantee this iron will never cause burns to any ironable fabric when it is left unattended. You can safely leave it resting on your clothes or ironing board.

SteamGlide Elite soleplate



SteamGlide Elite is our best soleplate for ultimate gliding performance and maximum scratch resistance. Its stainless steel base is twice as hard as a regular aluminum base, and our patented 6-layer coating with advanced titanium layer glides effortlessly for the fastest results.

1.8L detachable water tank



The 1.8-liter transparent water tank gives you up to 2 hours of continuous use. When the water tank is empty, you will be reminded by the indicator light to refill at any time which you can easily do under the tap through the large filling door.

Easy De-Calc Plus



Regular descaling protects your iron, extends its lifetime, and ensures the best steam performance. Our exclusive Easy De-Calc Plus system collects limescale continuously, the indicator light and audio signal tell you when it needs emptying. Simply remove the plug and let the water and scale particles flow.

Specifications

General specifications

- Hose length: 1.8 m
- Hose storage: Compartment
- Power cord length: 1.8 m
- Power cord storage: Compartment
- Warranty: 2 years worldwide guarantee
- Energy saving: 22%

Easy to use

- Heat up time: 2 minute(s)
- Water tank capacity: 1800 ml
- Safe on all ironable fabrics
- Detachable water tank
- Low water alert
- Refill any time during use
- Tap water suitable
- Soleplate: SteamGlide Elite

Technology

- OptimalTEMP technology
- Steam sound dampening: No
- Intelligent Automatic Steam technology: 2nd

generation

Fast crease removal

- Pressure: Max 8.5 bar
- Power: Max 2700 W
- Steam boost: Up to 700 g
- Continuous steam: Up to 170 g/min
- Voltage: 220-240 V

Scale management

- Descaling and cleaning: Easy De-calc Plus
- Calc clean reminder: Light & Sound

Size and weight

- Weight of iron: 0.85 kg
- Packaging dimensions (WxHxL): 56.7 x 35 x 32.7 cm
- Product dimensions (WxHxL): 47.5 x 28.8 x 22.9 cm
- Total weight with packaging: 7.4 kg
- Weight of iron + base: 4.9 kg



Issue date 2024-03-08

Version: 9.9.1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* On all ironable fabrics