

Philips PerfectCare 6000
Series
Steam Generator

Powerful steam

Guaranteed no burns
1.8L detachable watertank
Compact

PSG6024/30



Ultra fast. Extra Compact.

PerfectCare 6000 Series is designed to deliver the best steam performance, now in a fully renewed, compact design. Enjoy ironing faster without compromising on your storage space. With no burns guaranteed* thanks to OptimalTEMP technology.

Effortless ironing with great results

- Powerful steam for crease removal

Powerful performance

- OptimalTEMP technology, no burns guaranteed
- Smart Calc Clean to extend the lifetime of your iron


Extra convenience to use

- Lightweight and compact for easy use and storage
- 1.8L detachable water tank for easy refilling
- Automatic shut off when iron is left unattended
- Safe carry lock for safe and easy transport

PHILIPS

Highlights

OptimalTEMP

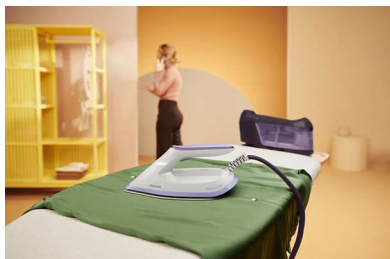

With OptimalTEMP technology you achieve great results with one ideal temperature setting. We guarantee this iron will never cause burns to any ironable fabric when it is left unattended. You can safely leave it resting on your clothes or ironing board.

Easy descaling



It's easy to maintain your steam generator with Smart Calc Clean, our built-in descaling system. It will remind you when it's time to descale and includes a container to make descaling easy and safe. Since it is reusable you will save money and never need to buy extra cartridges.

1.8L detachable water tank




A 1.8-liter transparent tank gives you up to 1.5 hours of continuous use. See clearly how much water is left and refill easily at any time under the tank through the large filling door.

Powerful steam



Strong, continuous steam for effective crease removal of even the most stubborn creases on the thickest fabrics.

Compact and convenient

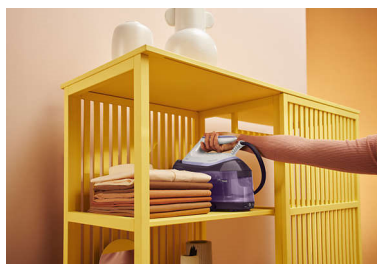

Thanks to its compact size it's light and easy to handle as you iron your clothes. It even fits on your ironing board. But don't think smaller means less powerful. Thanks to our exclusive ProVelocity technology, we've made powerful steam generators that are lightweight and more compact than ever.

Auto-shut off



Auto-shut off to save energy and for peace of mind.

Safety carry lock



Lock your iron securely to the base station for easy carrying around the house and to reduce the risk of accidentally touching the hot soleplate.

Specifications

General specifications

- Hose length: 1.6 m
- Hose storage: Compartment
- Power cord length: 1.65 m
- Power cord storage: Velcro fix
- Warranty: 2 years worldwide guarantee
- Energy saving: 30%

Easy to use

- Heat up time: 2 minute(s)
- Water tank capacity: 1800 ml
- Safe on all ironable fabrics
- Soleplate name: SteamGlide Plus
- Detachable water tank
- Low water alert
- Refill any time during use
- Tap water suitable

Technology

- OptimalTEMP technology

Fast crease removal

- Pressure: Max 6.5 bar pump
- Power: Max 2400 W
- Steam boost: Up to 500 g
- Continuous steam: Up to 130 g/min
- Vertical steam
- Voltage: 220 - 240 V

Scale management

- Descaling and cleaning: Easy De-calc Plus
- Calc clean reminder: Light

Size and weight

- Weight of iron: 1.18 kg
- Packaging dimensions (WxHxL): 43.0 x 22.7 x 34.2 cm
- Product dimensions (WxHxL): 16.8 x 26.9 x 36.8 cm
- Total weight with packaging: 4.43 kg
- Weight of iron + base: 3.4 kg



Issue date 2024-03-08

Version: 8.8.1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* On all ironable garments