

Philips Brilliance  
LCD monitor

51 cm (20.1")  
UXGA

200P4VB



## the smart way to boost productivity

High productivity pays big dividends. That's why smart organizations rely on the Philips 200P4 for tasks that demand a big screen and two-way swappable PIP to get work done efficiently at the best total cost of ownership.

### **Maximum comfort for maximum productivity**

- Display more images and content without scrolling
- Tilt and swivel adjustment for an ideal viewing angle

### **Outstanding front of screen performance**

- Fast response time for great display of moving images
- UXGA, 1600x1200 resolution for sharper display
- Dual input accepts both analog VGA and digital DVI signals
- sRGB ensures color matching between display and printouts
- Auto adjustment for perfect picture display with one touch

### **Multi-function for ultimate convenience**

- Easy plug-and-play DVI for a true digital experience
- Cable management reduces cable clutter for neat workspace
- Display from multiple video sources: YPbPr, S-Video, and CVBS
- 2-way PIP displays in both PC-in-Video and Video-in-PC modes

# PHILIPS

# Highlights

## UXGA, 1600 x 1200 resolution


For graphics monitors, the screen resolution signifies the number of dots (pixels) on the entire screen. For example, a 1600-by-1200 pixel screen is capable of displaying 1600 distinct dots on each of 1200 lines, or about 2 million pixels. This ensures a better display performance and accurate color display effect.

## Fast response time



Response time measures signal reaction speed in milliseconds. On/off response time measures the time required for the screen to turn from completely white to completely black and vice versa. Fast on/off response time improves display of text. Gray-to-grey response time measures the average time of transition between several sets of random gray levels - Lower numbers mean faster transitions. Faster is better because a fast response time eliminates visible image artifacts that could dampen your experience when viewing fast moving images or objects.

## sRGB ready

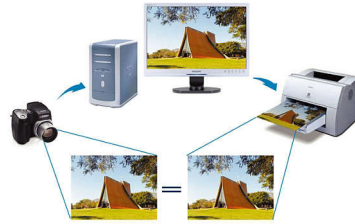

sRGB is an industry standard that ensures the best possible match between the colors displayed on your screen and those in your printouts.

## Dual input



VGA connector



DVI connector

Dual input provides connectors to accommodate input of both analog VGA and digital DVI signals.

## One-touch auto adjustment

The auto adjustment key restores optimal screen position, phase and clock settings with the press of a single button - without navigation through OSD menus and control keys.

## Large viewing area

Viewing area is the visible portion of a monitor screen available for displaying data.

## Screen tilt and swivel

Screen tilt and swivel is a mechanism built into the base permits the monitor to swivel and tilt backward or forward.

## Video connection

Plugs to accommodate signal input from a variety of sources

## Two way swappable PIP

A PIP feature built into the video module that makes it possible to work on the PC and simultaneously view a live video window, or view a video while monitoring PC input.


## Built-in speakers

A pair of stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

## In-box DVI cable

A DVI cable is shipped with the product to provide high quality digital display.

## Cable management

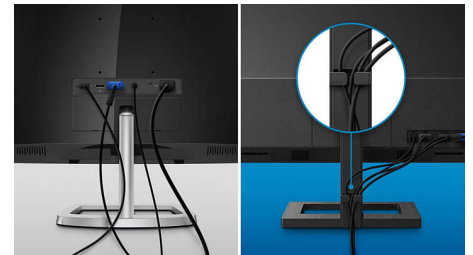

Cable management is an intimate design that maintains tidy workspace by organizing cables and wires required for the operation of a display device.

## Lower power consumption

Reduction of the electrical power required to operate a device.

## Kensington lock compatible

Small apertures built into the display's frame for use with a locking device that secures a display to a fixed object for added protection against theft.



# Specifications

## Connectivity

- Audio output: Stereo Audio (3.5 mm jack) 1x
- Signal Input: VGA (Analog), DVI-D, PC Audio in
- Audio input for video: Audio Left/Right (RCA x 2)
- Other video input: Composite Video, S-Video

## Picture/Display

- Panel Size: 20.1"/ 51 cm
- LCD panel type: 1600 x 1200 pixels, Anti-glare polarizer, RGB vertical stripe
- Pixel pitch: 0.255 x 0.255 mm
- Optimum resolution: 1600 x 1200 @ 60Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colors: 16 M
- Contrast ratio (typical): 400:1
- Response time (typical): 16 ms
- Viewing angle: @ C/R &gt; 10
- Viewing angle (horizontal): 176 degree
- Viewing angle (vertical): 176 degree
- Horizontal Scanning Frequency: 30 - 94 kHz
- Maximum Resolution: 1600 x 1200 @ 60Hz
- Effective viewing area: 408 x 306 mm
- Factory Preset Modes: 15 modes
- Refresh Rate (V): 56Hz - 85 Hz
- sRGB
- User definable modes: 37 modes
- White Chromaticity, 6500K: x = 0.313 / y = 0.329
- White Chromaticity, 9300K: x = 0.283 / y = 0.297

## Convenience

- Plug & Play Compatibility: DDC CI, Windows 98/ME/2000/XP
- Built-in Audio: 2W RMS x 2 stereo speakers
- User convenience: On-screen Display

- Monitor Controls: Auto, Brightness Control, Left/Right, Menu (OK), Power On/Off, Up/Down, Volume control, Input, Picture in Picture
- Regulatory approvals: CE Mark, FCC-B, UL, CSA, MPRII, NUTEK, Energy Star, SEMKO, TCO '99, TÜV/GS, TÜV Ergo
- OSD Languages: English, French, German, Italian, Simplified Chinese, Spanish
- Other convenience: Kensington lock
- Swivel: +/- 175°
- Tilt: -5° to 25°
- VESA Mount: 100 x 100 mm

## Power

- Power supply: Built-in
- Consumption (On mode): 50 W (Typical)
- Power LED indicator: Operation - Blue, Stand by/sleep - Amber
- Complies with: Energy Star, NUTEK
- Consumption (Off Mode): 1.5 W

## Dimensions

- Weight: 7.5 kg
- Temperature range (operation): 5°C to 35°C
- Temperature range (storage): -20°C to 60°C
- Relative humidity: 20% - 80%
- MTBF: 50,000 hrs
- Depth (with base): 220 mm
- Height (with base): 459 mm
- Width (with base): 488 mm

## Accessories

- Included accessories: AC Power Cord, PC audio cable, VGA cable, DVI-D cable

