



Philips Brilliance  
LCD monitor

51 cm (20.1")  
UXGA

200S4SS

## Get more done, have more fun!

Now a stylish yet affordable big-screen monitor with super display for Internet surfing, games, videos and photo editing that will also speed you through homework or weekend office projects leaving more time for fun.

### Design that complements any interior

- Compact and slim design that fits in every room
- Sleek, elegant design complements your home decor

### Outstanding front of screen performance

- UXGA, 1600x1200 resolution for sharper display
- Dual input accepts both analog VGA and digital DVI signals
- sRGB ensures color matching between display and printouts
- Auto adjustment for perfect picture display with one touch

### Great convenience

- Display more images and content without scrolling
- Tilt and swivel adjustment for an ideal viewing angle
- Cable management reduces cable clutter for neat workspace
- Enjoy multimedia experience with built-in speakers

# PHILIPS

LCD monitor  
51 cm (20.1") UXGA


200S4SS/00

# Highlights

## UXGA, 1600 x 1200 resolution

For graphics monitors, the screen resolution signifies the number of dots (pixels) on the entire screen. For example, a 1600-by-1200 pixel screen is capable of displaying 1600 distinct dots on each of 1200 lines, or about 2 million pixels. This ensures a better display performance and accurate color display effect.

## sRGB ready

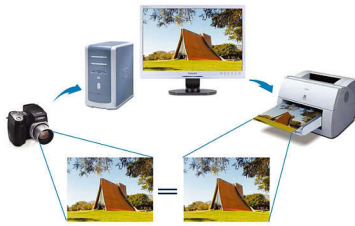

sRGB is an industry standard that ensures the best possible match between the colors displayed on your screen and those in your printouts.

## Dual input



VGA connector



DVI connector

Dual input provides connectors to accommodate input of both analog VGA and digital DVI signals.

## One-touch auto adjustment

The auto adjustment key restores optimal screen position, phase and clock settings with the press of a single button - without navigation through OSD menus and control keys.

## Large viewing area

Viewing area is the visible portion of a monitor screen available for displaying data.


## Screen tilt and swivel

Screen tilt and swivel is a mechanism built into the base permits the monitor to swivel and tilt backward or forward.

## Built-in speakers

A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

## Cable management

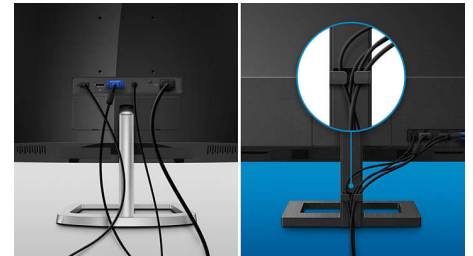

Cable management is an intimate design that maintains tidy workspace by organizing cables and wires required for the operation of a display device.

## Sleek, elegant design

A sleek, elegant design look that complements home furnishings in any room.

## Compact and slim design

This design style emphasizes a slim, compact look that saves space and fits in anywhere.



DualInput



Built-in Speaker

# Specifications

## Connectivity

- Audio output: Stereo Audio (3.5 mm jack) 1x
- Signal Input: VGA (Analog), DVI-D, PC Audio in

## Picture/Display

- Panel Size: 20.1"/ 51 cm
- LCD panel type: 1600 x 1200 pixels, Anti-glare polarizer, RGB vertical stripe
- Pixel pitch: 0.255 x 0.255 mm
- Optimum resolution: 1600 x 1200 @ 60Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colors: 16 M
- Contrast ratio (typical): 350:1
- Response time (typical): 20 ms
- Viewing angle: @ C/R &gt; 10
- Viewing angle (horizontal): 160 degree
- Viewing angle (vertical): 160 degree
- Horizontal Scanning Frequency: 30 - 94 kHz
- Maximum Resolution: 1600 x 1200 @ 60Hz
- Effective viewing area: 408 x 306 mm
- Factory Preset Modes: 15 modes
- Refresh Rate (V): 56Hz - 85 Hz
- sRGB
- User definable modes: 37 modes
- White Chromaticity, 6500K: x = 0.313 / y = 0.329
- White Chromaticity, 9300K: x = 0.283 / y = 0.297

## Convenience

- Plug & Play Compatibility: DDC CI, sRGB, Windows 98/ME/2000/XP
- Built-in Audio: 2W RMS x 2 stereo speakers
- User convenience: On-screen Display, SmartManage
- Monitor Controls: Auto, Brightness Control, Left/Right, Menu (OK), Power On/Off, Up/Down,

- Volume control, Input, Size
- Regulatory approvals: CE Mark, FCC-B, UL, CSA, MPRII, NUTEK, Energy Star, SEMKO, TCO '03, TÜV/GS, TÜV Ergo
- OSD Languages: English, French, German, Italian, Simplified Chinese, Spanish
- Other convenience: Kensington lock
- Swivel: +/- 175°
- Tilt: -5° to 25°
- VESA Mount: 100 x 100 mm

## Power

- Power supply: Built-in
- Consumption (On mode): 50 W (Typical)
- Power LED indicator: Operation - Blue, Stand by/sleep - Amber
- Complies with: Energy Star, NUTEK
- Consumption (Off Mode): 1.5 W

## Dimensions

- Weight: 7.5 kg
- Temperature range (operation): 5°C to 35°C
- Temperature range (storage): -20°C to 60°C
- Relative humidity: 20% - 80%
- MTBF: 50,000 hrs
- Depth (with base): 220 mm
- Height (with base): 459 mm
- Width (with base): 488 mm

## Accessories

- Included accessories: AC Power Cord, PC audio cable, VGA cable
- Optional accessories: Video module, Super Ergo Base

