



Philips
LCD monitor

48 cm (19")
SXGA

190S6FS

big screen performance within your budget

The compact 190S6 pumps up productivity with big screen performance and great convenience while business-friendly features like SmartManage deliver the best total cost of ownership and lead-free design safeguards our environment.

Lower total cost of ownership

- Power consumption below the industry average
- Environmentally responsible Energy Star partner
- SmartManage compatibility enables LAN-based asset management
- TCO'03 guarantees the highest safety and ergonomic standards
- Kensington anti-theft lock-ready for added security

Outstanding front of screen performance

- Fast 8ms On/off response time: Great text & graphics display
- SXGA 1280 x 1024 resolution for sharper display
- sRGB ensures color matching between display and printouts

Great convenience

- Auto adjustment for perfect picture display with one touch
- Easy, user friendly plug-and-play installation
- Embedded power supply eliminates external power adaptors

PHILIPS

Highlights

SmartManage enabled

SmartManage is a system for monitoring, managing and checking status of display devices as well as delivering remote support to users who experience difficulties - all accomplished over a LAN.

Lower power consumption

Reduction of the electrical power required to operate a device.

TCO '03 compliance

A TCO (Swedish Confederation of Professional Employees) standard even more stringent than MPR-II for safety and ergonomics, especially concerning alternating electric fields (AEF).

Energy Star partner

A manufacturer in compliance with power conservation requirements set forth by the Environmental Protection Agency of the U.S. government.

Kensington lock compatible

Small apertures built into the display's frame for use with a locking device that secures a display to a fixed object for added protection against theft.

8ms response time (On/Off)


On-Off response time is the period required for a liquid crystal cell to go from active (black)

to inactive (white) and back to active (black) again. It is measured in milliseconds. Faster is better: Lower response time means faster transitions and, therefore, results in fewer visible image artifacts in the display of transition of text and graphics. On-Off response time is a more important measure in the display of business content like documents, graphs and photos.

SXGA, 1280 x 1024 resolution

For graphics monitors, the screen resolution signifies the number of dots (pixels) on the entire screen. For example, a 1280-by-1024 pixel screen is capable of displaying 1280 distinct dots on each of 1024 lines, or about 1.3 million pixels.

sRGB ready

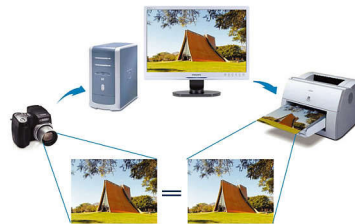

sRGB is an industry standard that ensures the best possible match between the colors displayed on your screen and those in your printouts.

Embedded power supply

An embedded power supply is a power adaptor built into the body of a display device that replaces a bulky external power adaptor.

Easy plug-and-play

Plug-and-play is a peripheral connectivity standard. A plug and play display device can be connected to a PC and operate without requiring user intervention to adjust complicated settings.

One-touch auto adjustment

The auto adjustment key restores optimal screen position, phase and clock settings with the press of a single button - without navigation through OSD menus and control keys.

Specifications

Connectivity

- Signal Input: VGA (Analog)
- Sync Input: Composite Sync, Separate Sync, Sync on Green

Picture/Display

- Panel Size: 19"/ 48 cm
- LCD panel type: 1280 x 1024 pixels, Anti-glare polarizer, RGB vertical stripe
- Pixel pitch: 0.294 x 0.294 mm
- Optimum resolution: 1280 x 1024 @ 60 Hz
- Brightness (nits): 250 nit
- Display colors: 16.2 M
- Contrast ratio (typical): 500:1
- Response time (typical): 8 ms
- Viewing angle: @ C/R > 5
- Viewing angle (horizontal): 160 degree
- Viewing angle (vertical): 160 degree
- Horizontal Scanning Frequency: 30 - 83 kHz
- Vertical Scanning Frequency: 56 - 76 Hz
- Maximum Resolution: 1280 x 1024 @ 75 Hz
- Effective viewing area: 376.3 x 301.1 mm
- Factory Preset Modes: 15 modes
- sRGB
- User definable modes: 50 modes
- Video Dot Rate: 140 MHz
- White Chromaticity, 6500K: $x = 0.313$ / $y = 0.329$
- White Chromaticity, 9300K: $x = 0.283$ / $y = 0.297$

Convenience

- Plug & Play Compatibility: DDC/CI, sRGB, Windows 98/ME/2000/XP
- User convenience: On-screen Display, SmartManage enabled

- Monitor Controls: Auto, Brightness Control, Left/Right, Menu (OK), Power On/Off, Up/Down
- Regulatory approvals: CE Mark, E2000, EMC, Energy Star, FCC-B, UL, CSA, SEMKO, TCO '03, TÜV/GS, TÜV Ergo
- OSD Languages: English, French, German, Italian, Simplified Chinese, Spanish
- Other convenience: Kensington lock compatible
- Tilt: -5° to 25°
- VESA Mount: 100 x 100 mm

Power

- Power supply: Built-in, 90-264 VAC, 50/60 Hz
- Consumption (On mode): 34W (Typical)
- Power LED indicator: Operation - green, Stand by/sleep - Amber
- Complies with: E2000, Energy Star, NUTEK
- Consumption (Off Mode): < 1 W

Dimensions

- Weight: 5.4 kg
- Temperature range (operation): 5°C to 40°C
- Temperature range (storage): -20°C to 60°C
- Relative humidity: 20% - 80%
- MTBF: 50,000 hrs
- Depth (with base): 235 mm
- Height (with base): 418 mm
- Width (with base): 425 mm

Accessories

- Included accessories: AC Power Cord, VGA cable
- User Manual
- Optional accessories: Super Ergo Base



Issue date 2024-03-23

Version: 2.0.7

EAN: 87 10895 89133 2

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com