



Philips  
Soundbar 2.0

**2.0 Ch**

120 W max. HDMI ARC  
DTS Virtual:X  
Dolby Digital Plus



**TAB5109**

## Better sound for all of your entertainment

Whatever you love to watch or play, love it more! This great-looking, low-profile soundbar gives you clearer voices and better-sounding effects. Sophisticated audio technology creates an immersive sound experience no matter what you watch.

### Easy control, all of the connections

- Connect your favourite sources for bigger sound
- Control your soundbar and TV with a single remote
- HDMI ARC, optical connection, AUX-in, USB
- Bluetooth 5.4 with LE Audio support
- Philips Home Entertainment app

### Immersive sound for everything you love

- Dolby Digital Plus. Cinematic sound at home
- DTS Virtual:X for immersive 3D sound in any room
- Four EQ sound modes and dialogue enhancement

### Philips essential soundbar

- 2.0 channels. 120 W max
- Looks great, and it's easy to place
- Simply better TV sound

# PHILIPS

Soundbar 2.0  
2.0 Ch 120 W max. HDMI ARC, DTS Virtual:X, Dolby Digital Plus

TAB5109/10

# Highlights

## Simply better TV sound



This soundbar's 2.0 channels and immersive audio technology bring new levels of sound to everything you love. Four EQ modes let you pick a sound style to suit what you're watching, and you can make voices clearer in any mode by activating Dialogue Enhancement.

## Easy connections



Compatibility with Bluetooth LE Audio gives you a steadier connection, better sound and less lag if you're streaming playlists from a smart device that is also compatible with Bluetooth LE Audio. You can also connect audio sources to the soundbar via audio-in, USB or optical input.

## Dolby Digital Plus



Enjoy a front-row seat for all of the dramas you watch and play. This Dolby Digital Plus-compatible soundbar gives you a surround-sound experience without the need for extra speakers. You'll hear, and feel, the difference.

## HDMI ARC and Philips EasyLINK



You can adjust the volume on your soundbar using your TV remote. If you have a Philips Ambilight TV, the EasyLINK function lets you use the remote to switch between the soundbar's preset EQ modes, adjust bass and treble—and more.

## DTS Virtual:X



Compatibility with DTS Virtual:X transforms your TV sound, bringing you a virtual 3D sound

experience no matter what's on screen! You don't need extra speakers, and it works in any room: turn it on via the soundbar's remote control or the Philips Home Entertainment app.

## Easy placement



This sleek soundbar looks great in any room. Got your TV on the wall? You can also wall-mount this soundbar using the detachable brackets (included).

## Philips Home Entertainment app

Download the app and you can use your smart device to switch between the EQ sound modes, select source, activate virtual surround sound and more.

## 2.0 channels. 120 W max

2.0 channels. 120 W max

## Four EQ sound modes

Four EQ sound modes and dialogue enhancement

## HDMI ARC, optical connection

HDMI ARC, optical connection, AUX-in, USB

## Bluetooth 5.4

Bluetooth 5.4 with LE Audio support

# Specifications

## Sound

- Sound Enhancement: Audio sync, Auto Volume Leveller, Treble and Bass Control
- Equalizer settings: Movie, Music, Voice, Stadium
- Total harmonic distortion:  $\leq 10\%$
- Speaker system output power: 120 W max/60 W RMS

## Loudspeakers

- Number of sound channels: 2.0
- Soundbar freq range: 60-20K Hz
- Soundbar impedance: 8 ohm
- Front drivers: 2 full range (L+R)

## Connectivity

- Bluetooth: Receiver
- Bluetooth version: 5.4
- Bluetooth profiles: A2DP, AVRCP
- EasyLink (HDMI-CEC)
- USB playback
- Audio in: 1 x 3.5 mm
- Optical input x 1
- HDMI content protection: HDCP 1.4
- HDMI Out (ARC) x 1
- DLNA Standard: No
- Multiple speaker connection: No
- Smart Home: None
- Wireless speaker connection: None

## Supported Audio Formats

- Bluetooth: SBC
- HDMI ARC: Dolby Digital, Dolby Digital plus, LPCM 2ch, DTS Digital Surround (DTS 5.1), DTS Virtual:X
- USB: MP3, WAV, FLAC
- Optical: Dolby Digital, LPCM 2ch

## Outer Carton

- Number of consumer packages: 2

## Convenience

- EasyLink (HDMI-CEC): Audio Return Channel,

- Automatic audio input mapping, One touch play, System standby
- Remote Control
- Night mode

## Compatibility

- Smartphone/tablet APP control

## Power

- Power LED indicator
- Main unit power supply: 100-240 V AC, 50/60 Hz
- Main unit standby power:  $< 0.5$  W
- Auto standby

## Packaging dimensions

- Height: 12.5 cm
- Packaging type: Box
- Type of shelf placement: Laying
- Width: 94 cm
- Depth: 15.5 cm
- Number of products included: 1
- Gross weight: 3.3 kg
- Net weight: 2.15 kg
- Tare weight: 1.15 kg

## Accessories

- Included accessories: 2 x AAA Batteries, Quick start guide, Remote Control, Wall mount bracket, Warranty Card

## Design


- Colour: Dark grey
- Wall mountable

## Dimensions

- Main Unit (W x H x D): 766 x 67.3 x 91 mm
- Main Unit Weight: 1.93 kg

## Video

- 3D pass-through: No

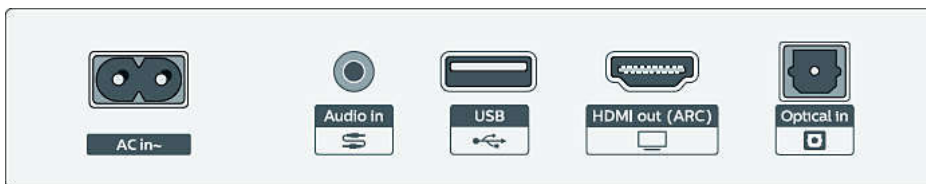

Issue date 2024-05-02

Version: 5.5.1

EAN: 48 95229 13676 2

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

