



Philips ShoqBox  
wireless portable speaker

**Bluetooth®**

Waterproof, shockproof  
Multi-colored lights



**SB500M**

## Extreme loudness

The street-tough Philips ShoqBox SB500 Bluetooth portable speaker is the ultimate sound machine for party-starters who bring the beat wherever they go! High-powered extreme loudness meets explosive bass, while LED lights pulse to the beat.

### Simple to use

- Audio input for easy connection to most devices
- Built-in microphone for hands-free calls
- Wireless music streaming via Bluetooth

### Shockingly big beats

- Explosive bass from twin speaker drivers and bass radiators
- High power 30W speaker output
- SHOQ mode button for extreme loudness

### Start the party anywhere

- Built-in rechargeable battery keeps on rocking
- Hit the lights! Multicolor LEDs pulse to the beat
- Outdoor toughness - rugged, shockproof, waterproof

# PHILIPS

wireless portable speaker  
Bluetooth® Waterproof, shockproof, Multi-colored lights

# Highlights

## Audio input

The Audio in connectivity allows direct playback of Audio in content from portable media players. Besides the benefit of enjoying your favorite music in the superior sound quality delivered by the audio system, the Audio in is also extremely convenient as all you have to do is to plug your portable MP3 player to the audio system.

## Bluetooth wireless



Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

## Built-in rechargeable battery

Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy your personal music without the fuss of entangled power cords and the inconvenient search for an electrical outlet. Enjoy great music with the freedom of portability now.

## Explosive bass



All that explosive bass comes from the two front-firing speaker drivers and twin bass

radiators at each end. The two large high excursion drivers improve bass impact, maximum loudness and overall clarity, while the twin bass radiators give extra bass boost and depth.

## Hands-free calls

With its built-in microphone, this speaker also works as a speaker phone. When a call comes in, the music is put on pause and you can talk via the speaker. Whether you're calling home, or calling your friends from a party - either way, it works great.

## High power

Built to bring big beats to the streets, the Philips ShoqBox SB500 pumps out huge sound from a portable Bluetooth speaker. Made with tough, high quality custom materials, ShoqBox delivers a ludicrously loud 30W total output power. With the integration of some next-level signal processing that monitor and adjusts the signal for the best sound at any volume, SB500 gives you enough dynamic, powerful, enormous sound to keep any street party rocking.


## Multicolor LED lights



Step into the light and feel the power of pounding beats and blazing lights. Uniquely engineered multicolor LEDs pulse to the rhythm of the beat, bringing your music to life and adding another dimension to the party. Or if you'd rather dance in the dark, that's fine too - just flip a switch and it's lights out.

SB500M/00

## Outdoor toughness

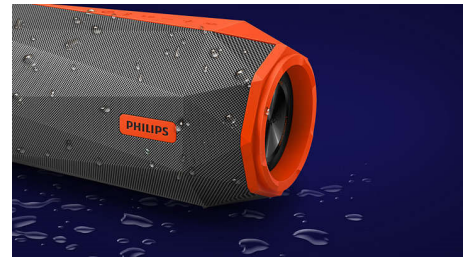

Waterproof, shockproof and party proof. The SB500 is built to survive. With an IPX7 rating, it can handle being held in water up to 1 meter deep for 30 minutes. So having it in the shower, or at the beach, is easy. The SB500 has also survived "torture chamber" testing, proving it can take a knocking and keep on rocking.

## SHOQ mode



Get ready for the SHOQ...click, boom! With just a push of a button, you'll trigger the integrated SHOQ mode to instantly max the sound levels. Blow the roof off the party and feel the rush of extreme loudness! Cut through the neighborhood noise without any dirty distortion - SB500 gives you quality sound and high-impact bass at any volume.

# Specifications

## Sound

- Output power (RMS): 30W
- Sound System: Stereo

## Design and finishing

- Color: Orange

## Loudspeakers

- Speaker drivers: 2 x 2"

## Connectivity

- Audio Connections: 3.5mm Line in
- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10M or 30FT

## Convenience

- Water resistance: IPX7
- Built-in microphone: for speaker conference
- Shock resistant

## Compatibility

- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
- iPod touch: 3rd generation or later

- iPad: iPad 1, iPad 2, iPad mini, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3, iPad mini 4, iPad Pro, iPad with Retina display, new iPad
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus, iPhone 6S, iPhone 6S Plus, iPhone 7, iPhone 7 Plus
- other Bluetooth-enabled device

## Power

- Battery type: Lithium-ion (built-in)
- Operating time on battery: 8 hour(s)

## Accessories

- Included accessories: USB cable for PC charging, World Wide Warranty leaflet, Quick install guide

## Dimensions

- Weight incl. Packaging: 1.23 kg
- Product dimensions (WxDxH): 230 x 105 x 101 mm
- Packaging dimensions (WxDxH): 260 x 150 x 130 mm
- Product weight: 1.01 kg



Issue date 2024-03-24

Version: 6.6.6

EAN: 48 95185 62779 3

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)