



Philips
Professional LCD TV

32" EasySuite
LCD
DVB-T MPEG 2/4

32HFL3232D

Perfectly reliable for your guests

Philips Hospitality LCD TV

With this modern and energy efficient Hospitality LCD TV, you will enjoy all the benefits of digital television. Your guests will enjoy a warm welcome and great viewing experience with this professional hotel TV.

Sustainable and safe

- Low power consumption
- Eco-friendly design and flame-retardant housing

Differentiating guest experience

- Volume limitation
- Additional headphone connection for personal listening
- Advanced EPG and channel list
- Enjoy photo and music playback via USB

Advanced hotel features and future proof

- Welcome message on screen display
- Programmable Switch On Channel
- Integrated Connectivity Panel
- One combined channel list for Analogue and Digital channels
- Full HD LCD display, with a 1920 x 1080p resolution
- Installation menu locking

PHILIPS

Highlights

Full HD LCD display 1920 x 1080p



The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future-proof as it supports 1080p signals from all sources, including the most recent sources such as Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colours.

Integrated Connectivity Panel

The Integrated Connectivity Panel allows your guests to seamlessly connect their personal devices to your TV without the need for an external Connectivity Panel.

Welcome message

A welcome greeting is displayed each time the TV set is switched on.

Volume limitation

This feature predefines the volume range within which the TV set is allowed to operate, preventing excessive volume adjustments and disturbance of neighbouring guests.

Installation menu locking

Prevents unauthorised access to installation and configuration settings, to ensure maximum guest convenience and avoid unnecessary reprogramming costs.


Low power consumption

Philips TVs are designed to minimise power consumption. This will not only reduce environmental impact but also lower operating costs.

Eco-friendly design

Sustainability is integral to the way Philips does business. Philips TVs are designed and produced according to our EcoDesign principles aimed at minimising overall environmental impact, through lower power consumption, removal of hazardous substances, lower weight, more efficient packaging and better recyclability. Philips TVs also have a special housing of flame-retardant material. Independent tests carried out by emergency fire services have shown that whereas TVs can sometimes intensify fires caused by external sources, Philips TVs will not contribute to a fire.

USB for photo and music playback

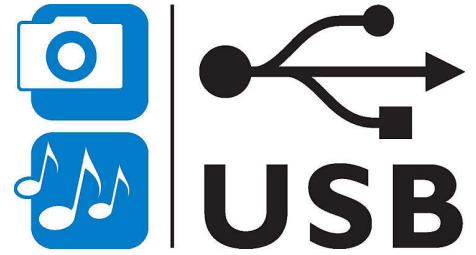

The USB connector allows access to jpeg photos, MP3 music and video files on most USB sticks (USB memory-class device). Plug the USB into the slot on the side of the TV and access the multimedia content using the easy on-screen content browser. You can now view and share your videos, photos and music.

Programmable Switch On Channel

Perfect for in-house advertising or information channels as it allows a predefined channel to be shown when the TV is turned on.

Headphone connection

This speaker system features an additional headphone connection. Connect your own headphones for a more personal listening experience whenever you want it.

Advanced EPG and channel list

The attractive EPG and channel list include intuitive buttons with clear guiding graphics to easily locate your favourite channels.

One combined channel list

One integrated channel list for digital and analogue channels. This allows the guest to flick seamlessly between Analogue and Digital channels.

Specifications

Picture/Display

- Aspect ratio: Widescreen
- Diagonal screen size (inch): 32 inch
- Diagonal screen size (metric): 81 cm
- Panel resolution: 1920 x 1080p
- Brightness: 400 cd/m²
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control, Colour Enhancement, Digital Crystal Clear, Digital Noise


- Reduction, Dynamic contrast enhancement, Sharpness Adjustment, 2D/3D noise reduction, 1080p 24/25/30 Hz processing, 1080p 50/60 Hz processing
- Display screen type: LCD Full HD W-UXGA Act. matrix
- Dynamic screen contrast: 100,000:1
- Response time (typical): 5 ms
- Viewing angle: 178° (H)/178° (V)

- Peak Luminance ratio: 74 %
- Screen enhancement: Anti-Reflection coated screen

Supported Display Resolution

- Computer formats: 640 x 480, 60 Hz, 800 x 600, 60 Hz, 1024 x 768, 60 Hz, 1280 x 720, 60 Hz, 1280 x 768, 60 Hz, 1280 x 1024, 60 Hz, 1360 x 768,

Rear connectors

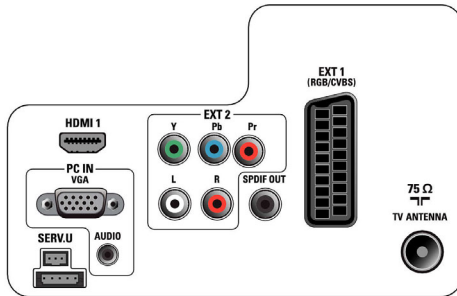

Side



Specifications

- 60 Hz
- Video formats: 480i, 60 Hz, 480p, 60 Hz, 576i, 50 Hz, 576p, 50 Hz, 720p, 50, 60 Hz, 1080i, 50, 60 Hz, 1080p, 24, 50, 60 Hz, 1080p, 24, 25, 30, 50, 60 Hz

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K, SECAM L/L', DVB COFDM 2K/8K
- Digital TV: DVB-T MPEG4
- Number of Pre-set Channels: 999
- Video Playback: NTSC, SECAM, PAL

Multimedia Applications

- Multimedia connections: USB
- Playback Formats: MP3, Slideshow files (.alb), JPEG Still pictures

Convenience

- Ease of Installation: Auto Programme Naming, Automatic Channel Install (ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, PLL Digital Tuning, Plug and Play, Advanced Hotel Mode, Cloning of TV settings via USB, Installation menu locking, Keyboard lock-out, Security menu access
- Ease of Use: Auto Volume Leveller (AVL), On-Screen Display, Side Control, 1 channel list analogue/digital, Graphical User Interface, Programme List
- Clock: Sleep Timer
- Comfort: Hotel Guest features, Sleep timer, Switch on channel, Volume limitation, Welcome message
- Screen Format Adjustments: 4:3, Auto Format, Super Zoom, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Widescreen
- Electronic Programme Guide: 8-day Electronic Programme Guide, Now + Next EPG
- Remote Control: TV, battery anti-theft protection, low battery detection
- Interactive hotel features: Block automatic channel update, Block over-the-air SW download
- Remote control type: 22AV1104B (RC6)
- Teletext: 1000-page Smart Text
- Other convenience: Kensington lock
- Firmware upgradeable: Firmware upgradeable via RF, Firmware upgradeable via USB
- Teletext enhancements: Fast text, Programme information Line

Healthcare

- Safety: Double isolation Class II
- Convenience: Headphone out

Sound

- Output power (RMS): 2 x 10 W

- Sound System: Mono, Nicam Stereo, Stereo
- Sound Enhancement: Auto Volume Leveller, Incredible Surround, Smart Sound, Treble and Bass Control

Loudspeakers

- Built-in speakers: 2

Connectivity

- Number of HDMI connections: 2
- Number of Scarts: 2
- EasyLink (HDMI-CEC): One touch play, System standby
- Front/Side connections: HDMI v1.3, CVBS in, Audio L/R in, Headphones Out, USB 2.0
- Ext 1 Scart: Audio L/R, RGB
- HDMI 1: HDMI v1.3
- Ext 2 Scart: Audio L/R, CVBS in
- Other connections: PC Audio in, PC-In VGA, S/PDIF out (coaxial), Common Interface
- Ext 3: YPbPr, Audio L/R in

Power

- Mains power: 220-240 V; 50 Hz
- Ambient temperature: 5°C to 35°C
- Standby power consumption: 0.23 W
- Power consumption (typical): 105 W
- Annual energy consumption: 123 kW h
- Presence of lead: Yes*
- Mercury content: 42 mg

Green Specifications

- Safety: Flame-retardant housing
- Low Power Standby
- SmartPower Eco

Accessories

- Included accessories: Tabletop stand, Power cord, Warranty Leaflet, Remote Control, Batteries for remote control
- Optional accessories: Set up remote 22AV8573/00, Wall mount (tilt) 22AV3200/10

Dimensions

- Set Width: 796 mm
- Set Height: 508.3 mm
- Set Depth: 93 mm
- Product weight: 8.3 kg
- Set width (with stand): 796 mm
- Set height (with stand): 556 mm
- Set depth (with stand): 220 mm
- Product weight (+stand): 9.4 kg
- Box width: 1026 mm
- Box height: 610 mm
- Box depth: 160 mm
- Weight incl. Packaging: 12.8 kg
- Wall-mount compatible: 200 x 200 mm



Issue date 2024-03-24

Version: 2.0.2

EAN: 87 12581 56540 4

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com