



Philips
LCD monitor

43 cm (17")
SXGA

170S5FS

affordable, space-saving display to do a lot more

Get more done with the Philips 170S5: Great, reliable, space saving display plus SmartManage for remote, LAN-based monitor management and low power consumption add up to smart, affordable display for smart businesses.

Outstanding front of screen performance

- Fast response time for great display of moving images
- SXGA 1280 x 1024 resolution for sharper display
- sRGB ensures color matching between display and printouts

Best total cost of ownership solution

- Power consumption below the industry average
- SmartManage compatibility enables LAN-based asset management
- Kensington anti-theft lock-ready for added security

Great convenience

- Embedded power supply eliminates external power adaptors
- Convenient, built in holder for notes, cards or photos
- VESA mounting pattern for easy wall mounting of display

PHILIPS

Highlights

SmartManage enabled

SmartManage is a system for monitoring, managing and checking status of display devices as well as delivering remote support to users who experience difficulties - all accomplished over a LAN.

Lower power consumption

Reduction of the electrical power required to operate a device.

Kensington lock compatible

Small apertures built into the display's frame for use with a locking device that secures a display to a fixed object for added protection against theft.

Fast response time




Response time measures signal reaction speed in milliseconds. On/off response time measures the time required for the screen to turn from completely white to completely

black and vice versa. Fast on/off response time improves display of text. Gray-to-gray response time measures the average time of transition between several sets of random gray levels - Lower numbers mean faster transitions. Faster is better because a fast response time eliminates visible image artifacts that could dampen your experience when viewing fast moving images or objects.

SXGA, 1280 x 1024 resolution

For graphics monitors, the screen resolution signifies the number of dots (pixels) on the entire screen. For example, a 1280-by-1024 pixel screen is capable of displaying 1280 distinct dots on each of 1024 lines, or about 1.3 million pixels.

sRGB ready

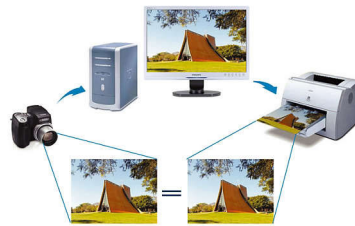

sRGB is an industry standard that ensures the best possible match between the colors

displayed on your screen and those in your printouts.

Embedded power supply

An embedded power supply is a power adaptor built into the body of a display device that replaces a bulky external power adaptor.

VESA mounting holes

A unified industry standard for wall mounting IT equipment set by the Video Electronics Standards Association.

FlexiHolder

FlexiHolder is a slim groove on the top of monitor that neatly and conveniently stores favorite photos, reminders, to-do lists or phone numbers in your line of sight.



Specifications

Connectivity

- Signal Input: VGA (Analog)

Picture/Display

- Panel Size: 17"/ 43 cm
- LCD panel type: 1280 x 1024 pixels, Anti-glare polarizer, RGB vertical stripe
- Pixel pitch: 0.264 x 0.264 mm
- Optimum resolution: 1280 x 1024 @ 60 Hz
- Brightness: 250 cd/m²
- Display colors: 16 M
- Contrast ratio (typical): 450:1
- Response time (typical): 16 ms
- Viewing angle: @ C/R > 5
- Viewing angle (horizontal): 160 degree
- Viewing angle (vertical): 140 degree
- Horizontal Scanning Frequency: 30 - 82 kHz
- Maximum Resolution: 1280 x 1024 @ 75 Hz
- Effective viewing area: 337.9 x 270.3 mm
- Factory Preset Modes: 15 modes
- Refresh Rate (V): 56 - 76 Hz
- sRGB
- User definable modes: 16 modes
- White Chromaticity, 6500K: x = 0.313 / y = 0.329
- White Chromaticity, 9300K: x = 0.283 / y = 0.297

Convenience

- Plug & Play Compatibility: DDC CI, sRGB, Windows 98/ME/2000/XP
- User convenience: On-screen Display, SmartManage
- Monitor Controls: Auto, Brightness Control, Left/

- Right, Menu (OK), Power On/Off, Up/Down
- Regulatory approvals: CE Mark, E2000, EMC, FCC-B, UL, CSA, NUTEK, Energy Star, SEMKO, TCO '99, TÜV/GS, TÜV Ergo, TCO '03
- OSD Languages: English, French, German, Italian, Simplified Chinese, Spanish
- Other convenience: Kensington lock
- Tilt: -5° to 25°
- VESA Mount: 100 x 100 mm

Power

- Power supply: Built-in
- Consumption (On mode): 30W (Typical)
- Power LED indicator: Operation - green, Stand by/ sleep - Amber
- Complies with: E2000, Energy Star, NUTEK
- Consumption (Off Mode): < 1 W

Dimensions

- Weight: 4.2 kg
- Temperature range (operation): 5°C to 40°C
- Temperature range (storage): -20°C to 60°C
- Relative humidity: 20% - 80%
- MTBF: 50,000 hrs
- Depth (with base): 200 mm
- Height (with base): 390 mm
- Width (with base): 375 mm

Accessories

- Included accessories: AC Power Cord, VGA cable
- User Manual
- Optional accessories: Super Ergo Base



Issue date 2024-03-24

Version: 4.0.6

EAN: 87 10895 82414 9

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com