


# PHILIPS



Professional TV

EasySuite

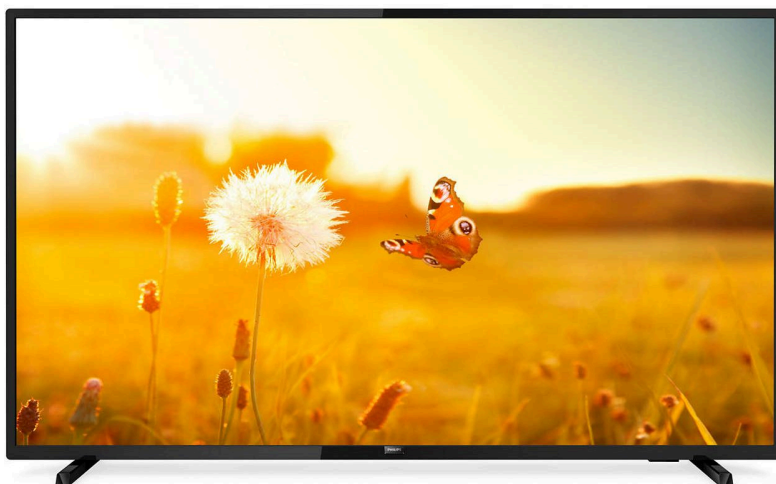

32HFL3014

## Take control

Powered by CMND

Show more with a budget-friendly standalone professional TV. The intuitive CMND solution makes it simple to deploy and manage connected displays. Benefit from simple, fast installation and an on-screen welcome page that's easy to program.

### Cost-effective solution

- 3 years warranty, extendable to 5 years
- Multilingual customer support

### Simple set up. **ADVANCED** performance

- Instant initial USB cloning. Rapidly configure Pro TVs
- MyChoice compatible. Built-in pay-to-view solution
- Mixed channel map to combine analogue and digital channels
- USB auto playback. Music, movies, and more
- CMND and Control: effortless maintenance of your TVs
- Be seen. Brand the TV's UI with your logo

### Sustainable and safe

- Low power consumption

# Highlights

## **CMND&Control**

CMND and Control allows for remote configuration and installation of your TVs from a central location, without the need to visit any rooms. Update and manage all your displays, with minimal effort, all without having to disturb your guests.

## **Built-in pay-to-view solution**

Offer pay-to-view content in any situation-from a complete pay-to-access-all-channels model to selected premium content. MyChoice is an integrated solution that allows viewers to access pay-per-view channels via a code or a card.

## **UI branding**

Your Philips Professional TV offers a clear, easy-to-navigate user interface (UI), which you can customize with your own branding. Easily add your logo or custom background to the menu to increase the visibility of your brand.

## **Instant initial USB cloning.**

Provides the ability to easily copy all programming and channel programming settings from one TV into other TV sets in less than a minute. The feature ensures uniformity between TV sets and significantly reduces installation time and costs.

## **Mixed channel map**

One integrated channel list for digital and analogue channels. This allows the guest to flick seamlessly between Analogue and Digital channels.

## **USB auto playback.**

Share the fun. Connect your USB memory-stick, digital camera, mp3 player or other multimedia device to the USB port on your TV to enjoy photos, videos and music with the easy to use onscreen content browser.

# Specifications

## Picture/Display

**Diagonal screen size (inch):** 32 inch

**Diagonal screen size (metric):** 80 cm

**Display:** LED HD TV, D-LED

**Panel resolution:** 1366 x 768p

**Brightness:** 250 cd/m<sup>2</sup>

**Viewing angle:** 178° (H) / 178° (V)

## Tuner/Reception/Transmission

**Digital TV:** DVB-T/T2/C, HEVC FHD (up to 1080p60)

**Video Playback:** NTSC, PAL, SECAM

**Analog TV:** PAL, SECAM

## Features

**Ease of use:** Picture Style, Sound Style, Picture Format, Independent volume control

**Digital services:** 8d EPG, Now&Next, MHEG, Teletext, Subtitles

**Local control:** Joystick

## Hospitality Features

**Hotel mode:** Joystick Control Lock, Menu lock, Installation Menu Lock, Volume limitation

**Prison mode:** high security mode,

TXT/MHEG/USB/EPG/Subtitle Lock

**Timer:** Sleep Timer, Wake Up Alarm, Wake Up On Channel, Wake up Sounds

**Switch On control:** Channel, Feature, Picture Style, Picture Format, Sound Style, Volume, Menu language

**Anti-Theft:** Battery Anti-theft Protection, Kensington Lock

**Power control:** Green/fast startup

**Your brand:** Welcome Logo, Customizable Home Screen

**Clock:** Glow-in-the-Dark RC button, On-screen Clock

**Cloning and Firmware update:** Instant Initial Cloning, Via USB/RF

**CMND&Control:** Remote Management over RF, TV Group management, Off-Line Settings Editor, Off-Line Channel Editor

**Control:** Block Automatic Channel Update

**Revenue generation:** MyChoice

**Languages:** Guest language control

**Remote Control:** Cable Strap Ready, Low Battery Detection, RC Battery Door Lock, Glow-in-the-Dark Clock button

**Channels:** Combined List, Off-Line Channel Editor

## Healthcare features

**Control:** Multi-Remote Control, Healthcare RC compatible

**Convenience:** Headphone out, Independent main speaker mute, Headphone Detection

**Safety:** Double isolation class II, Flame retardant

## Multimedia

**Video playback supported:** Formats:

H.264/MPEG4 AVC, MPEG1, MPEG2, MPEG4, WMV9/VC1, MP4, MPG, TS, WMV, HEVC, Containers: AVI, MKV

**Music formats supported:** MP3, AAC, WAV, WMA (v2 up to v9.2)

**Subtitle formats supported:** SRT, SMI, SSA SUB, TXT

**Picture formats supported:** BMP, JPG, PNG, GIF

**Supp. Video Resolution on USB:** up to

1920x1080p@60Hz

**Multimedia connections:** USB

## Audio

**Sound output Power:** 16 (2x8) W

**Speakers:** 2.0, Down Firing

**Sound Features:** AVL, Dynamic Bass, Incredible surround, Dolby MS10

## Power

**Mains power:** AC 220-240V; 50-60Hz

**Ambient temperature:** 0 °C to 40 °C

**Standby power consumption:** <0.3W

**Energy Label Class:** E

**Eu Energy Label power:** 28 W

**Power Saving Features:** Eco mode, Auto switch-off timer

**EPREL registration number:** 345104

## Accessories

**Included:** Edge Stand, 2x AAA batteries, Power Cord, Warranty Leaflet, Legal and Safety brochure, Remote Control 22AV1903A/12

**Optional:** Easy RC 22AV1601B/12, Healthcare RC 22AV1604B/12, Setup RC 22AV9574A/12

## Connectivity Side

**Common Interface Slot:** CI+ 1.3.2

**Headphone out:** Mini-Jack

**USB1:** USB 2.0

## Connectivity Rear

**Scart:** CVBS, RGB

**DVI audio in:** Mini-Jack

**Antenna:** IEC-75

**HDMI1:** ARC, HDMI 1.4

**Digital Audio out:** Optical

**VGA input:** 15 pin D-sub

**HDMI2:** HDMI 1.4

## Connectivity Enhancements

**EasyLink (HDMI CEC):** One touch play, System Standby, RC pass through, system audio control

**HDMI:** ARC (HDMI1)

**Scart:** Power on scart

## Design

**Colour:** Black

## Dimensions

**Set Width:** 732 mm

**Set Height:** 432 mm

**Set Depth:** 77 mm

**Product weight:** 4.6 kg

**Set width (with stand):** 732 mm

**Set height (with stand):** 455 mm

**Set depth (with stand):** 166 mm

**Product weight (+stand):** 4.7 kg

**Wall mount compatible:** 100 x 100 mm, M6

