



Philips  
wireless portable speaker

**Bluetooth®**  
Rechargeable battery  
2W



BT55A

## Big sound that fits in a fist

Live life with music streamed wirelessly from one compact and easy to carry speaker. Trendy colors help you pick one that fits your style and a built-in rechargeable battery keeps music pumping wherever and whenever you take it.

### **Impressive sound**

- Anti-clipping function for loud, distortion free music

### **Designed for grab and go**

- Built-in rechargeable battery for music playback anywhere


### **Simplicity in use**

- Wireless music streaming via Bluetooth

**PHILIPS**

# Highlights


## Anti-clipping function\_BT55

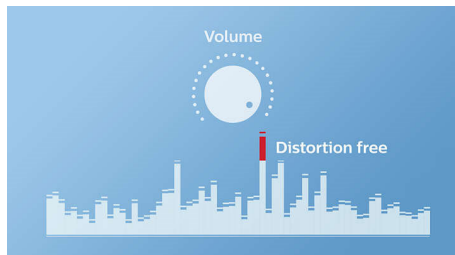

Anti-Clipping lets you play music louder and keeps it high quality, even when the battery is low. It accepts a range of input signals, from 300mV to 1000mV and keeps your speakers safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with

battery power, yet anti-clipping reduces peaks caused by low battery, keeping music distortion free.

## Built-in rechargeable battery

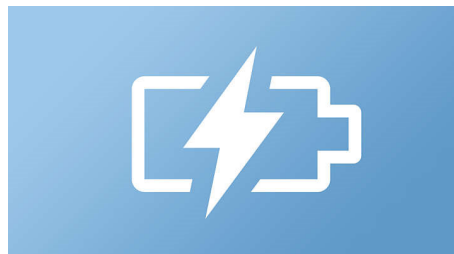

Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy your personal music without the fuss of entangled power cords and the inconvenient search for an electrical outlet. Enjoy great music with the freedom of portability now.

## Wireless music streaming\_BT55



Bluetooth is a wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

# Specifications

## Sound

- Output power (RMS): 2W
- Sound System: Mono

## Design and finishing

- Color: Blue

## Loudspeakers

- Speaker driver: 1 x 1.5" full range driver

## Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10M or 30FT
- USB charging

## Compatibility

- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
- iPod touch: 3rd generation or later
- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display, iPad 4, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3, iPad mini 4, iPad Pro

- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone 6 Plus, iPhone 6S, iPhone 6S Plus, iPhone 7, iPhone 7 Plus, iPhone SE
- other Bluetooth-enabled device

## Power

- Battery type: lithium polymer (built-in)
- Operating time on battery: 6 hour(s)

## Accessories

- Included accessories: USB cable for PC charging, Quick install guide

## Dimensions

- Weight incl. Packaging: 0.19 kg
- Product dimensions (WxDxH): 85 x 34 x 75.8 mm
- Packaging dimensions (WxDxH): 130 x 55 x 100 mm
- Product weight: 0.12 kg



Issue date 2024-03-24

Version: 2.0.1

EAN: 48 95185 63083 0

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)