



Philips
LCD monitor

107cm (42")
multimedia
Full HD

BDL4230ET

More audience interaction

with the touchscreen 42" LCD Display

Deliver vital information or marketing messages to your audience in startling clarity with the BDL4230ET display. And thanks to the interactive touchscreen, you can also engage your customer much closer than ever before.

Lower total cost of ownership

- SmartPower for energy saving
- Brightness automatically adjusts with ambient conditions
- Advanced anti image sticking function

Optimized for public viewing

- Full HD LCD display, 1920x1080p
- Enhanced zoom feature supports tiled matrix applications

Operational flexibility

- Built-in Touchscreen on separate glassplate
- Smart insert in the backcover to place a small pc
- Remote Management and Configuration via RS232

Sustainable and safe

- Complies with RoHS standards to care for the environment

PHILIPS

Highlights

Advanced anti image sticking

Static images left on-screen for extended periods of time may leave a "ghost image" or image sticking effect on LCD displays. Although image sticking in LCD displays is not permanent, you want to prevent this to happen, especially in locations where content is shown 24/7.

Automatic brightness control

The adjustment of display settings to correspond with ambient light without user intervention.

Built-in Touchscreen

A 5 wire resistive touchscreen is mounted on top of a sturdy glass plate that is separated from the LCD monitor screen. This way the product is more rugged because direct contact with the LCD panel is not possible.

Compliant with RoHS standards

Philips designs and produces display products in compliance with strict Restriction of Hazardous Substances (RoHS) standards that restrict lead and other toxic substances that can harm the environment.


Full HD LCD display 1920x1080p

This display has a resolution that is referred to as Full HD. The state-of-the-art LCD screen technology has the full high-definition widescreen resolution of 1080 progressive lines, each with 1920 pixels. This allows the best possible picture quality for HD input signals with up to 1080 lines. It produces brilliant flicker-free progressive scan pictures with optimum brightness and superb colors. This vibrant and sharp image will provide you with an enhanced viewing experience.

Remote Management:: RS232

Remote Management allows the user to control and adjust the displays remotely via the RS232 protocol. Using CEC commands, you are able to have full control over all the displays in your signage network at any time.

SmartPower

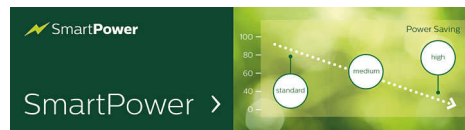

The backlight intensity can be controlled and pre-set by the system to reduce the power


consumption by up to 50%, which saves substantially on energy costs.

Smart Insert

Professional PC's are part of most public signage installations. Quite often they increase the overall depth to the display and cause a lot of cable clutter. So we have designed this display with Smart insert in the back cover which is ideal for the integration of a professional small form factor PC. On top of that, the cable management system offers a great solution to keep your cables neat and professional looking.

Zoom function for tiled matrix

The internal zoom function enables easy implementation of a video wall matrix, without the need for expensive external equipment. Capable of a vidiwall of 25 displays by dividing up to 5 displays each horizontally and vertically.



Specifications

Picture/Display

- Diagonal screen size (metric): 107 cm
- Diagonal screen size (inch): 42 inch
- Aspect ratio: 16:9
- Panel resolution: 1920x1080p
- Pixel pitch: 0.48mm x 0.48mm
- Optimum resolution: 1920 x 1080 @ 60Hz
- Brightness: 500 cd/m²
- Display colors: 1.06 billion colors
- Contrast ratio (typical): 1400:1
- Response time (typical): 5 ms
- Viewing angle (horizontal): 178 degree
- Viewing angle (vertical): 178 degree
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, Motion compens. deinterlacing, Progressive scan, 3D MA deinterlacing, Dynamic contrast enhancement

Connectivity

- PC: VGA-in D-Sub 15HD, VGA-out D-Sub 15HD, DVI-D x1, RS232 D-Sub9, RS232 D-sub9 output, 3.5 mm PC audio input x1
- AV input: HDMI x1, Composite (BNC) x1, S-video x1, Audio (L/R) x2
- AV output: Composite (BNC) x1, Audio (L/R) x1
- Other connections: AC-out, External loudspeaker connector, Component RCA x1

Convenience

- Placement: Portrait, Landscape
- Picture in picture: PIP
- Tiled Matrix: Up to 5x5
- Screen saving functions: ixel Shift, Low Brightness
- Keyboard control: Hidden, Lockable
- Monitor Controls: Touch screen
- Remote control signal: Lockable
- Signal loop through: RS232, VGA
- Ease of installation: AC Out, Carrying Handles, Smart Insert
- Energy saving functions: Ambient light sensor, Smart Power
- Picture performance: Advanced color control
- Network controllable: RS232
- Packaging: Reusable box

Sound

- Built-in speakers: 2 x 12 W (8 Ohm)

Power

- Mains power: 90-264V AC, 50/60Hz

- Consumption (On mode): Typ 165W
- Standby power consumption: <1W

Supported Display Resolution

- Computer formats: 640 x 480, 60, 67, 72, 75Hz, 800 x 600, 56, 60, 72, 75Hz, 1024 x 768, 60Hz, 1280 x 768, 60Hz, 1280 x 800, 60Hz, 1280 x 1024, 60Hz, 1360 x 768, 60Hz, 1366 x 768, 60Hz, 1440 x 900, 60Hz, 1600 x 1200, 60Hz, 1920 x 1080, 60Hz, 1920 x 1200, 60Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 576p, 50Hz, 576i, 50Hz, 720p, 50, 60Hz, 1080i, 50, 60Hz, 1080p, 50, 60Hz

Dimensions

- Bezel thickness: 30 mm/1.2"
- Smart Insert mount: 160 x 300 x 55 mm
- Set height (with stand): 666 mm
- Smart insert in inch (WxHxD): 6.3 x 11.81 x 2.17"
- Set height (with stand) (inch): 26.2 inch
- Set Width: 993 mm
- Product weight: 27 kg
- Set depth (with stand): 319 mm
- Set Height: 586 mm
- Set Depth: 120 mm
- Set depth (with stand) (inch): 12.6 inch
- Set Width (inch): 39.1 inch
- Set Height (inch): 23.1 inch
- Wall Mount: 200 x 200 mm/200 x 400 mm
- Set Depth (inch): 4.7 inch
- Product weight (lb): 59.4 lb

Operating conditions

- Temperature range (operation): 0 - 40 °C
- MTBF: 60,000 hour(s)
- Relative humidity: 5 - 90 %

Accessories

- Included accessories: Remote Control, Batteries for remote control, AC Power Cord, VGA cable, User manual on CD-ROM, Quick start guide
- Stand: BM05211

Miscellaneous

- Bezel: Metallic Anthracite
- On-Screen Display Languages: English, French, German, Italian, Polish, Turkish, Russian, Simplified Chinese
- Warranty: Europe/North America 3 years
- Regulatory approvals: CE, FCC, Class B, CCC, RoHS



Issue date 2024-03-25

Version: 1.0.2

EAN: 87 12581 61882 7

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com