



Philips 6000 series  
Over-ear wireless  
headphones

### Noise Canceling Pro

Over-ear fit  
Natural sound. Dynamic Bass  
Up to 70 hours play time



TAH6509BK

## Immerse freely

Work or play, flow through your days with these wireless noise-canceling headphones! Adaptive noise cancellation and a comfy over-ear fit keep you immersed. You get rich, detailed sound, and there's a low lag setting for games and movies.

### Over-ear wireless headphones. Immerse in style

- Immerse with Noise Canceling Pro
- Light, comfy, foldable—and stylish!
- Great sound even at low volume with Dynamic Bass
- Powerful 40 mm neodymium drivers

### Always ready for work and play

- Up to 70 hours play time (45 with noise canceling on)
- A quick 5-minute charge provides 3 hours of playback
- Clear calls. They'll hear what you're saying
- Convenient control buttons on right ear cup
- Solid Bluetooth multipoint connection

### Rich natural sound and handy companion app

- Philips Headphones app. Personalize settings and controls
- Warm, detailed, natural. Philips sound signature


# PHILIPS

Over-ear wireless headphones

Noise Canceling Pro Over-ear fit, Natural sound. Dynamic Bass, Up to 70 hours play time

## Highlights

### Noise Canceling Pro

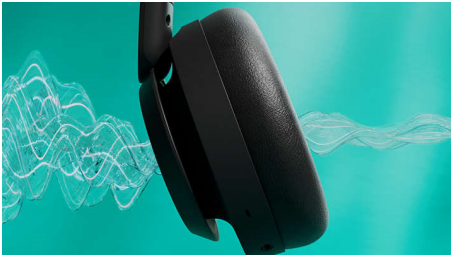


Adaptive noise cancellation quickly reacts to your surroundings to suppress external noise, including wind, in real time. If you want to hear what's going on around you, Awareness Mode lets outside sounds back in. Quick Awareness enhances voices, so you can have a conversation without removing your headphones.

### Lightweight and comfy




The round ear-cup mounts and sleek frame give these over-ear headphones a distinctive sense of style. Memory foam ear-cup cushions keep you comfortable through long listening sessions and the ear cups fold flat and swivel inward for easy storage in your pocket or bag.

### Great sound. Dynamic Bass

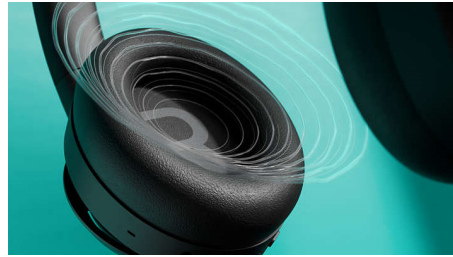

You'll enjoy rich sound from the 40 mm drivers, and good passive noise isolation from the over-ear fit. To enjoy the full power of your favorite basslines without turning up the volume, simply activate Dynamic Bass via the multifunction button or the Philips Headphones app.

### Up to 70 hrs (with ANC off)

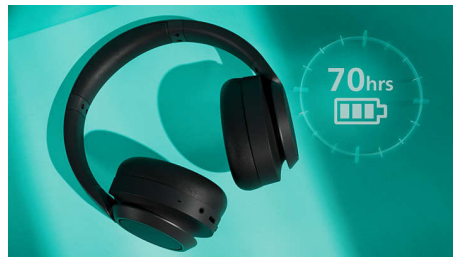

You get well over a day of listening even if you have noise cancellation turned on. A full charge takes just 2 hours via USB-C, and a quick 5-minute charge gives you an extra 3 hours. You can also use a USB-C cable to plug into any smart device with a USB-C port.

### Clear calls



Your voice will come through clearly when you're on a call. A dedicated mic picks up the

TAH6509BK/00

sound of your voice while a noise-reduction algorithm quietsens some of the background noise from the world around you.

### Philips Headphones app



Ever forget to turn off your headphones? Set a timer on our companion app and they'll power down automatically. The app also lets you manage connected devices or turn adaptive noise cancellation off and take control of the levels yourself. Plus, there's a range of preset sound styles: Voice is ideal for podcasts!

### Convenient control buttons

Handy control buttons let you toggle between noise cancellation modes or activate Quick Awareness. The multi-function button lets you manage calls, control playback, and activate Dynamic Bass. If you're gaming or watching videos, you can trigger the low latency setting via the power button.

### Solid Bluetooth connection

Advanced Bluetooth connectivity gives you a more stable connection for seamless streaming, and you can connect to two Bluetooth devices (iOS or Android) at the same time. Enjoy that playlist or listen uninterrupted to your favorite podcast without annoying dips in the sound.

### Philips sound signature

Music to podcasts, these wireless headphones make the most of the sounds you love! You'll enjoy warm, detailed sound with rich bass from the large drivers, which are tuned to the Philips sound signature.

# Specifications

## Sound

- Acoustic system: Closed
- Frequency range: 20 - 40,000 Hz
- Impedance: 32 Ohm
- Sensitivity: 98 dB (1K Hz, -10dBFS)
- Speaker diameter: 40 mm
- Maximum power input: 20 mW
- Driver type: Dynamic
- Hi-Res Audio

## Connectivity

- Bluetooth version: 5.3
- Bluetooth profiles: A2DP, AVRCP, HFP
- Maximum range: Up to 10 m
- Multipoint connection
- Supported codec: SBC
- Headphone socket: 2.5 mm
- USB audio support

## Outer Carton

- Length: 23.60 cm
- Number of consumer packagings: 3
- Width: 23.00 cm
- Gross weight: 1.900 kg
- Height: 30.50 cm
- GTIN: 1 48 95229 13968 5
- Nett weight: 0.91 kg
- Tare weight: 0.99 kg

## Convenience

- Philips Headphones app support
- Firmware updates possible
- Type of controls: Button

## Power

- Rechargeable
- Number of batteries: 1
- Charging time: 2 hour(s)
- Music play time (ANC on): 45 hour(s)
- Music play time (ANC off): 70 hour(s)
- Fast charging time: 5 mins for 3 hrs
- Battery weight (Total): 12.4 g
- Battery capacity(Headphones): 600 mAh
- Battery type(Headphones): Lithium Polymer (built-in)

## Packaging dimensions

- Height: 22.4 cm

- Packaging type: Carton
- Type of shelf placement: hanging
- Width: 6.7 cm
- Depth: 26.7 cm
- Number of products included: 1
- EAN: 48 95229 13968 8
- Gross weight: 0.521 kg
- Nett weight: 0.302 kg
- Tare weight: 0.219 kg

## Product dimensions

- Height: 21 cm
- Width: 19 cm
- Depth: 5.8 cm
- Weight: 0.265 kg

## Accessories

- Audio cable: 3.5-3.5mm stereo cable, L=1.2m
- Quick Start Guide
- Charging cable: USB-C cable, 200 mm

## Design

- Color: Black
- Wearing style: Headband
- Foldable design: Flat / In-ward
- Ear coupling material: Synthetic leather
- Ear fitting: Over-ear
- Earcup type: Closed-back

## Telecommunication

- Microphone for call: 1 mic

## UPC

- UPC: 8 40063 20346 4

## ANC features

- ANC technology: Hybrid, ANC Pro
- Awareness mode
- Adaptive ANC
- Microphone for ANC: 2 mic
- ANC (Active Noise Canceling)

## Voice assistant

- Voice assistant compatible: Apple Siri, Google Assistant
- Voice assistant activation: Press Multi-Function button
- Voice assistant support



Issue date 2024-10-25

Version: 4.4.1

EAN: 48 95229 13968 8

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)