



Philips
wireless portable speaker

Bluetooth®
Rechargeable battery
2W

BT50GX

Big sound that fits in a fist

Live life with music streamed wirelessly from one compact, round and easy to carry speaker. Bright colors help you pick one that fits your style and a built-in rechargeable battery keeps music pumping wherever and whenever you take it.

Simplicity in use

- Audio-in for easy connection to almost any electronic device
- Wireless music streaming via Bluetooth

Impressive sound

- Advanced audio performance with a compact design
- Anti-clipping function for loud, distortion free music

Designed for grab and go


- Built-in rechargeable battery for music playback anywhere

PHILIPS

wireless portable speaker
Bluetooth® Rechargeable battery, 2W


Highlights

Wireless music streaming

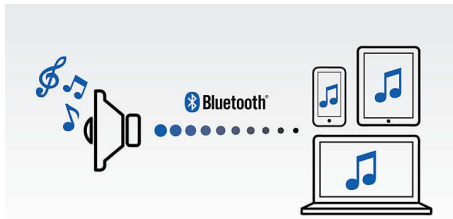

Bluetooth is a short range wireless communication technology that is both robust and energy-efficient. The technology allows easy wireless connection to iPod/iPhone/iPad or other Bluetooth devices, such as smartphones, tablets or even laptops. So you can enjoy your favorite music, sound from video or game wireless on this speaker easily.

Anti-clipping function

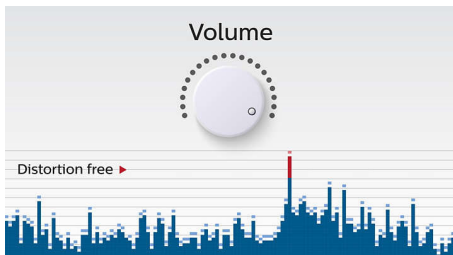

Anti-Clipping lets you play music louder and keeps it high quality, even when the battery is

low. It accepts a range of input signals, from 300mV to 1000mV and keeps your speakers safe from damage by distortion. This built-in function monitors the musical signal as it goes through the amplifier and keeps peaks within the amplifier's range, preventing the audio distortion caused by clipping without affecting loudness. A portable speaker's ability to reproduce musical peaks decreases along with battery power, yet anti-clipping reduces peaks caused by low battery, keeping music distortion free.


Audio-in



Audio-in for easy connection to almost any electronic device

BT50GX/78

Built-in rechargeable battery

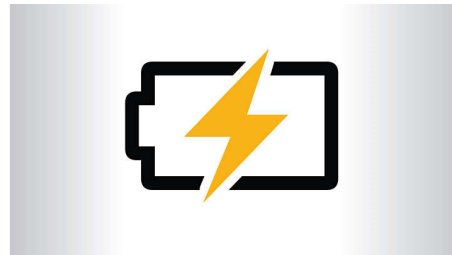

Play music out loud - anytime, anywhere. The built-in rechargeable battery lets you enjoy your personal music without the fuss of entangled power cords and the inconvenient search for an electrical outlet. Enjoy great music with the freedom of portability now.

Advanced audio performance

Advanced audio performance with a compact design

Specifications

Sound

- Output power (RMS): 2W
- Sound System: Mono

Design and finishing

- Color: Grey

Loudspeakers

- Speaker driver: 1 x 1.5"

Connectivity

- Bluetooth profiles: A2DP, AVRCP, HFP
- Bluetooth range: Line of sight, 10M or 30FT
- Audio in (3.5mm)
- USB charging

Outer Carton

- Length: 20.8 cm
- Number of consumer packagings: 4
- Width: 18 cm
- Gross weight: 1 kg
- Height: 16.6 cm
- GTIN: 1 48 95185 61220 8
- Nett weight: 0.592 kg
- Tare weight: 0.408 kg

Compatibility

- Android tablets & smartphones: with Android 2.1 and Bluetooth 2.1 or above
- iPod touch: 3rd generation or later
- iPad: iPad 1, iPad 2, new iPad, iPad mini, iPad with Retina display, iPad Air, iPad Air 2, iPad mini 2, iPad mini 3
- iPhone: iPhone 3, iPhone 3GS, iPhone 4, iPhone 4S, iPhone 5, iPhone 5C, iPhone 5S, iPhone 6, iPhone

6 Plus

- other Bluetooth-enabled device
- work with: Bluetooth 4.0 or below

Power

- Battery type: lithium polymer (built-in)
- Operating time on battery: 6 hour(s)

Packaging dimensions

- Height: 14 cm
- Packaging type: Carton
- Type of shelf placement: Laying
- Width: 8.1 cm
- Depth: 9.5 cm
- Number of products included: 1
- EAN: 48 95185 61220 1
- Gross weight: 0.2 kg
- Nett weight: 0.148 kg
- Tare weight: 0.052 kg

Product dimensions

- Height: 7.6 cm
- Width: 6.05 cm
- Depth: 6.05 cm
- Weight: 0.09 kg

Accessories

- Included accessories: USB cable for PC charging, World Wide Warranty leaflet, Quick install guide

Dimensions

- Product dimensions (WxDxH): 6.1 x 6.1 x 7.6 cm
- Weight incl. Packaging: 0.2 kg
- Packaging dimensions (WxDxH): 8.1 x 9.5 x 14 cm
- Product weight: 0.09 kg



Issue date 2024-03-25

Version: 1.0.3

EAN: 48 95185 61220 1

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com