



Philips
LCD monitor

38 cm (15")
XGA

150S6FG

performance and convenience maximize your budget

This slim, compact 150S6 pumps up productivity with great performance and convenience while business-friendly features like SmartManage deliver the best total cost of ownership and lead-free design safeguards our environment.

Outstanding front of screen performance

- 16ms On/off response time: Better text and graphics display
- XGA 1024x768 resolution for sharper display
- sRGB ensures color matching between display and printouts

Best total cost of ownership solution

- Power consumption below the industry average
- Environmentally responsible Energy Star partner
- SmartManage compatibility enables LAN-based asset management
- TCO'03 guarantees the highest safety and ergonomic standards
- Kensington anti-theft lock-ready for added security

Great convenience

- Easy, user friendly plug-and-play installation
- Embedded power supply eliminates external power adaptors
- Convenient, built in holder for notes, cards or photos

PHILIPS

Highlights

SmartManage enabled

SmartManage is a system for monitoring, managing and checking status of display devices as well as delivering remote support to users who experience difficulties - all accomplished over a LAN.

Lower power consumption

Reduction of the electrical power required to operate a device.

TCO '03 compliance

A TCO (Swedish Confederation of Professional Employees) standard even more stringent than MPR-II for safety and ergonomics, especially concerning alternating electric fields (AEF).

Energy Star partner

A manufacturer in compliance with power conservation requirements set forth by the Environmental Protection Agency of the U.S. government.

Kensington lock compatible

Small apertures built into the display's frame for use with a locking device that secures a display to a fixed object for added protection against theft.

16ms response time (On-Off)


On-Off response time is the period required for a liquid crystal cell to go from active (black) to

inactive (white) and back to active (black) again. It is measured in milliseconds. Faster is better: Lower response time means faster transitions and, therefore, results in fewer visible image artifacts in the display of transition of text and graphics. On-Off response time is a more important measure in the display of business content like documents, graphs and photos.

XGA, 1024 x 768 resolution

For graphics monitors, the screen resolution signifies the number of dots (pixels) on the entire screen. For example, a 1024-by-768 pixel screen is capable of displaying 1024 distinct dots on each of 768 lines, or about 786 thousand pixels. XGA provides resolutions of 640 by 480 or 1024 by 768 pixels.

sRGB ready

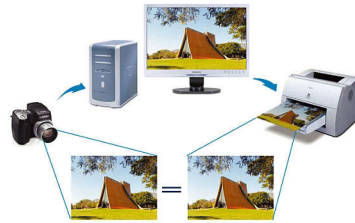

sRGB is an industry standard that ensures the best possible match between the colors displayed on your screen and those in your printouts.

Embedded power supply

An embedded power supply is a power adaptor built into the body of a display device that replaces a bulky external power adaptor.

Easy plug-and-play

Plug-and-play is a peripheral connectivity standard. A plug and play display device can be connected to a PC and operate without requiring user intervention to adjust complicated settings.

FlexiHolder

FlexiHolder is a slim groove on the top of monitor that neatly and conveniently stores favorite photos, reminders, to-do lists or phone numbers in your line of sight.



Specifications

Connectivity

- Signal Input: VGA (Analog)
- Sync Input: Composite Sync, Separate Sync, Sync on Green

Picture/Display

- Panel Size: 15"/ 38 cm
- LCD panel type: 1024 x 768 pixels, Anti-glare polarizer, RGB vertical stripe
- Pixel pitch: 0.297 x 0.297 mm
- Optimum resolution: 1024 x 768 @ 60 Hz
- Brightness (nits): 250 nit
- Display colors: 16.2 M
- Contrast ratio (typical): 450:1
- Response time (typical): 16 ms
- Viewing angle: @ C/R > 5
- Viewing angle (horizontal): 160 degree
- Viewing angle (vertical): 140 degree
- Horizontal Scanning Frequency: 30 - 63 kHz
- Vertical Scanning Frequency: 56 - 76 Hz
- Maximum Resolution: 1024 x 768 @ 75 Hz
- Effective viewing area: 304.1 x 228.1 mm
- Factory Preset Modes: 15 modes
- sRGB
- User definable modes: 50 modes
- Video Dot Rate: 80 MHz
- White Chromaticity, 6500K: $x = 0.313$ / $y = 0.329$
- White Chromaticity, 9300K: $x = 0.283$ / $y = 0.297$

Convenience

- Plug & Play Compatibility: DDC/CI, sRGB, Windows 98/ME/2000/XP
- User convenience: On-screen Display, SmartManage enabled

- Monitor Controls: Auto, Brightness Control, Left/Right, Menu (OK), Power On/Off, Up/Down
- Regulatory approvals: CE Mark, E2000, EMC, Energy Star, FCC-B, UL, CSA, SEMKO, TCO '03, TÜV/GS, TÜV Ergo
- OSD Languages: English, French, German, Italian, Simplified Chinese, Spanish
- Other convenience: Kensington lock compatible, FlexiHolder
- Tilt: -5° to 25°
- VESA Mount: 100 x 100 mm

Power

- Power supply: Built-in, 90-264 VAC, 50/60 Hz
- Consumption (On mode): 17W (Typical)
- Power LED indicator: Operation - green, Stand by/sleep - Amber
- Complies with: E2000, Energy Star, NUTEK
- Consumption (Off Mode): < 1 W

Dimensions

- Weight: 2.7 kg
- Temperature range (operation): 5°C to 40°C
- Temperature range (storage): -20°C to 60°C
- Relative humidity: 20% - 80%
- MTBF: 50,000 hrs
- Depth (with base): 180 mm
- Height (with base): 344 mm
- Width (with base): 342 mm

Accessories

- Included accessories: AC Power Cord, VGA cable
- User Manual



Issue date 2024-03-25

Version: 2.0.6

UPC: 0 37849 95951 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com