



Philips LED  
4K Ambilight TV

164 cm (65") Ambilight TV

Pixel Precise Ultra HD  
Titan OS smart platform  
Dolby Atmos sound



65PUS8609

## 4K Ambilight TV

Bright picture. Fast gaming.

Get more from your entertainment with this bright and brilliant 4K Ambilight TV! An ultra-sharp and vibrant picture, immersive Ambilight and realistic Dolby Atmos sound will draw you deeper into the content you love—and gaming's blazing.

### **Sustainable materials and Alexa voice control.**

- Remote made from recycled plastic. Responsible packaging.
- Easily connect to smart home networks and voice assistants.
- Compatible with voice assistants.

### **4K LED Ambilight TV. Super-sharp and immersive.**

- Immerse yourself in what you love. Ambilight TV.
- Vibrant viewing with a bright, ultra-sharp picture.
- Find it easily. TITAN OS.

### **Cinematic sound. Epic gaming.**

- Dolby Atmos for cinematic sound.
- Great for gaming. VRR and low input lag on any console.
- 60 Hz native refresh rate. 120 Hz Ultra Motion Clarity.

# PHILIPS

# Highlights

## Ambilight TV



Ambilight TVs are the only TVs with integrated LED lights on the back that react to what you watch, immersing you in a halo of colourful light. This changes everything: your TV seems bigger, and you'll be drawn deeper into your favourite sports, films, music and games.

## Bright, ultra-sharp picture



Love everything you watch on this bright 4K (UHD) LED Ambilight TV. The Philips Pixel Precise Ultra HD engine optimises picture quality to deliver ultra-sharp images, rich colours and smooth motion. You get the best possible viewing experience every time.

## TITAN OS smart platform



Finding what you love is quick and easy with our TITAN OS smart TV platform. Enjoying a series? You can continue watching straight from the home screen. If you're looking for something new, you can browse categories like action or drama and see suggestions from the top streaming services—all in one place.

## Dolby Atmos®



Dolby Atmos pulls you in deeper by placing sound effects in the space around and above you. Whether it's spaceships flying overhead or quiet footsteps sneaking up from behind, you'll feel like you're right in the middle of the action.

## Great for gaming

Can't wait to play? Your 60 Hz Ambilight TV with HDMI 2.1 supports fast gameplay, and its Ultra Motion Clarity mode gives a sharper, smoother picture. When you turn on your

console, a low-input-lag setting is automatically activated, and Ambilight's gaming mode makes the thrills feel even bigger.

## Sustainable materials 8609

With its slim stand and virtually bezel-free screen, this Ambilight TV looks great — and you can use Ambilight for instant mood lighting when not watching anything. The TV remote is made from recycled plastic, our packaging uses FSC-certified recycled cardboard and the inserts are printed on recycled paper.

## Seamless control

Seamless compatibility with Matter and Control4 means you can easily integrate this 4K LED TV into your existing smart home network. To control the TV with your voice, you can also press the Alexa button on the TV remote or ask Google Assistant\* via Google Assistant enabled devices.

## AI voice control



You get a choice of voice assistants! Push the Alexa button on your remote and use your voice to find films and shows, get recommendations, control compatible smart home devices and more. Or, ask Google Assistant\* to control the TV via Google Assistant-enabled devices.

# Specifications

## Ambilight

- Ambilight Features: Wall colour adaptive, Lounge light mode, Ambilight Music, AmbiSleep, Sunrise Alarm, Ambilight FTI Animation
- Ambilight Version: 3 sided

## Picture/Display

- Diagonal screen size (inch): 65 inch
- Diagonal screen size (metric): 164 cm
- Display: 4K Ultra HD LED
- Panel resolution: 3840 x 2160
- Picture engine: Pixel Precise Ultra HD

## Display input resolution

- Resolution-Refresh rate: 576 p - 50 Hz, 640 x 480 - 60 Hz, 720 p - 50 Hz, 60 Hz, 1920 x 1080p - 24 Hz, 25 Hz, 30 Hz, 50 Hz, 60Hz, 100Hz, 120Hz (only in DLG/HSR mode), 2560x1440-60Hz, 100Hz, 120Hz (only in DLG/HSR mode), 3840 x 2160p - 24/25/30/50/60 Hz

## Tuner/Reception/Transmission

- Digital TV: DVB-T/T2/T2-HD/C/S/S2
- TV Programme guide\*: 8-day Electronic Programme Guide
- Signal strength indication
- Teletext: 1000 page Hypertext
- HEVC support

## Smart TV

- SmartTV apps\*: Netflix, YouTube, Amazon Prime Video, TITAN channel, NFT app\*, STB Controller App
- OS: TITAN OS
- Memory size (Flash)\*: 8 GB

## Smart TV Features

- User Interaction: Screen mirroring
- Interactive TV: HbbTV
- Voice assistant\*: Amazon Alexa Built-in
- Smart Home experience: Works with Amazon Alexa, Works with Google assistant, MATTER, Control4

## Multimedia Applications

- Video Playback Formats: AVI, MKV, HEVC, H.264/ MPEG-4 AVC, MPEG1, MPEG2, MPEG4, VP9, HEVC (H.265), AV1
- Music Playback Formats: MP3, WAV, AAC, FLAC

- Subtitles Formats Support: SRT, SMI, SSA, SUB, ASS, TXT
- Picture Playback Formats: JPEG, GIF, PNG, BMP, HEIF

## Sound

- Output power (RMS): 20 W
- Speaker configuration: 2 x 10 W full-range speakers
- Codec: Dolby Digital, Dolby Atmos®, DTS:X
- Sound Enhancement: Dolby Bass Enhancement, Clear Dialogue, A.I. Sound, A.I. EQ, Dolby Volume Leveller, Night Mode, Sound Personalisation

## Connectivity

- Number of HDMI connections: 3
- HDMI features: 4K, Audio Return Channel
- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby, One touch play
- Number of USBs: 2
- Wireless connection: Wi-Fi 802.11ac, 2 x 2, Dual band, Bluetooth 5.2
- HDCP 2.3: Yes on all HDMI
- HDMI ARC: Yes on HDMI1
- HDMI 2.1 features: eARC on HDMI 1, eARC/VRR/ ALLM supported
- EasyLink 2.0: HDMI-CEC for Philips TV/SB, External setting via TV UI

## Supported HDMI video features

- Gaming: ALLM, HDMI VRR
- HDR: HLG, HDR10, HDR10+ Compatible

## EU Energy card

- EPREL registration numbers: 1927832
- Energy class for SDR: F
- On mode power demand for SDR: 101 kWh/ 1000h
- Energy class for HDR: G
- On mode power demand for HDR: 197 kWh/ 1000h
- Off mode power consumption: n.a
- Networked standby mode: 2.0 W
- Panel technology used: LED LCD

## Power

- Mains power: AC 220 - 240 V 50/60 Hz
- Standby power consumption: less than 0.5 W

## Accessories

- Included accessories: Remote Control, 2 x AAA Batteries, Tabletop stand, Power cord, Quick Use Guide, Legal and safety brochure

## Design


- Colours of TV: Satin chrome bezel
- Stand design: Satin chrome stand

## Dimensions


- Distance between 2 stands: 380 mm
- Wall mount dimensions: 300 x 300 mm
- TV without stand (W x H x D): 1451 x 747 x 85 mm
- TV with stand (W x H x D): 1451 x 905 x 302 mm
- Package carton (W x H x D): 1600 x 995 x 170 mm
- Weight of TV without stand: 21.7 kg
- Weight of TV with stand: 25.1 kg
- Weight incl. packaging: 30.4 kg

## Connections

### Side

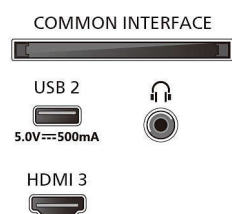

### Bottom

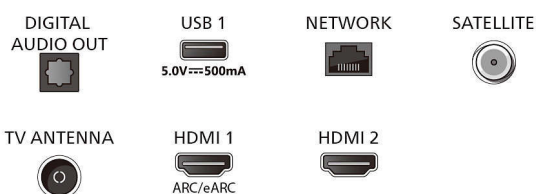

Issue date 2024-10-08

Version: 6.6.1

EAN: 87 18863 04088 1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.

\* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up-to-date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.

\* Smart TV app availability varies by TV model and country. For more details, please visit: [www.philips.com/smarttv](http://www.philips.com/smarttv)

\* Philips TV Remote app and related functionalities vary by TV model, operator and country, as well as smart device model and OS. For more details, please visit: [www.philips.com/TVRemoteapp](http://www.philips.com/TVRemoteapp)

\* EPG and actual visibility (up to 8 days) is country- and operator-dependent.

\* Netflix subscription required. Subject to terms on <https://www.netflix.com>

\* Amazon Prime is available in selected languages and countries.

\* Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates. Amazon Alexa is available in selected languages and countries.

\* Over-the-top media services button on the remote control will be different in each country. Please refer to the actual product in the box.

\* Google Assistant is available in different languages and countries specific to product types.

\* HBO Max app service will be available by August 2024.

\* Matter/Control4: this feature will become available in 2024 via a software update.