

PHILIPS



Face

OneBlade 360

Trim, edge and shave

360 Blade Blade

Stubble combs (1, 3, 5 mm)



QP2724/23

Trim, edge and shave any length of hair effortlessly

Designed to cut hair, not skin

The new OneBlade 360 trims, edges and shaves any length of hair more effortlessly. Easily shave & trim even the most difficult to reach areas with fewer* passes. Forget about using multiple steps and tools. OneBlade does it all.

Easy to use

- Long lasting battery
- Fully waterproof
- Create precise edges and sharp lines
- Charge anytime, anywhere
- Blade that doesn't fade easily

Comfortable shave

- Shave it off
- Innovative 360 Blade

Sharp edges


- Edge it up

Even trim

- 3 click-on stubble combs (1, 3, 5 mm)
- Unique OneBlade Technology


Highlights

Unique OneBlade Technology

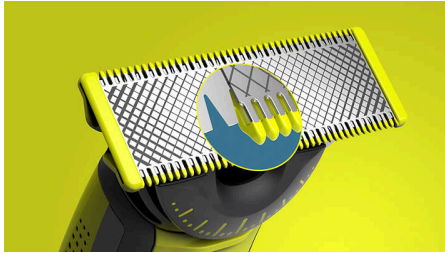

Philips OneBlade has a revolutionary technology designed for facial grooming. It can shave any length of hair. Its dual protection system – a glide coating combined with rounded tips – makes shaving easier and comfortable. Its shaving technology features a fast-moving cutter (12000x per min) so it's efficient - even on longer hairs.

Innovative 360 Blade

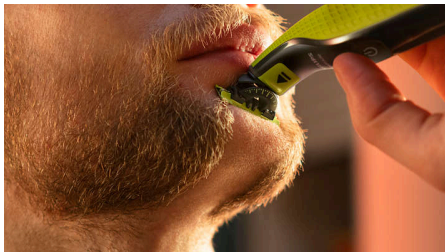

The innovative 360 Blade can flex in all directions to adjust to the curves of your face. The design enables constant skin contact and control. Easily trim and shave hard-to-reach areas — with just a few strokes and great comfort.

Trim away




Trim your beard to a precision stubble length with one of the 3 included stubble combs. 1 mm for a 5 o'clock shadow, 3 mm for a tight trim and 5 mm for long stubble.

Edge it up




Create precise edges with the dual-sided blade. You can shave in either direction to get great visibility and see every hair that you're cutting. Line up your style in seconds!

Shave it off

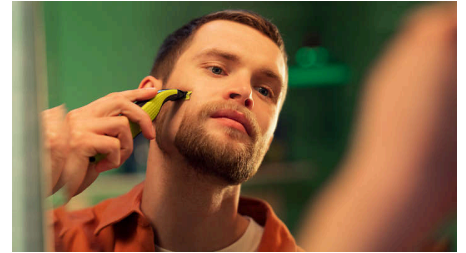


OneBlade doesn't shave as close as traditional blade - so your skin stays comfortable. Go against the grain and shave off any length of hair easily.

Dual-sided blade

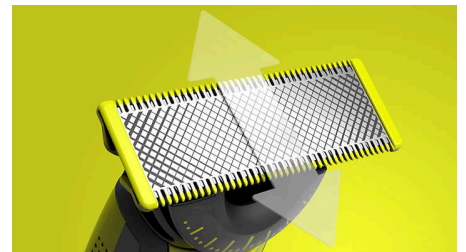

OneBlade follows the contours of your face, allowing you to easily and comfortably trim and shave all areas. Use the dual-sided blade to style your edges and create clean lines by moving the blade in any direction.


USB-A charging

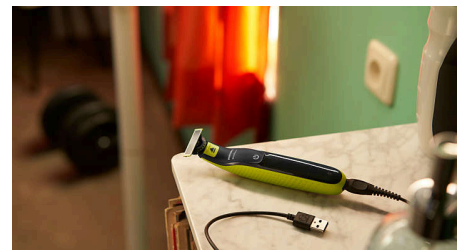

Can be charged at home or on the road, perfect for your daily routine and for travel.

Highlights

Blade that doesn't fade easily

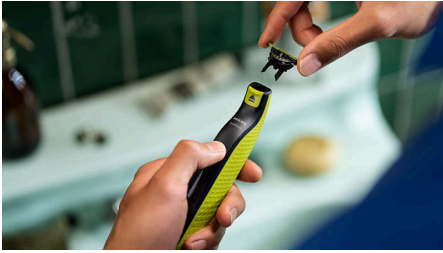


Durable stainless-steel blade that lasts up to 4 months of use* to keep that fresh feel. When the replacement indicator - eject icon - appears on the blade, the blade performance may no longer be optimal. It is time to consider changing the blade for the best shaving experience

Wet and dry



OneBlade is fully waterproof (IPX7), so it is easy to clean: just rinse it under the tap. You can shave wet or dry, even in the shower - whichever you prefer. No shaving foam needed.

Long lasting battery

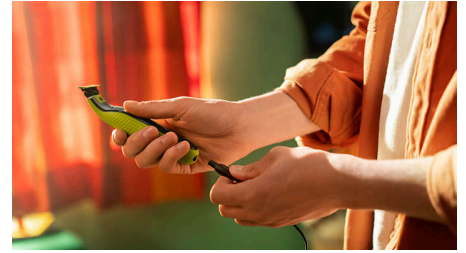

Rechargeable Ni-MH battery delivers 45 minutes of constant shaving power after an 8 hour charge.

Specifications

Trimming and shaving performance

Shaving system: Contour-following technology, Dual protection system, 360 Blade

Trimming system: Contour-following technology, 360 Blade

Accessories

Comb: 3 stubble combs (1, 3, 5 mm)

Maintenance: Protection cap

Power

Charging: 8 hours full charge

Battery type: Ni-MH

Run time: 45 minutes

Automatic voltage: 5 V

Max power consumption: 1 W

Adapter type: USB-A

Design

Handle: Ergonomic grip and handling

Colour: Lime green, charcoal grey

Service

Replacement head: Replace every 4 months**, QP210, QP220, QP230, QP610, QP620, QP410, QP420

2 year warranty: 2-year warranty on the handle

Ease of use

Charging: Rechargeable, USB-A Charging (5 V⁻ / ≥1 A)

Wet & Dry

USB-A charging: Power adapter not included

