

PHILIPS

Full HD LCD display

Monitor

1000 series

24 (23.8" / 60.5 cm diag.)

1920 x 1080 (Full HD)

24E1N1300AE



Better your productivity with USB-C connectivity

This monitor is made to keep you connected. With features like USB-C 3.2 with power delivery, users can charge their linked device and work seamlessly, all with one cable. In addition, the singular cable makes for a clean workspace.

Features designed for you

- EasySelect menu toggle key for quick on-screen menu access
- EasyRead mode for a paper-like reading experience
- Height-adjustable for better ergonomic comfort
- Cable management reduces cable clutter for neat workspace
- LowBlue mode and Flicker-free easy-on-the eyes viewing

Easy to experience

- Connect your notebook with one USB-C cable
- Built-in stereo speakers for multimedia
- VESA mount for convenience
- HDMI ensures universal digital connectivity

Superb Picture Quality

- 16:9 Full HD display for crisp detailed images
- IPS LED wide view technology for image and color accuracy
- 1ms (MPRT) fast response for crisp image and smooth gameplay

Monitor

Full HD LCD display

24E1N1300AE/00

Highlights

USB-C connection




This Philips display features a USB type-C connector with power delivery. With intelligent and flexible power management, you can power charge your compatible device directly. Its slim, reversible USB-C allows for easy, one-cable connection. You can watch high resolution video and transfer data at a super-speed, while powering up and re-charging your compatible device at the same time.

1ms MPRT fast response



MPRT (motion picture response time) is more intuitive way to describe the response time, which directly refers the duration from seeing blurry noise to clean and crisp images. Philips gaming monitor with 1 ms MPRT effectively eliminates smearing and motion blur, delivers shaper and precise visuals to enhance gaming experience. Best choice for playing thrilling and twitch-sensitive games.

IPS technology

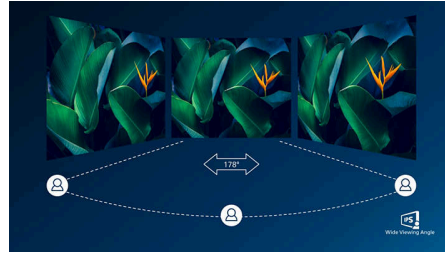

IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

16:9 Full HD display



Picture quality matters. Regular displays deliver quality, but you expect more. This display features enhanced Full HD 1920 x 1080 resolution. With Full HD for crisp detail paired with high brightness, incredible contrast and realistic colors expect a true to life picture.

Built-in stereo speakers



A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

LowBlue Mode & Flicker-free



Our LowBlue Mode and Flicker-free technology have been developed to reduce eye strain and fatigue often caused by long hours in front of a monitor.

EasyRead mode



EasyRead mode for a paper-like reading experience



USB-C



Fast Response
1ms MPRT



Wide Viewing
Angle



Built-in Speaker



LowBlue Mode



EasyRead



Height
Adjustment


Monitor

Full HD LCD display

24E1N1300AE/00

Highlights

Height-adjustable Ergo Base

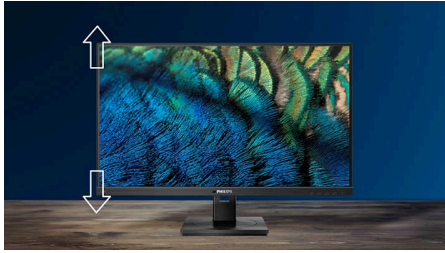

The height-adjustable Ergo Base is a 'people friendly' Philips monitor base that not only tilts, but is also height adjustable, so that each user can adjust the monitor to their personal preference for maximum viewing comfort and efficiency.

Cable management



Cable management is an intimate design that maintains tidy workspace by organizing cables and wires required for the operation of a display device.

EasySelect Menu Toggle Key



The discreetly placed EasySelect Menu Toggle Key allows you to make quick and easy adjustments to monitor settings in the On-Screen Display menu.



USB-C



Fast Response
1ms MPRT



Wide Viewing
Angle



Built-in Speaker



LowBlue Mode

Monitor

Full HD LCD display

24E1N1300AE/00

Specifications

Picture/Display

Panel Size: 23.8 inch / 60.5 cm
Aspect ratio: 16:9
LCD panel type: IPS technology
Backlight type: W-LED system
Pixel pitch: 0.2745 x 0.2745 mm
Brightness: 300 cd/m²
Display colors: 16.7 M
Contrast ratio (typical): 1500:1
SmartContrast: Mega Infinity DCR
Response time (typical): 4 ms (Gray to Gray)*
Viewing angle: 178° (H) / 178° (V), @ C/R > 10
Picture enhancement: SmartImage game
Maximum resolution: 1920 x 1080 @ 100 Hz
Effective viewing area: 527.04 (H) x 296.46 (V)
Scanning Frequency: 30 KHz - 140 KHz (H) / 48 Hz - 100 Hz (V)
sRGB
SoftBlue
Flicker-free
Pixel Density: 92.56 PPI
LowBlue Mode
Display Screen Coating: Anti-Glare, 3H, Haze 25%
MPRT: 1 ms
EasyRead
Adaptive sync

Connectivity

Signal Input: HDMI 1.4 x 1, USB-C x 1 (DisplayPort Alt mode, data and Power Delivery)
Sync Input: Separate Sync
Audio (In/Out): Audio out
HDCP: HDCP 1.4 (HDMI / USB-C)
USB Hub: USB 3.2 Gen 1, USB-A downstream x 2 (with 1 fast charge B.C 1.2)

Power Delivery

Max power delivery: USB-C: Up to 65W (5V/3A, 7V/3A, 9V/3A, 10V/3A, 12V/3A, 15V/3A, 20V/3.25A)
Version: USB PD version 3.0

Convenience

Built-in Speakers: 2 W x 2
Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 11 / 10
User convenience: Power On/Off, Menu, Volume, Input, SmartImage Game
OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek,

Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
Other convenience: Kensington lock, VESA mount (100x100mm)

Stand

Height adjustment: 100 mm
Tilt: -5/20 degree

Power

Power supply: 100-240VAC, 50-60Hz, Internal
Off mode: 0.3 W (typ.)
On mode: 18.3 W (typ.)
Standby mode: 0.5 W (typ.)
Power LED indicator: Operation - White, Standby mode- White (blinking)
Energy Label Class: E

Dimensions

Packaging in mm (WxHxD): 730 x 391 x 141 mm
Product without stand (mm): 542 x 316 x 45 mm
Product with stand(max height): 542 x 442 x 187 mm

Weight

Product with packaging (kg): 6.97 kg
Product with stand (kg): 4.68 kg
Product without stand (kg): 3.06 kg

Operating conditions

Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
Temperature range (operation): 0 to 40 °C
MTBF: 50,000 hrs (excluding backlight) hour(s)
Relative humidity: 20%-80 %
Temperature range (storage): -20 to 60 °C

Sustainability

Environmental and energy: RoHS
Recyclable packaging material: 100 %
Specific Substances: Mercury free, PVC / BFR free housing

Compliance and standards

Regulatory Approvals: CB, CE Mark, TUV/ISO9241-307, TUV-BAUART, EAC, FCC, ICES-003, VCCI, PSE, EnergyStar 8.0

Cabinet

Color: Black
Finish: Textured

What's in the box?

Cables: HDMI cable, USB-C to USB-C cable, Power cable
Monitor with stand
User Documentation



- * The maximum resolution works for HDMI input only.
- * For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.
- * Response time value equal to SmartResponse
- * MPRT is gaming-optimized mode. Turn on MPRT may cause noticeable screen flickering. It is recommended to turn off when you are not using the gaming function.
- * For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode
- * For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.
- * "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
- * MPRT is to adjust brightness for blur reduction, so cannot adjust brightness while MPRT is turned on. To reduce motion blur, LED backlight will strobe synchronously with screen refresh, which may cause noticeable brightness change.
- * The products and accessories listed on this leaflet may differ by country and region.
- * The monitor may look different from feature images.